

### **IMPORTANT NOTICE**

This manual is intended primarily for use by professional bicycle mechanics. Users who are not professionally trained for bicycle assembly should not attempt to install the components

If any part of the information on the manual is unclear to you, do not proceed with the installation. Instead, contact your dealer or a local bicycle shop for their assistance.

Make sure to read all instruction manuals included with the product.

You can find all the manuals and specs on our website http://ingrid.bike

## **MAINTENANCE**

This product is not guaranteed against natural wear and deterioration from normal use and aging.

!!! PERIODICALLY CHECK THE TIGHTENING. INCORRECT TIGHTENING CAN CAUSE MALFUNCTIONS OR BREAKAGE

MOSCONI s.r.l. | via la Villa 28 zona artigianale Ghilardino 61034 Fossombrone, PU

Rev. 1.1 2021/11


# **BOTTOM BRACKET SPECIFICATION**

# OUR CRANKSET SYSTEM IS DESIGNED WITH AN ASIMMETRY OF +2.5 mm ON DRIVE SIDE


The common **MTB** frames/BB cups are **asymmetrical** and that provides the necessary configuration


The common **ROAD** frames/BB cups are **symmetrical**. In this case add 2.5 mm on the drive side


VERIFY THAT THE FRAME/BB CUPS COMPLIES WITH THE REQUIRED DIMENSIONS FOR OUR SPINDLES

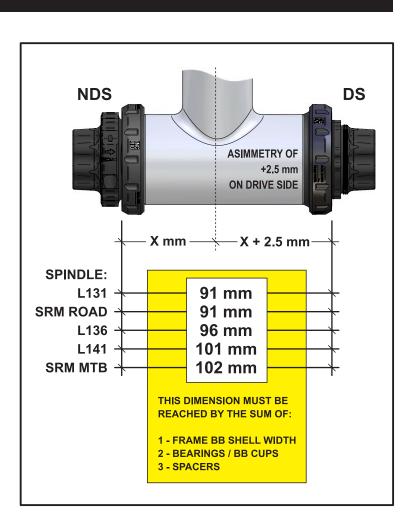




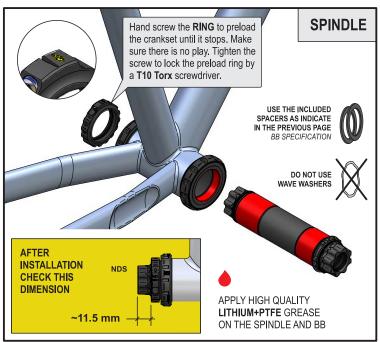

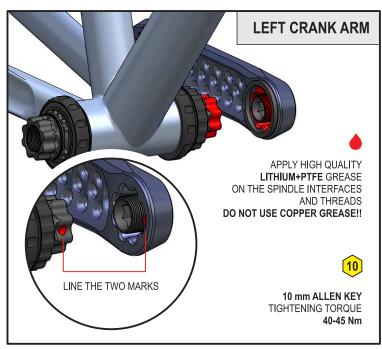

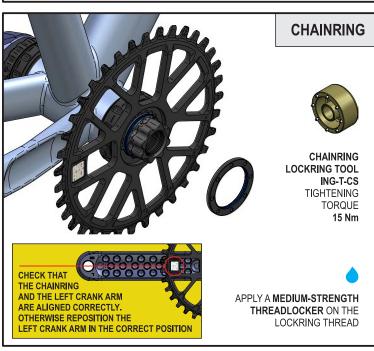

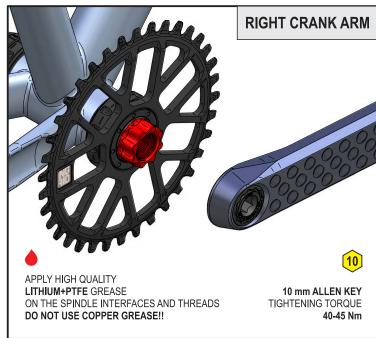

# **CRANCKSET DISASSEMBLY**

# I!!! DO NOT REMOVE THE SELF-EXTRACTOR RING To remove the cranks use only a 10 mm allen key. Before unscrewing CLEAN and LUBRICATE the space between the screw and the self-extractor ring 10 mm ALLEN KEY

# **SELF-EXTRACTOR RING and SCREW REPLACE**

