



NOBLE & PRICE

CORDLESS KETTLE

1.2Lt Capacity

1000-1350W

220-240V 50/60HZ



INSTRUCTION MANUAL

ITEM CODE: 9000-10

## PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE FIRST USE

We believe that safe performance is the priority in any consumer product. We ask that any electrical appliance that you use be operated sensibly with due care and attention placed on the following important operating instructions.

Carefully read all instructions before operating the Noble & Price Cordless Kettle for the first time and save this instruction manual for future reference.

### Packaging Contents

The following items are included:

- 1 x Cordless Kettle
- 1 x Kettle Power Base
- 1 x Instruction Manual

### Safety Instructions

- This kettle had been designed to boil drinking water only. Under no circumstances should this product be used to boil any other liquids or food items.
- Position the kettle on a flat, stable surface away from the edge to avoid injury or damage to the kettle.
- Only use the power base supplied.
- Do not immerse the kettle in any liquid.
- Avoid coming in contact with steam from the spout or when opening the lid as scalding can occur.
- Do not touch hot surfaces. Use the handle for lifting and carrying the kettle.
- Do not place anything on top of the lid or release the lid while the water is boiling.
- Use caution when pouring water from the kettle, as boiling water and steam will scald. Do not pour the water too quickly.
- Do not remove the kettle from the power base during operation. Ensure the kettle has switched off after the water has boiled or reached the selected temperature before removing the kettle from the power base.
- If the supplied power cord becomes damaged, the kettle should not be used, and the cord must be replaced.
- Ensure the water level is between the MIN and the MAX marks. If the kettle is overfilled, boiling water may be ejected.
- When using the kettle, avoid spillage of water on the power base and connector as this may cause damage to the kettle.
- Do not use chemicals, stainless steel scourers, abrasive cleaners or alkaline cleaning agents to clean the kettle. Use a soft cloth and mild detergent.
- Ensure the kettle has cooled down before attempting to clean the filter and kettle body.

## Controls

1. Lid Button
2. Lid
3. Spout Filter
4. Spout
5. Body
6. Power Base
7. Power Indicator Light
8. On/Off Switch
9. Handle
10. Water Gauge

## Not Shown

Dry Boil Protection Shut Off ensures that the kettle automatically switches off if the kettle boils empty.

## Operations

### **Before First Use**

- Remove any packaging material before using your kettle for the first time.
- It is recommended before the first use to fill the kettle to the MAX level with cold tap water, bring it to a boil and then discard the water and repeat.
- The kettle will only operate when positioned on the power base with the On/Off Switch in the ON position. The kettle will automatically switch off once the water has boiled.

### **General Operations**

1. Press the Lid Button to open the lid and fill with cold tap water. Do not exceed the MAX level.
2. Securely close the lid.
3. Plug the power cord into your power outlet.
4. Connect the kettle to the power base.
5. Push the On/Off Switch down. The Power Indicator Light turns ON and the water will begin to boil.
6. When the water has boiled, the On/Off Switch will flick back up to the position, and the Power Indicator Light will turn OFF.

**Note:** The boiling process can be interrupted at any time by manually flicking up the On/Off Switch.



## Dry Boil Protection Shut Off Function

The kettle is fitted with a safety device, which protects against overheating should the kettle be operated with insufficient water. If this occurs, the kettle will stop boiling and automatically switch OFF. Should this occur, switch the kettle OFF at your power outlet and unplug. Allow the kettle to cool before refilling. Remove the kettle from the power base and add water. Return the kettle to the power base. The safety device will automatically reset.

## Care & Cleaning

- Always turn the kettle off and disconnect the power base from your power outlet before cleaning.
- Use warm water with a mild detergent and a soft cloth to clean the exterior of the kettle. Do not immerse the kettle in any liquid.
- Dry thoroughly after cleaning.
- The spout filter slides out for ease of cleaning.
- Periodically, clean the inside of the appliance using a mild descaling solution.

## Warranty

Our appliances come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure. Where a failure does not amount to a significant fault, Tomkin Australia is entitled to choose between providing you with a repair, replacement or refund.

The manufacturer warrants the Cordless Kettle to be free from defects in materials for 12 months from the date of purchase.

To claim under this warranty, please contact Tomkin Australia with proof of purchase.

In the event that you need assistance with your Noble & Price Cordless Kettle, please contact us on the below:

### Distributed By:

TOMKIN AUSTRALIA  
39 Wentworth Street  
Greenacre  
New South Wales  
2190 Australia

☎ +61 2 8665 4675

📷 @tomkin.au

📺 @tomkin.au

TOMKIN.COM.AU

