



NOBLE & PRICE

LUXURY  
HAIR DRYER  
1800-2000W  
220-240V 50/60HZ



INSTRUCTION MANUAL

ITEM CODE: 9000-14

MADE IN CHINA

## PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE FIRST USE

We believe that safe performance is the priority in any consumer product. We ask that any electrical appliance that you use be operated sensibly with due care and attention placed on the following important operating instructions.

Carefully read all instructions before operating the Noble & Price Luxury Hair Dryer for the first time and save this instruction manual for future reference.

### **Packaging Contents**

The following items are included:

- 1 x Luxury Hair Dryer
- 1 x Concentrator Nozzle
- 1 x Instruction Manual

### **Safety Instructions**

- Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water - keep this product dry.
- When this appliance is used in a bathroom, unplug it after use, given the proximity of water hazards, even when the hair dryer is switched off.
- Before using, always ensure that the voltage marked on the hair dryer is the same as your local power voltage.
- Do not operate this hair dryer or disconnect from the power outlet with wet hands.
- Never use this hair dryer at the same time as styling products such as aerosols sprays.
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place this hair dryer on any heat sensitive surfaces or near flammable materials or objects.
- Keep the power cord away from heated surfaces.  
Never block the air intake vent of the hair dryer or place it on a soft surface such as a bed or couch where the air openings may be blocked.
- Keep the air intake vent free of lint & other debris.  
Do not cover this hair dryer with anything when it is switched on or hot.  
To avoid an electric shock, do not drop or insert any object into an opening
- in this hair dryer.
- Do not put the hair dryer down while it is operating.

## Controls

1. Concentrator Nozzle
2. Cool Shot Button
3. Speed Button
4. On/Off Button
5. Hanging Loop
6. Air Intake Vent



## **Warning**

- If this appliance falls into water, unplug it immediately.  
**DO NOT REACH INTO THE WATER**
- Do not wrap the power cord tightly around the appliance when storing. This causes undue strain on the power cord and protective guard. Over time, this will damage the power cord resulting in unsafe condition to the user.

## Operations

### **Before First Use**

- Remove any packaging material before using the toaster for the first time.

### **General Operation**

- Unwind the power cord and plug it into the power outlet, then switch the hair dryer on.
- Set to high heat and high-speed settings (II) for initial drying
- Switch to the low settings (I) as the hair dries and for styling as well as scrunch drying.
- To finish, use the cold shot to cool the hair and set the style in place rapidly.
- Ensure the On/Off button is set to the off (O) position when you have finished.
- Allow the hair dryer to cool before storing away.

### **Important**

Hair that has been heavily bleached or chemically treated should only use the low heat setting on this product. We recommend consulting your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

### **Caution**

Take care not to direct the airflow directly onto the skin (e.g. scalp, neck, ears, face, etc.) as hot air from the dryers can, particularly if held too close, cause discomfort or even burn.

## Care & Cleaning

- Blocked or clogged air intake vents will cause the hair dryer to overheat.
- This air intake vent should be cleaned regularly - to help maintain optimum performance & prevent overheating.
- Unplug the hair dryer & allow it to cool completely before cleaning or storing.
- Holding the handle of your dryer firmly, twist & pull the air intake vent cover down to remove.
- Using a soft brush or lint free cloth, clean any hair & other debris that may build up in the vent.
- Replace the air intake vent cover by twisting & pushing back into position.

## Warranty


Our appliances come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure. Where a failure does not amount to a significant fault, Tomkin Australia is entitled to choose between providing you with a repair, replacement or refund.

The manufacturer warrants the Luxury Hair Dryer to be free from defects in materials for 12 months from the date of purchase. To claim under this warranty, please contact Tomkin Australia with proof of purchase.

In the event that you need assistance with your Noble & Price Luxury Hair Dryer, please contact us on the below:

### Distributed By:

TOMKIN AUSTRALIA  
39 Wentworth Street  
Greenacre  
New South Wales  
2190 Australia

 +61 2 8665 4675

 @tomkin.au

 @tomkin.au

TOMKIN.COM.AU

