



UNIVERSAL BATTERY

WWW.CRITICALTATTOO.COM

  @CRITICALTATTOOSUPPLY

UNIVERSAL BATTERY

THE CRITICAL UNIVERSAL BATTERY IS THE FIRST WIRELESS BATTERY PACK THAT UTILIZES THE CRITICAL CORE™ - CREATED FOR CONSISTENT POWER AND EXTREME ACCURACY.



VOLTAGE RANGE: 4.5V - 13V
WEIGHT: 2.00Z
LENGTH: 2.47"
DIAMETER: 1.26"

ENHANCED WITH CRITICAL CORE



PRECISE VOLTAGE

NO "SAG" IN VOLTAGE DROP DURING ANY PART OF THE TATTOO SESSION



LOW BATTERY INDICATOR

AT 5% CHARGE LIFE, A LOW BATTERY ICON IS DISPLAYED ALONG WITH A BEEP FOR 5 SECONDS AT EVERY MINUTE



OUTPUT INDICATOR

FLASHING DECIMAL POINT INFORMS USER DEVICE IS IN USE



TEMPERATURE PROTECTION

POWER SHUTS OFF IF TEMPERATURE EVER REACHES AT UNSAFE LEVELS (176°F)



CRITICAL CORE

SMART & ACCURATE



TYPE C

VERSATILE CHARGE CONNECTION

EASY CHARGE CONNECTION WITH ANY USB-C CONNECTION

HOW TO USE:

- 1 ATTACH CRITICAL UNIVERSAL BATTERY TO TATTOO MACHINE
- 2 **TURN DEVICE ON BY HOLDING POWER BUTTON 3 SECONDS**
- 3 SELECT DESIRED VOLTAGE BY USING +/- BUTTON
- 4 START DEVICE BY CLICKING POWER BUTTON 1 TIME
- 5 STOP DEVICE BY CLICKING POWER BUTTON 1 TIME
- 6 TURN DEVICE OFF BY HOLDING POWER BUTTON 3 SECONDS

OLED SCREEN

 
WHEN CHARGING:

- SCREEN WILL REMAIN ON WHILE CHARGING, WILL DISPLAY BATTERY STATUS
- SCREEN WILL IDLE ONCE FULLY CHARGED AFTER 60 SECONDS

CHARGING

- USE USB TYPE C CONNECTOR
- UNIVERSAL BATTERY DOCK (SOLD SEPARATELY)

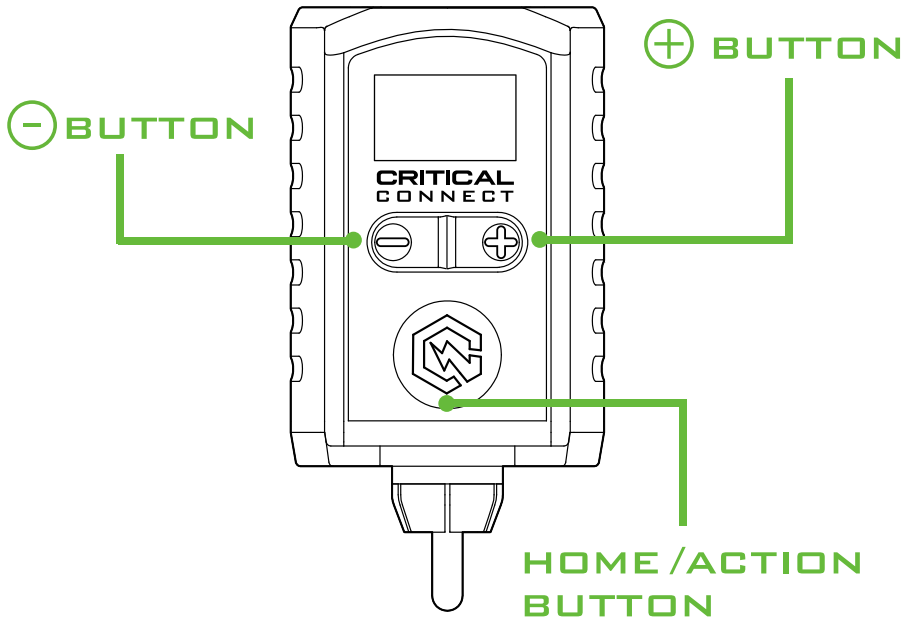 



HOW TO PAIR BATTERY TO FOOT SWITCH



REQUIRED FOR SET UP

- CRITICAL CONNECT BATTERY (UP TO 4)
- 1 X CRITICAL CONNECT FOOT SWITCH

CRITICAL CONNECT TO ACCESS BLUETOOTH MENU

- 1 HOLD BOTH  AND  BUTTONS FOR 3 SECONDS TO ENTER BLUETOOTH MENU
- 2 CLICK  1 TIME FOR SEARCH MODE
- 3 QUICKLY TAP FOOT SWITCH (SOLD SEPARATELY) 1 TIME TO PAIR WITH BATTERY PACK
- 4 CLICK  BUTTON 1 TIME TO RETURN TO HOME MENU

BLUETOOTH MENU SYMBOLS



NOT PAIRED

CLICK  ONCE TO SEARCH FOR CRITICAL CONNECT FOOT SWITCH



SEARCH MODE

TAP FOOT SWITCH ONCE DURING SEARCH MODE TO CONNECT



DEVICE NOT FOUND

IF NO DEVICE IS PAIRED OR FOUND AFTER 30 SECONDS



 
BLUETOOTH PAIRED

SUCCESSFULLY PAIRED

CLICK  ONCE TO UNPAIR DEVICE

HOME SCREEN

BATTERY TO FOOT SWITCH

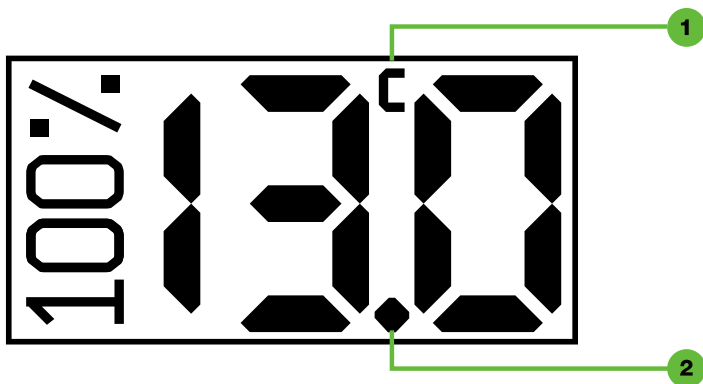

1 CRITICAL CONNECT INDICATOR
“C” SYMBOL WILL BE VISIBLE ON HOME
SCREEN WHEN BATTERY IS PAIRED WITH
FOOT SWITCH

2 MOMENTARY/CONTINUOUS MODE
CLICK BOTH  AND  ONCE TO
TOGGLE BETWEEN MODES ON THE
FOOT SWITCH



- ◆ SOLID DECIMAL FOR CONTINUOUS
- ◇ HOLLOW DECIMAL FOR MOMENTARY

HOW TO PAIR MULTIPLE BATTERIES



+



- 1 PAIR 1ST BATTERY TO FOOT SWITCH
- 2 DOUBLE CLICK  TO ENTER “STANDBY” MODE
- 3 TURN ON OR EXIT STANDBY BY DOUBLE  CLICKING ON 2ND DEVICE
- 4 PAIR 2ND BATTERY TO FOOT SWITCH

PAIR AND SWITCH BETWEEN UP TO 4 BATTERIES
AND 1 FOOT SWITCH

ONLY 1 BATTERY CAN BE OPERATED AT A
TIME PER FOOT SWITCH. ALL BATTERIES
NOT IN USE SHOULD BE ON STANDBY
MODE OR OFF

COMPATIBLE PRODUCTS



**CRITICAL CONNECT
FOOT SWITCH**



UNIVERSAL BATTERY DOCK

12 MONTH WARRANTY

PATENT INFO

US UTILITY PATENT - 10,471,246

AUSTRALIA UTILITY PATENT - AU2020200982

US DESIGN PATENT - 29/736,884

CHINA DESIGN PATENT - 202030297770.3

CANADA DESIGN PATENT - 196581

VIDEO TUTORIAL

WWW.CRITICALTATTOO.COM/CRITICALCONNECT



SCAN QR CODE FOR VIDEO LINK

**CRITICAL
CONNECT™**



WWW.CRITICALTATTOO.COM

VISIT OUR YOUTUBE CHANNEL



CRITICAL TATTOO

FOR USAGE INSTRUCTIONS



@CRITICALTATTOOSUPPLY