

MICROANGELO BATTERY PACK



Voltage Range 4.5V - 13V
Weight: 1.5 oz
Width: 0.97"

ENHANCED WITH CRITICAL CORE



PRECISE VOLTAGE

No "Sag" in voltage drop during any part of the tattoo session



LOW BATTERY INDICATOR

At 5% charge life, a low battery icon is displayed along with a beep for 5 seconds at every minute



OUTPUT INDICATOR

Flashing decimal point informs user device is in use



TEMPERATURE PROTECTION

Power shuts off if temperature ever reaches at unsafe levels (176°F)



CRITICAL CORE

Smart & accurate



VERSATILE CHARGE CONNECTION

Easy charge connection with any USB-C connection

HOW TO USE:

- 1 Attach power pack to tattoo machine
- 2 Turn device on by holding power button 3 seconds
- 3 Select desired voltage by using +/- button
- 4 Start device by clicking power button 1 time
- 5 Stop device by clicking power button 1 time
- 6 Turn device off by holding power button 3 seconds


OLED SCREEN WHEN CHARGING

- Screen will remain on while charging, will display battery status
- Screen will idle once fully charged after 60 seconds

CHARGING

- Use USB Type C Connector
- Universal Battery Dock (Sold Separately)

HOW TO PAIR BATTERY TO FOOT SWITCH

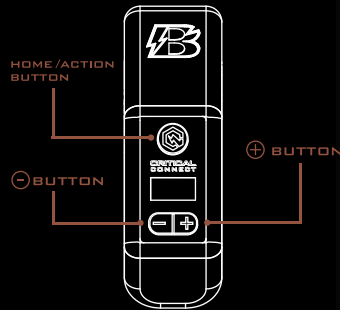

- Any Critical Connect Battery (up to 4)
- 1x Critical Connect Foot Switch

MICROANGELO TO ACCESS BLUETOOTH MENU

- 1 Hold both \ominus and \oplus Buttons for 3 seconds to enter Bluetooth Menu
- 2 Click \oplus 1 time for Search Mode
- 3 Quickly tap Foot Switch (sold separately) 1 time to pair with battery pack
- 4 Click Button \odot 1 time to return to Home Menu

BLUETOOTH MENU SYMBOLS



NOT PAIRED

Click \oplus once to search for Critical Connect Foot Switch



SEARCH MODE

Tap Foot Switch once during search mode to connect



DEVICE NOT FOUND

If no device is paired or found after 30 seconds



BLUETOOTH PAIRED

Successfully paired
Click \ominus once to unpair device

HOME SCREEN BATTERY TO FOOTSWITCH



- 1 **CRITICAL CONNECT INDICATOR**
"C" Symbol will be visible on home screen when battery is paired with Foot Switch
- 2 **MOMENTARY/CONTINUOUS MODE**
Click both the \oplus and \odot once to toggle between modes on the Foot Switch
 - ◆ Solid decimal for continuous
 - ◇ Hollow decimal for momentary
- 3 **JUMPSTART MODE**
Jumpstart is defaulted ON
To switch ON/OFF, hold \odot and \ominus for 3 seconds

HOW TO PAIR MULTIPLE BATTERIES



- 1 Pair 1st battery to foot switch
- 2 Double click (Ⓢ) to enter "standby" mode
- 3 Turn on or exit standby by double clicking (Ⓢ) on 2nd device
- 4 Pair 2nd battery to foot switch

Pair and switch between up to 4 batteries and 1 foot switch

Only 1 battery can be operated at a time per foot switch. All batteries not in use should be on standby mode or off.

COMPATIBLE PRODUCTS



BISHOP®
MICROANGELO
TATTOO MACHINE

CRITICAL CONNECT
FOOT SWITCH



UNIVERSAL
BATTERY DOCK

VIDEO TUTORIAL



SCAN QR CODE FOR VIDEO LINK
MICROANGELO



PATENT INFO

US PATENT 10471246, 29/736,884
AU PATENT 2019359618
CN PATENT 202030297770.3
CA PATENT 196581



MICROANGELO
BATTERY PACK