

## Knob A

1)Adjusts the arm pad angle. Tighten the knob to hold arm rest in place.

2)Removes or attaches arm pad to tripod.

Knob B adjusts height of tripod.

Extend foot support upward in the direction of the arrow.

Note: Knob A is in the side of the bag as shown in the photo.

## **VINYL AFTERCARE**

- 1.Use soft cleaning implements. Only clean your vinyl seats with soft sponges, dish cloths, and soft-bristled brushes. This will ensure your vinyl seats last for many years.Using steel wool, sharp cleaning tools, or similarly abrasive cleaning implements could cause your vinyl seating to tear.
- 2. Wash your vinyl with soapy water. Mix a small amount of mild dish soap with warm water until the mixture is sudsy. Dip a soft-bristled brush or soft cloth in the water. Scrub the vinyl seats until clean.
- **3. Do not use abrasive cleaning compounds.** Undiluted bleach, for instance, is too caustic to use on vinyl. Over time, cleaning your vinyl seats with bleach will cause them to break down. Likewise, avoid cleaning compounds containing:
- concentrated detergents
- silicone oils
- waxes
- petroleum distillates
- dry cleaning fluids
- solvents
- acid-based cleaners