




COMFORTSOUL
Mako Low Artist Chair
ML-AC260-BP

***Step 1: Insert backrest bar into the chair mechanism before inserting the plastic stopper.**

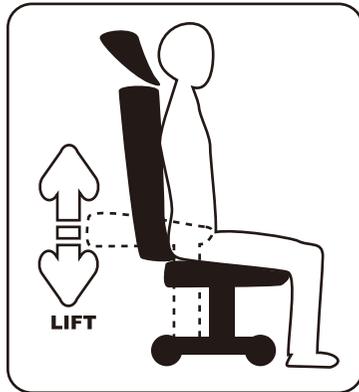


**LIFT LEVER UP TO ADJUST SEAT HEIGHT
PUSH DOWN LEVER TO LOCK**



**LIFT LEVER UP TO ADJUST BACKREST ANGLE
PUSH DOWN LEVER TO LOCK**

***Step 2: Lock in the backrest by adjusting and tightening these two knobs.**

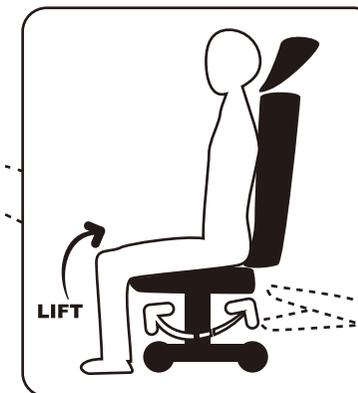

**LIFT LEVER UP TO ADJUST BASE ANGLE
PUSH DOWN LEVER TO LOCK**



***Note : For best stability & efficiency, assemble the two locking casters next to each other on the base.**

***Step 3: Insert casters into base.**

***Step 4: Insert Lift Piston into chair mechanism.**

WARNING

Make sure to pop wheels all the way into the base. Failure to pop all the way in will result in damaged wheels.

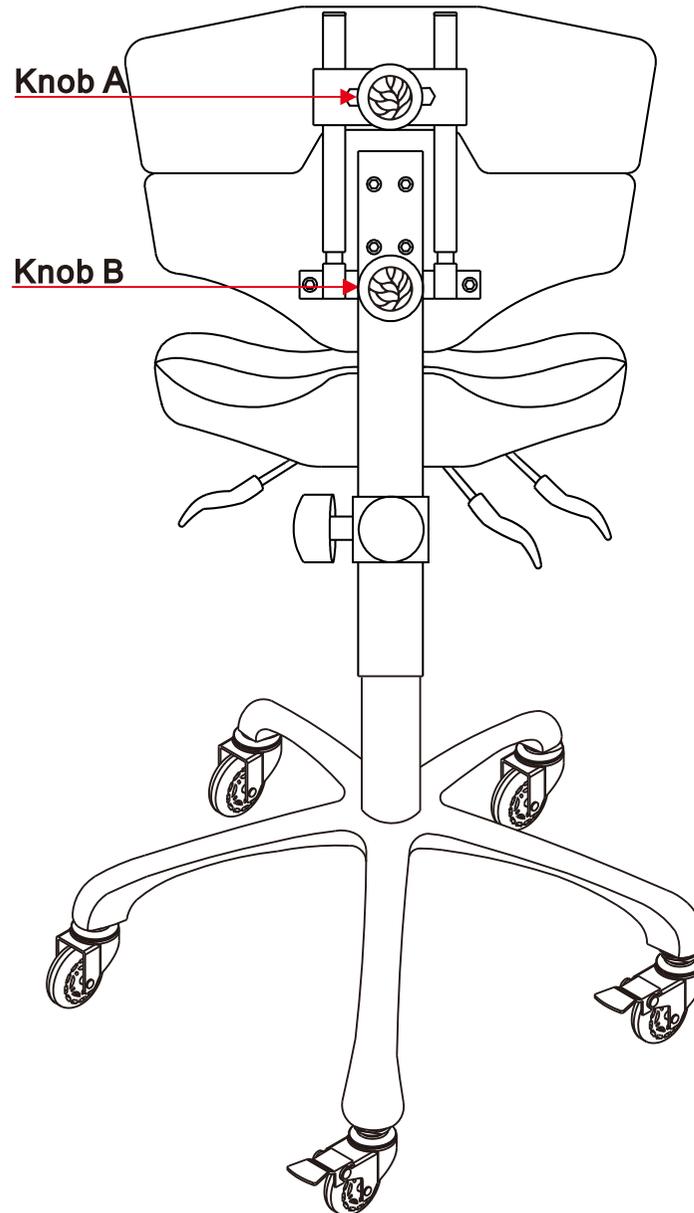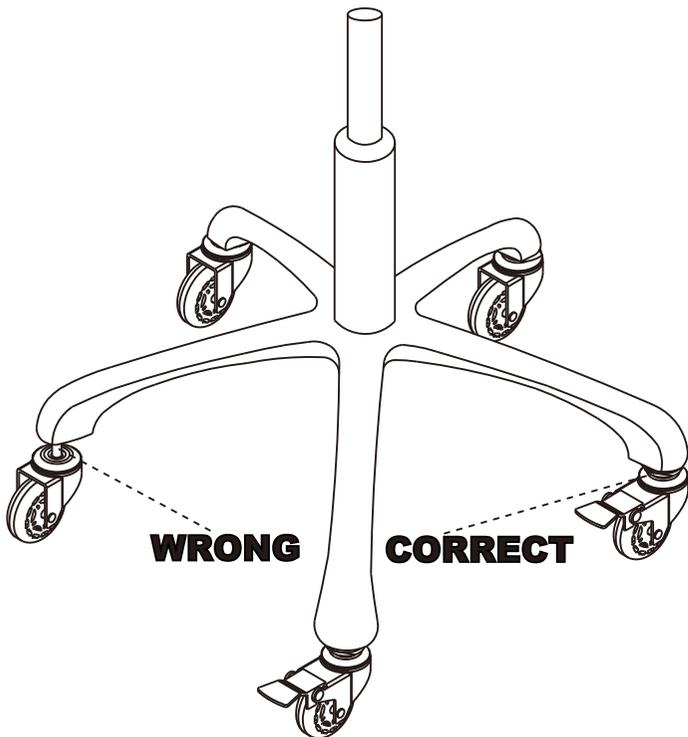

COMFORTSOUL

**Mako Low Artist Chair
ML-AC260-BP**

Knob A can adjust backrest height.

Knob B can adjust backrest inclination.

VINYL AFTERCARE

1. Cleaning Instructions. To ensure the safety and life of your vinyl seats, please use only specified cleaners and cleaning materials listed below.

2. Accepted Cleaners. Mix a small amount of mild dish soap with warm(not hot) water . Dip a very soft-bristled brush or soft cloth into the soapy water and gently scrub with seats in a circular motion. Wipe the water off with another soft, dry cloth.

3. Unacceptable Cleaners. Do not use abrasive cleaning compounds such as bleach or ammonia. They will harm the vinyl and, over time, cause the material to fade or tear. Also, do not use:

Concentrated detergents

Silicone oils

Waxes

Petroleum distillates

Dry cleaning fluids

Solvents

Steel wool

Sharp cleaning tools

Abrasive cleaning materials or impements

Acid-based cleaners