ISMOD **User Guide**

Please read and understand this manual carefully before using this product.



1. SAFETY WARNING & INSTRUCTIONS


- 1. When shipping this device, make sure that it is always powered down
- 2. This device is not suitable for: people under the age of 18 years; This tobacco product damages your health and is addictive
- 3. Keep this device and its components out of reach of children and pets.
- 4. Keep this device in room temperature. Do not expose the device to excessive heat or humidity.
- 5. Do not immerse any part or component of the device in water.
- 6. Do not use this device where flammable substances, liquids, gases, or oxygen are present
- 7. Do not use this device during charging.
- 8. Do not use a charging device that does not meet the requirements for charging.
- 9. Before cleaning, opening, or making direct contact with the internal heating components, you must ensure that the device main body has cooled down.
- 10. Please use and keep the device at an ambient temperature of 5 ~ 40 °C. A lower or higher temperature environment may temporarily reduce battery life or cause damage to the device.
- 11. If you notice any abnormal situation such as odor or smoke, please stop charging and using immediately, and contact your service provider
- 12. If the battery leaks from the product, please avoid contact with the skin and eyes. If you accidentally touch it, wash affected areas with clean water immediately and consult a doctor
- 13. The precautions contained in the user guide cannot cover all possible situations.



2. OVERVIEW

ISMOD II Plus is a heat not burn device which comes with a built-in large capacity lithium battery, two smoking rods and a large charging base that makes it portable, convenient and durable.


3. WHAT'S IN THE BOX

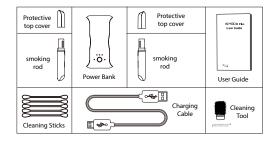

4. SPECIFICATIONS

Model	ISMOD II Plus		
Power Requirement	Battery Capacity(2600mAh,3.7v)		
	Maximum Discharger Current: 1.25A		
Charger Time	Power bank charger time: 3h		
	Tobacco Rod charger time: 6minutes		
Charger Method	USB Charger Port: Micro USB Charger Setting: 5V/1.25A		
Working Temperature	5-40 °C		
Product Size	101mm*55mm*21mm		
Product Weight	115g		



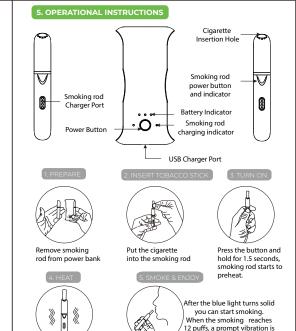





generated and the blue light

flashes. When smoking reaches

14 puffs or when the heating time











Remove the cigarette

protective top cover

along with the

after finish

When smoking is complete, pay attention to the warning sign on the internal insulation of the tobacco rod while removing the cigarette. When installing the protective cover again, pay attention to the installation position to prevent the protection cover to avoid the damage to the rod.

 
- 1. If you need to stop smoking during the smoking operation, press and hold the control switch for 1.5 seconds, the tobacco rod will stop working and enter the shutdown state, and the indicator light will go out and a vibration prompt will be generated
- 2. Under the normal working conditions of smoking, after the smoking is completed, the tobacco rod generates a vibration prompt, and the tobacco rod indicator lights flashes and then enters the shutdown state.
- 3. After the smoking is completed, put the tobacco rod back to the charging host for charging work, so that it can be used again next time.

1. When cleaning the tobacco rod, pull out the protective top cover of the tobacco rod, insert the cleaning tool according to the following picture, turn it several times, then remove the residue on the cleaning tool. Use also the attached cleaning sticks.











Pull the end of the color loop of the cleaning sticks up along the film.



After pulling out the cleaning sticks, use it to clean the smoking rod as shown previously

Charging Bank operation instructions

1. It is recommended to charge the charging Bank for the first time to ensure the normal use of the product.

2. When you are ready to charge the main unit, align the charging cable with the USB charging port and the other end for the power connection.amage to the rod

3. When charging, the charging indicator of the host will flash in sequence until the indicator is solid, indicating that charging is complete.

Tobacco rod Charging instruction

- 1. Before preparing for charging you need to ensure that the that there is enough nower
- charging bank is turned on and available.
- 2. After each cigarette is over, you need to charge it to use it again.
- 3. When charging, you need to align the charging interface of the tobacco rod with the power bank. The magnetic function of the product will automatically turn on and charge.
- 4. The corresponding cigarette charging indicator will flash when charging, red flash indicates that charging is in progress, blue flash indicates charging is complete
- 5. After the tobacco rod is fully charged, the indicator will automatically turn off.

6. TROUBLESHOOTING

	The charging base could not turn on	Check if there is enough power with the charging base	Charge the charging base until there is enough power within it
		Check if it hasn't been used for a long time	The battery is low, charge the charging base at once
		Check if there is something wrong with the button	
		Check if there is something wrong with the indicator	Send it to the local service center
	The charging base can't get charged	Can't charge the charging base	
	The holder can't get charged normally	Check if the holder is getting charged	Never charge the charging base and the holder simultaneously
ge		Check if the charging port is broken	Send it to the local service center
	The indicator blinks abnormally	Check if the red light blinks when the button is pressed and go out when released	The battery is low, charge the device at once
Т		Prevent the device from getting overheated	Wait for 3-5mins until the temperature of the device is normal
		Check if there is something wrong with the heating pin	Send it to the local service center

7. GENERAL INFORMATION

Manufacturer: Dongguan Mysmok Electronic Technology Co.,Ltd Distributor: ISMOD UK LTD

For all warranty information or to register your device, please visit https://www.ismodeurope.com - https://www.ismod.co.uk

8. DISCLAIMERS

Wait for 15 seconds until

the device vibrates to

- 1. The ISMOD II PLUS is battery powered. It needs to get recharged when the battery is low. Do not put the ISMOD II PLUS near the high-temperature environment or heater to avoid battery damage.
- 2. Read all the instructions carefully before you use the ISMOD II PLUS. Keep the User Guide for future reference.. When using the ISMOD II PLUS, follow the manufacturer's instructions to avoid the possibility of injuries. The warnings and safety instructions in this User Guide cannot include all the possibilities and situations that may occur. Be cautious when you use or maintain any personal electronic product.
- 3. Only use compatible tobacco heat sticks.
- 4. ISMOD II PLUS contains lithium batteries, for their disposal, please follow the requirement of your local authority.

☆ LITHIUM BATTERY

- 1. If the product is kept at a high temperature for a long time, the degradation of the lithium battery will happen.
- 2. The battery will discharge when it is stored for a long time without operation. Please recharge the device before using it.
- 3. When you do not use the device for a long time, avoid storing the device in fully-charged status or under high temperature / humidity condition in order to avoid accelerated deterioration of the battery.
- 4. Please do not put the battery into a fire to prevent the danger of explosion .



