# 

Failure to follow these instructions or to properly install and maintain this equipment could result in property damage and personal injury or death.

The NFT 650 Series Steam Trap must be installed, operated and maintained in accordance with federal, state and local codes, rules and regulations and Emerson instructions.

If leak develops in the system, service to the unit may be required. Failure to correct trouble could result in a hazardous condition.

Installation, operation and maintenance procedures performed by unqualified personnel may result in improper adjustment and unsafe operation. Either condition may result in equipment damage or personal injury. Only a qualified person shall install or service the NFT 650 Series Steam Trap.

# Introduction

### Scope of the Manual

This manual provides instructions for installation, maintenance and parts information for the NFT 650 Series.

### **Product Description**

NFT 650 Series are float and thermostatic steam traps. Float is free of levers, linkages or other mechanical connections. This float is weighted to maintain orientation and acts as the valve being free to modulate condensate through the seat ring. Air vent is balanced-pressure design with stainless steel welded encapsulated bellows capable of discharging air and non-condensable gases continuously



Figure 1. NFT 650 Series Stream Trap

within 15°F / -9.4°C of saturated temperature. Trap contains integral strainer and stainless steel exhaust port sleeve.

# **Principle of Operation**

On startup, the thermostatic air vent (caged stainless welded bellows) is open, allowing air to flow freely through the vent valve orifice. When condensate flows into the trap, the float rises, allowing condensate to be discharged. Once air and non-condensables have been evacuated, hot condensate will cause the thermostatic vent to close. Condensate will continue to be discharged as long as condensation occurs. During normal operation, an increase in the load causes the liquid level in the trap to rise. The float then rises and rolls off the seat ring, allowing more condensate to flow out. The float sinks as the condensate load decreases, moving nearer to the seat ring, decreasing the effective size of the orifice and allowing less condensate to discharge. This provides smooth, continuous operation that reacts instantly to load variation while maintaining a water seal over the seat ring to prevent live steam loss.



www.SpenceValve.com

### **Specifications**

The specifications section on this page provide the ratings and other specifications for the NFT 650 Series.

Type NFT 651: Low capacity Type NFT 652: Medium capacity Type NFT 653: High capacity

### **Body Sizes**

NPS 1/2, 3/4, 1, 1-1/2 and 2 / DN 15, 20, 25, 40 and 50

#### End Connection Style

NPT, Socket Weld, CL300 RF and CL600 RF

Maximum Allowable Pressure<sup>(1)</sup> 650 psig / 44.8 barg

### Maximum Operating Pressure<sup>(1)</sup>

See Table 1

1. The pressure/temperature limits in this Instruction Manual and any applicable standard or code limitation should not be exceeded.

#### Table 1. Maximum Operating Pressure

Options

SLR Orifice

Blowdown Valve

ORIFICE	MAXIMUM OPERATING PRESSURE				
ORIFICE	psig	barg			
20	20	1.4			
50	50	3.5			
100	100	6.9			
175	175	12.1			
300	300	20.7			
400	400	27.6			
600	600	41.4			

### Installation

Install the NFT 650 Series Steam Trap upright and in a horizontal line with the arrow on the body pointing in the direction of flow. Allowable inclination is  $5^{\circ}$  or less horizontally and  $5^{\circ}$  or less at right angles to the plane of the pipe line.

### Maintenance

Due to normal wear that may occur, inspect the parts periodically and replace if necessary. The frequency of inspection depends on the severity of service conditions.

# CAUTION

Inspection of the thermostatic bellows is not recommended as disassembly generally damages the unit.

- 1. Disassemble the steam trap. Remove the body bolts and place the lower body on a safe place.
- 2. Inspect the float and lower seat ring for damage and clean or replace as necessary. Clean the float with a rag and steel wool.
- 3. Clean the screen using a wire brush.

Maximum Allowable Temperature<sup>(1)</sup>

All Internal: Stainless steel

Body and Cover: ASTM A216 WCB Carbon steel

Cover Gasket: Spiral Wound 304 Stainless steel

with graphite filler

Air Vent: Balanced-Pressure Stainless steel

Continuous Bleed Air Vent Maximum Pressure

750°F / 400°C

**Materials of Construction** 

4. Replace bellows if needed. Use needle nose pliers or similar tool. Insert them into two of the three holes located in the bellows assembly and unscrew it from the upper body.

#### Note

# When reassembling, use thread locker on the bellows assembly threads.

5. After inspection/repair, reassemble trap, replacing body gasket and torquing bolts as specified. See Table 2.

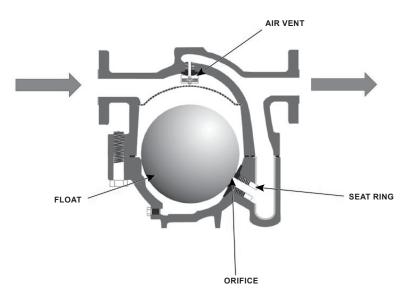


Figure 2. NFT 650 Series Stream Trap Operational Schematic

Table 2.		Sarias	Stroom	Tran	Torque	Values
Table Z.	NF1 000	Selles	Sueam	пар	lorque	values

TRAP TYPE	BODY	BOLTS	SEAT RING		
	Ft-lb	N∙m	Ft-lb	N∙m	
NFT 651	60 to 70	81 to 95	11 to 12	14 to 16	
NFT 652	265 to 310	359 to 420	21.5 to 23.5	29 to 32	
NFT 653	265 to 310	359 to 420	37 to 41	50 to 56	

### **Parts Ordering**

When corresponding with your local Sales Office about NFT 650 Series Steam Trap, always reference the assembly number. When ordering replacement parts, specify the complete character part number from the following parts list.

### **Parts List**

Key	Description	Part Number
1	Body, Cast steel	See following table
2	Air Vent Gasket, Copper	
	Type NFT 651	WAL05-15771-00
	Types NFT 652 and NFT 653	WAL05-14627-00
3	Air Vent, Steel	
	Type NFT 651	WAL05-15751-00
	Types NFT 652 and NFT 653	WAL05-15752-00
4	Vent Gasket, 304 Stainless steel	
	Type NFT 651	WAL05-15778-00
	Type NFT 652	WAL05-15780-00
	Type NFT 653	WAL05-15782-00
5	Body Gasket, 304 Stainless steel	
	Type NFT 651	WAL05-15777-00
	Type NFT 652	WAL05-15779-00
	Type NFT 653	WAL05-15781-00

Key	Description	Part Number
6	Sleeve, Copper	
	Type NFT 651	WAL05-15774-00
	Type NFT 652	WAL05-15775-00
	Type NFT 653	WAL05-15776-00
7*	Seat Ring, 316 Stainless steel	See following table
8	Lower Body, Cast steel	
	Type NFT 651	WAL04-15712-00
	Type NFT 652	WAL04-15725-00
	Type NFT 653	WAL04-15734-00
9*	Seat Ring Gasket, Copper	
	Type NFT 651	WAL05-14614-00
	Type NFT 652	WAL05-14627-00
	Type NFT 653	WAL05-14646-00
10	Float, 316 Stainless steel	
	Type NFT 651	WAL05-15943-00
	Type NFT 652	WAL05-15946-00
	Type NFT 653	WAL05-14638-00
11	Pipe Plug, 1/4 NPT	WAL04-03772-00
12	Cap Screw, Steel	
	Type NFT 651	WAL05-15783-00
	Type NFT 652	WAL05-15784-00
	Type NFT 653	WAL05-15785-00
13	Retainer Ring, Steel	
	Type NFT 651	WAL05-15772-00
	Type NFT 652	WAL05-14662-00
	Type NFT 653	WAL05-14640-00
14	Screen, 304 Stainless steel	
	Type NFT 651	WAL05-15773-00
	Type NFT 652	WAL05-14621-00
	Type NFT 653	WAL05-14639-00

\*Recommended spare parts.

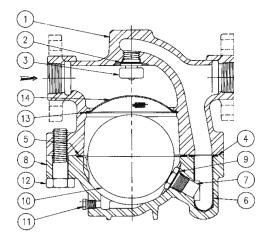


Figure 3. NFT 650 Series Steam Trap Assembly

#### Key 1, NFT 650 Series Body Part Number

END CONNECTION	PART NUMBER							
	<b>TYPE 651</b>				<b>TYPE 652</b>	TYPE 653		
	NPS 1/2 / DN 15	NPS 3/4 / DN 20	NPS 1 / DN 25	NPS 1 / DN 25	NPS 1-1/2 / DN 40	NPS 2 / DN 40	NPS 1-1/2 / DN 40	NPS 2 / DN 40
Screwed	WAL04-15700-00	WAL04-15701-00	WAL04-15702-00	WAL04-15713-00	WAL04-15714-00	WAL04-15715-00	WAL04-15726-00	WAL04-15727-00
CL300 RF				WAL04-15717-00	WAL04-15720-00	WAL04-15723-00	WAL04-15729-00	WAL04-15732-00
CL600 RF				WAL04-15718-00	WAL04-15721-00	WAL04-15724-00	WAL04-15730-00	WAL04-15733-00

#### Key 7, NFT 650 Series Seat Ring Part Number

					PART NUMBER				
TRAP TYPE	Difforential Proceure AP (neig / barg)								
	20 / 1.38	50 / 3.45	100 / 6.90	150 / 10.3	175 / 12.1	250 / 17.2	300 / 20.7	400 / 27.6	600 / 41.4
NFT 651	WAL04-15750-00	WAL04-15751-00	WAL04-15752-00	WAL04-15753-00	WAL04-15754-00	WAL04-15755-00	WAL04-15756-00	WAL04-15757-00	WAL04-15758-00
NFT 652	WAL04-15759-00	WAL04-15760-00	WAL04-15761-00	WAL04-15762-00	WAL04-15763-00	WAL04-15764-00	WAL04-15765-00	WAL04-15766-00	WAL04-15767-00
NFT 653	WAL04-14645-00	WAL04-15696-00	WAL04-14644-00	WAL04-15692-00	WAL04-15688-00	WAL04-14643-00	WAL04-15768-00	WAL04-15769-00	WAL04-15770-00

SpenceValve.com

#### **Emerson Automation Solutions**

#### Americas

McKinney, Texas 75070 USA T +1 800 558 5853 +1 972 548 3574

**Europe** Bologna 40013, Italy T +39 051 419 0611 Asia Pacific Singapore 128461, Singapore T +65 6777 8211

Middle East and Africa Dubai, United Arab Emirates T +971 4 811 8100 VCIMD-14910 © 2021, 2022 Emerson Electric Co. All rights reserved. 04/22 Spence is a mark owned by one of the companies in the Emerson Automation Solutions business unit of Emerson Electric Co. The Emerson logo is a trademark and service mark of Emerson Electric Co. All other marks are property of their prospective owners.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available upon request. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.

Emerson Electric Co. does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Emerson Electric Co. product remains solely with the purchaser.

