


## Length Adjustment

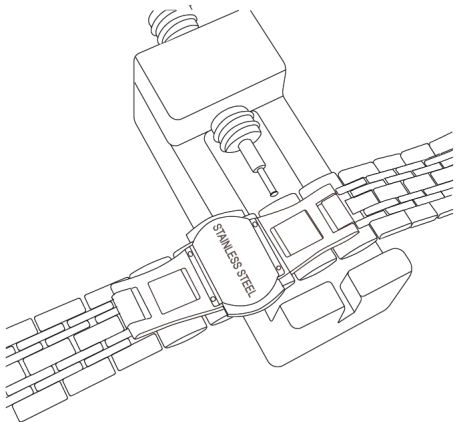

### 01 Unlink

Point the adjustment tool pin into the holes that are deeper and have no straight line markings. Press the watchstrap flat on the adjustment tool platform, then rotate the tool's knob to push the needle inside the strap out.


### 02 Remove

Repeat step 01 to remove excess pieces as needed.

### 03 Relink

Relink the watchstrap by inserting the needle (pointed side going in first) into the side hole. Hammer/push the needle pack in place with the adjustment tool.

## Removable Jewellery Clasp

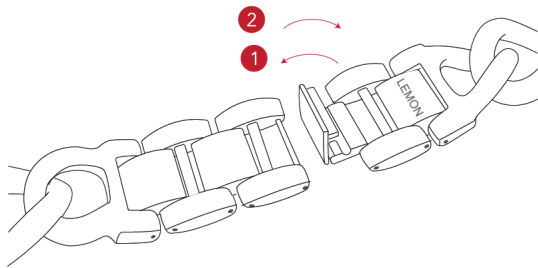

### 01 Unlock

Lift the latch on the top side of the jewellery clasp with your fingers to unsnap it.

### 02 Relink


To relink the watchstrap, connect the clasps, close the latch, and press the latch hook to snap the clasp shut.



Jewellery clasps are designed to be tightly shut to prevent your watch from falling. If any clasp is loose, please stop using the bracelet, and replace the loose clasp before wearing. Our product guarantee and warranty offer free clasp replacement.

Apple Watch

## Changing Your Watchstrap

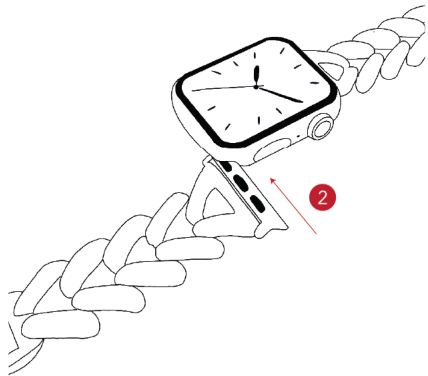

### 01 Release

Turn your Apple Watch upside down. Hold down the band release button, and slide the original watchstrap out of your watch.

### 02 Slide

Make sure that both the watchstrap and your watch are facing up. Slide the new watchstrap into the slot.