

CARING+ CLEANING

GUIDE FOR OUTDOOR FURNITURE

WICKER



Terms and conditions (of the guide)

Wintons Teak endeavour to have all information in this guide correct, however, there can be errors, in such case we apologise for any inconvenience caused and it may be necessary to change information in this guide.



WintonsTeak®

SYNTHETIC RATTAN QUALITY FEATURES

The synthetic rattan furniture in our collection is hand-woven using synthetic fibre made from extruded High Density Polyethylene (HDPE). The synthetic fibre is recyclable, tear and UV resistant which makes it ideal for outdoor furniture.

HANDLING SYNTHETIC RATTAN FURNITURE



DO:

Always lift and handle from the aluminium structure.




DO NOT:

Grab or pinch the weaving when moving furniture. Always lift and handle from the aluminium structure.

CARING FOR SYNTHETIC RATTAN



TOOLS

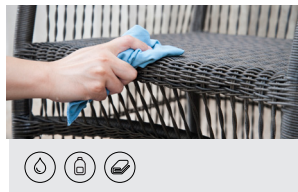

WATER



VINEGAR



CLOTH



GARDEN
HOST

GENERAL CLEANING

Wintons Teak recommends to occasionally clean your outdoor wicker furniture. This ensures that no dirt and foreign objects attach themselves to the material, which over time promotes mould and fungal growth. To clean your wicker furniture, simply rinse its surface with cold water using a garden hose. Do not use a high pressure hose! Regular dusting of your furniture is recommended to rid it of spider webs and dirt. Always use a soft brush or duster.

TOUGH STAINS

Use a solution with an equal amount of water and vinegar (do not use coloured vinegar such as red wine or balsamic) or non-foaming mild soap. Rub the solution onto the material using a soft cloth and rinse with clean water and towel dry afterwards.

AVOID !

DO NOT USE A FOAMING CLEANER to clean your synthetic rattan furniture. This is because foam can be trapped between the weaving, attracting dirt which is difficult to remove. **DO NOT DIRECTLY EXPOSE THE FURNITURE TO EXTREME HEAT OR COLD**, such as a hot saucepan/flame or dry ice, as it will cause the product to melt or become brittle. This will leave a permanent mark or may cause the fibre to break.

IT IS IMPORTANT TO USE THE FURNITURE AS IT IS INTENDED. This means that it is important not to sit on the armrests, sit on the tabletop or to pivot on the chairs.

KEEP FURNITURE AWAY FROM SHARP OBJECTS. Synthetic wicker is prone to break when pressed against sharp objects (such as knives, scissors, etc). Please pay special attention when removing packaging material using sharp objects. **DO NOT USE EXCESSIVE FORCE TO CLEAN YOUR FURNITURE.** Excessive force from a power washer or high pressure hose will damage and unravel the weaving. Never use a power washer or high pressure hose.



CARING+ CLEANING

GUIDE FOR
OUTDOOR FURNITURE

WICKER



If you have any enquiry
please contact customer
service team:

customer_service@wintonsteak.com

WintonsTeak®



Terms and conditions (of the guide)

Wintons Teak endeavour to have all information in this guide correct, however, there can be errors, in such case we apologise for any inconvenience caused and it maybe necessary to change information in this guide.

