

FEATURES

- 1.Dual Tally Counters
 - •Two separate tally counters.
 - •Both counters count from 0 to 9999.
 - Calculates sum value between two counters.
 - •Selects " " symbol to subtract the values.
- 2.Stopwatch
 - Measures up to 100 minutes in 1/100 second.
 - Shows cumulative or lap split time.
- 3 **O**: Power on/off button.
- 4.Sleep mode activates after 2 hours of inactivity to save battery power.
- 5.((•)): Beep confirmation sound is on when the symbol shows.
- Cock feature prevents accidental modification.

MODE CIRCULATION

- 1.Remove battery insulation film first.
- 2.Press B button to choose Dual Tally Counters or Stopwatch mode.

DUAL TALLY COUNTERS

HOW TO OPERATE

- 1.Press B button to reach Dual Tally Counters mode.
- 2.Press A button to turn subtraction mode on/off.("-" appears/disappears)
 - a. Press C button to increase or decrease the count by 1 in the upper row.
 - b.Press D button to increase or decrease the count by 1 in the lower row.

Note: When either counter reaches to 0:

- Both counters will enter count-up mode. ("-" sign will disappear)
- The device will alarm you with beep sounds.
- 3.Hold A button 2 seconds to show SUM of the two counters.

(511 symbol appears)

TO RESET TO ZERO

- -Hold B button 2 seconds and the STOP symbols on the upper and the lower rows will flash.
- -Follow step 1 to 3 while the symbols are still flashing:
- 1.Press C button to reset the counter on the upper row to 0.
- 2.Press D button to reset the counter on the lower row to 0.
- 3.Press B button again to return to the original display.
- * Note: The STOP symbol of the row will not flash if the counter in the row is already 0.

STOPWATCH

- 1.Press B button to reach Stopwatch mode.
- 2.Press C button to start/stop the counting.
- 3.In STOP status, hold B button 2 seconds to reset the display to 0.
- 4.Press A button to choose "C" cumulative time or "L" lap time on the upper low.
- 5. When the stopwatch is running, press D button repeatedly to show the split time.
 - a. The split time will show for 15 seconds with "C" or "L" flashing.
 - b.Meanwhile, the stopwatch will still be running in the background.
- Press A button to release the split time and resume the stopwatch.

ර POWER ON/OFF

- 1.Hold D button 2 seconds to power OFF the display.
- 2. The display will blank when no activity has been detected for 2 hours.
- 3. Press any button to power ON the unit.

((●))

- 1.Hold C button 2 seconds to turn the beep sounds on/off.
 - (((•)) symbol appears/disappears)
- 2.Hold both C&D button 2 seconds to turn the lock feature on/off.

(a symbol appears/disappears) Note: When the a symbol shows, every button will be locked. You will need to unlock the device before starting to use it again.

BATTERY REPLACEMENT

- 1.Remove the battery cover on the back side of the body with a coin or similar tool, using the arrows as direction indicators.
- 2.Remove and replace the battery with type LR44 or equivalent.
- 3.Be sure that " + " side is up.
- 4.Replace the battery cover and lock into place.