

Robic SC-429
OPERATING INSTRUCTIONS

THANK YOU for buying the Robic SC-429 Water Resistant 2 Memory Stopwatch. Your purchase brings you a reliable, World-Class Timer with separate modes for Single Event and Split Timing, 2 Finish Time memory recall, 1/100 second resolution, 24 hour working range, time, calendar, daily alarm and an array of other important time keeping functions.

In order to ensure that you receive the maximum enjoyment from your Robic Stopwatch, BEFORE USING, PLEASE TAKE A MOMENT TO REVIEW THIS OPERATION GUIDE TO FULLY UNDERSTAND HOW YOUR TIMER WORKS.

Features

- Time / Calendar display
- Hour (12/24-hour format), minute, second, month, date and day
- Stopwatch: 1/100 second for 30 minutes, 1 second up to 24 hours

Function Keys

A. MODE button: Switch among normal time mode, stopwatch mode, alarm time setting mode and normal time setting mode.

B. START/STOP button: Toggle between normal time and month/date display.

C. SPLIT/RESET button: Toggle between normal time and alarm time display.

Display Symbols

Normal Time Mode

1. Day of the week
2. Hour
3. Minute
4. Second

3. Measurement between two competitors: **B-C-B-C-C**

Press **A** to return to the normal time mode.

Time / Calendar Setting

1. In normal time mode, press **A** thrice to activate this mode.
2. Press **C** to select the setting items. The sequence will be: second > minute > hour > date > month > day.
3. Press **B** to increase the setting value and change 12/24 hour format when setting the hour.
4. Press **A** to return to normal time mode.

Note: Press **B** to add one minute when the second is more than or equal to 30 and reset it to 00 when the value is less than 30.

Alarm Time Setting

1. In normal time mode, press **A** twice to activate this mode.
2. Press **B** to change the hour value.
3. Press **C** to select the minute and press **B** to change the minute value.
4. Press **A** to return to normal time mode.

Note 1: To turn the alarm ON/OFF, press **B** and **C** at the same time.

Note 2: When the alarm is on, (1) It will last one minute without pressing any button then not sound again until the next day. (2) When the alarm is sounding, press **B** to activate the snooze function and the alarm will start again after 5 minutes. It will sound up to one minute then not sound again until the next day. (3) Press **C** to stop the alarm.

Hourly Chime Setting

1. In normal time mode, press and hold **C** with alarm time displayed.
2. Press **A** until all days of the week appear / disappear.

Battery Replacement

When the LCD becomes dim, replace with a new LR44 battery at once.

1. Insert a coin into the slot of the battery hatch located on the backside of the stopwatch.
2. Turn the coin counterclockwise until it is aligned with the open position mark, or even slightly further for easy opening.
3. Remove the battery compartment cover. Ensure that the O-ring and all surfaces are clean and dry. Do not stretch the O-ring.
4. Remove the old battery carefully.
5. Place the new battery into the battery compartment with the positive side facing up.
6. With the O-ring in the correct position, put the battery hatch back on and turn it clockwise with a coin until it is aligned with the closed position mark.
7. Battery replacement should be done with extreme care to ensure that the watch remains water-resistant. Careless battery replacement may void warranty.

Warning:

- Keep batteries away from children. If swallowed, contact a doctor or emergency personnel immediately.
- Batteries contain chemical substances. They should be disposed of properly according to local regulations.

LIMITED WARRANTY
OUR BASIC POLICY

Marshall -Browning International Corporation (MBI Corp.) warrants to the original owner, this timepiece (excluding battery, lanyard, clip, band or strap) for the period of one year from the original purchase date. This limited warranty is given by MBI Corp. and not by the dealer from whom the timepiece was purchased.

THE WARRANTY PROCESS - WHAT IS COVERED BY THE WARRANTY

If the timepiece develops a manufacturing defect within the one year limited warranty period, it will be either repaired or replaced (at MBI Corp.'s option) with a timepiece of equal value, providing the original owner submits the following:

1. Proof of purchase, i.e. a validated store receipt showing date of purchase.
2. A check or money order (no cash, please) in the amount of \$8.50 to cover the cost of shipping and handling.

WHAT IS NOT COVERED BY THE WARRANTY

A. MBI Corp. will not repair defects of damages caused by or showing evidence of:

1. Improper or unauthorized service.
2. Misuse, tampering, abuse or mistreatment of the timepiece.
3. Damage to the case or viable cracking of the lens.
4. Moisture damage, if the product is a non-water-resistant timepiece.

B. If we find that the battery is the cause of the defect, MBI Corp. reserves the right to charge (\$8.50) for a new replacement.

MBI Corp. is not liable for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

YOUR RIGHTS UNDER IMPLIED WARRANTIES AND STATE LAW.

MBI Corp. limits the duration of any warrant implied by state law, including the implied warrant of merchantability, to one year from the date of original purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

CARING FOR YOUR TIMER

Proper care of your timepiece will provide many years of enjoyment. We recommend that:

1. The battery be replaced at once when it becomes depleted. Look for the model number on the battery you removed. Please ask your local retailer to replace the battery for you using the same model as you took out.
2. The lens be replaced immediately if it becomes damaged, as contamination from dust, moisture, and other foreign substances will damage the module.
3. If the timepiece is not marked "water-resistant," avoid immersing or exposing it to water, steam, or other forms of moisture.

WHEN YOU REQUIRE SERVICE

If your timer ever requires factory servicing, you can send it directly to:

MBI Corp. c/o Frazier Sports 6600 Broad Avenue Waco TX 76712

We strongly recommend that when sending it through the mail, you send the product insured, return receipt requested, so that if a problem in shipping arises, you can trace it through the originating post office. You will be billed for all services deemed out of warranty; and since we reserve the right to substitute with a replacement product of equal or greater value, NEVER include a personal item, such as a watchband, with the repair request.

Robic...Timers & pedometers for champions at every level!
Please call (203) 264-2702 for a free catalog.
www.RobicTimers.com Robic is a registered trademark of MBI Corp.