


5. Heated seat malfunction

When seat is not getting warm

When the seat is not getting warm

1. Reset the unit

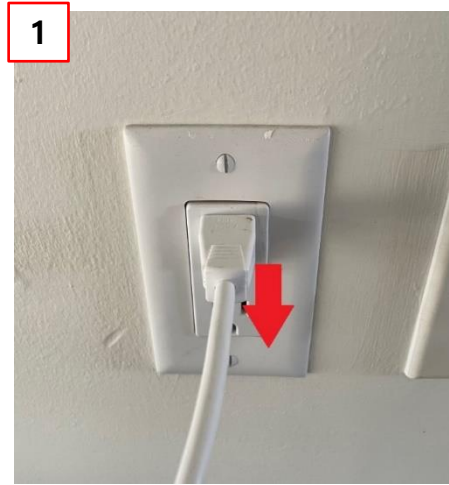


① Unplug the cord



② Plug the cord back

When the seat is not getting warm

2. Check the remote setting

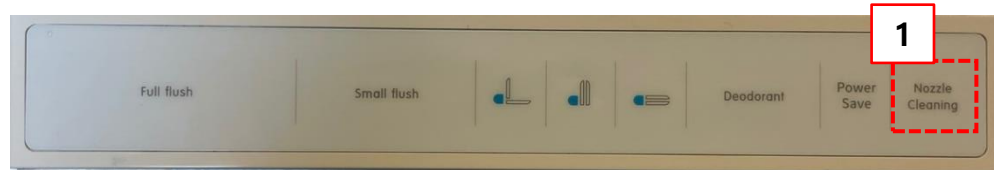

① Push the “Nozzle Cleaning” button to check if the remote is working.



② Set the seat temperature

③ After setting, wait for 3-4 minutes to check if the function is working.

! Please test the function again at this stage. If the problem is not resolved, please contact our customer support team so that we can provide a replacement unit with prepaid return label.