



# 7. How to replace the SEAT COVER

## How to replace the SEAT COVER

### 1-1. Open the cover base

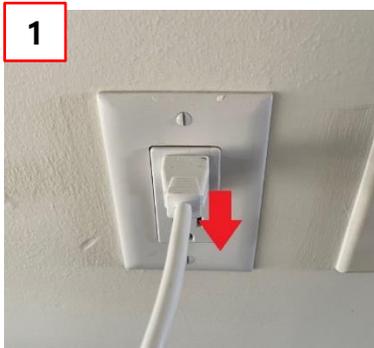


① Unplug the cord

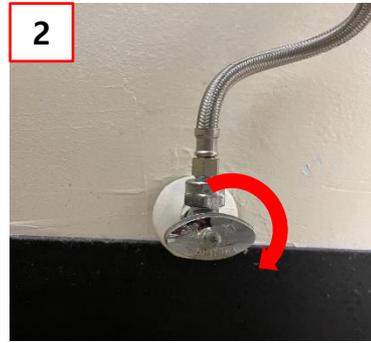


② Close the water valve clockwise



③ Unscrew the 2 screws at the back using a Philips head driver.

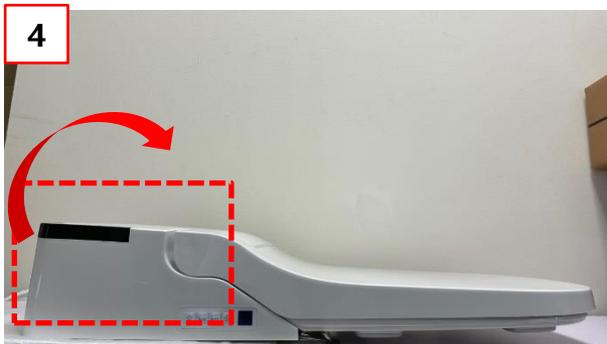


④ Detach the cover base by pulling it to the arrow direction as above.

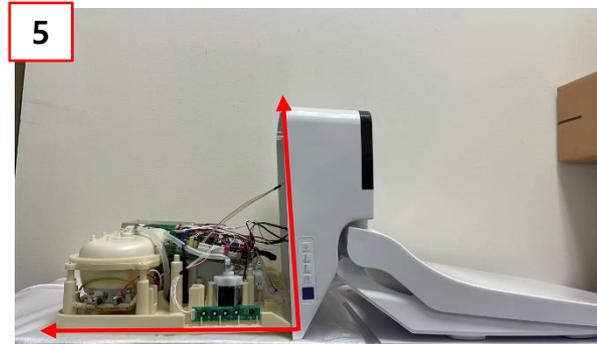

⑤ Make sure that the degree between the ground and the cover base is shown as in the above picture to avoid any wire damage.

## How to replace the SEAT COVER


### 1-2. Detach the SEAT COVER

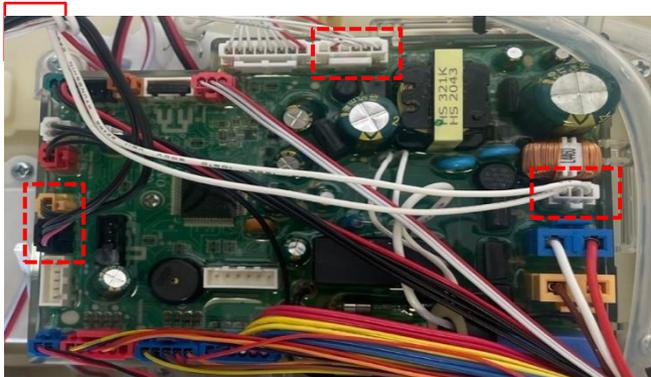


① Detach the SEAT harness that is connected to PCB



② Detach the BASE and put it aside. Flip SEAT and SEAT COVER as shown in the photo

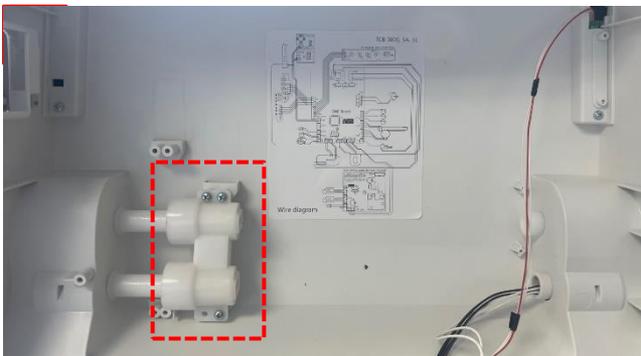

③ Unscrew the 3 screws from the DAMPER inside the COVER BASE

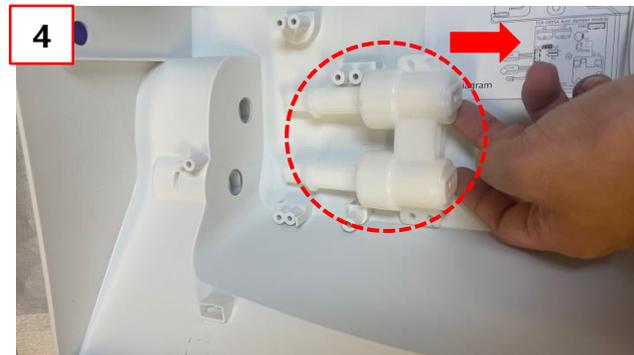


④ Detach the DAMPER in the direction shown in the photo.

## How to replace the SEAT COVER


### 1-3. Detach the SEAT COVER




① Pull the SEAT COVER in the direction shown in the photo to detach it and replace it with the new SEAT COVER

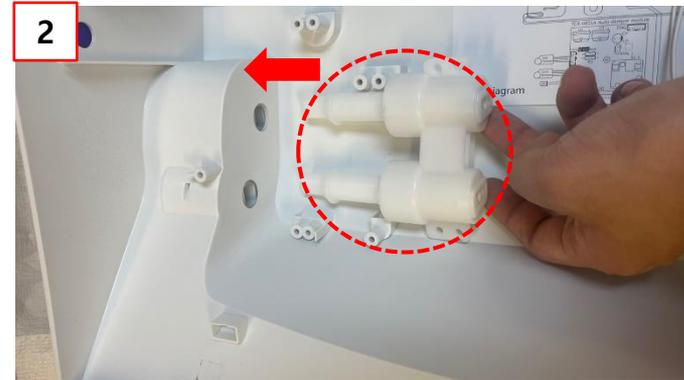

② Attach the DAMPER to the SEAT and SEAT COVER hole as shown.

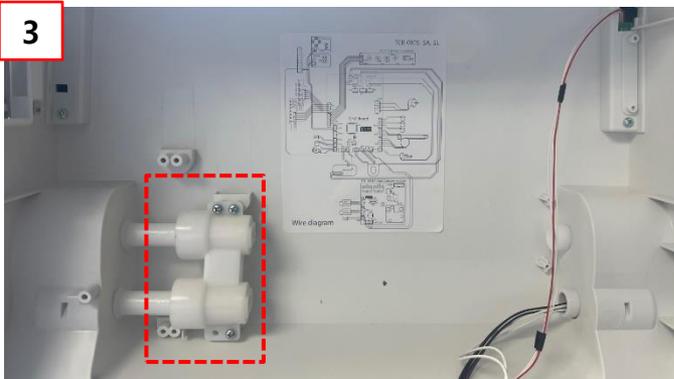


③ Screw the 3 screws to fix the DAMPER

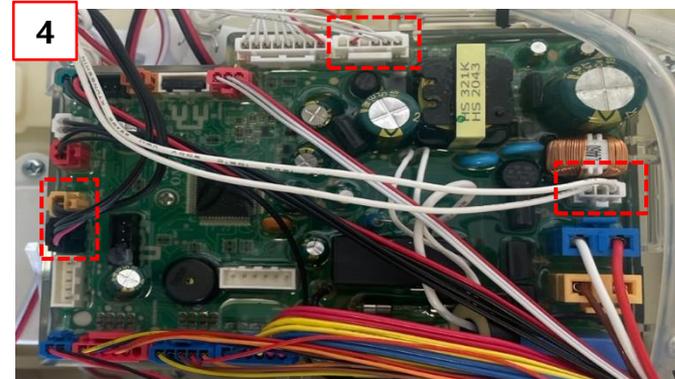

④ Reattach the harness from MAIN PCB and SEAT.

## How to replace the SEAT COVER

### 1-4. Close the cover base

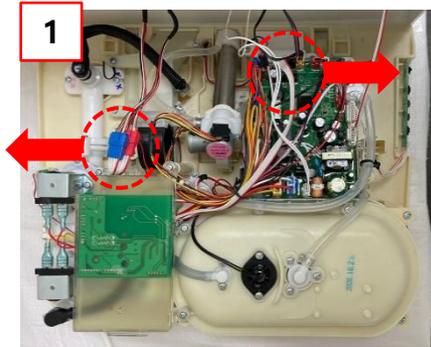


① Organize all the wires in the directions as above not to interfere the nozzle movement.



② Close the cover base in the arrow direction as above.



③ Push down using your palms as above to hear clicks.

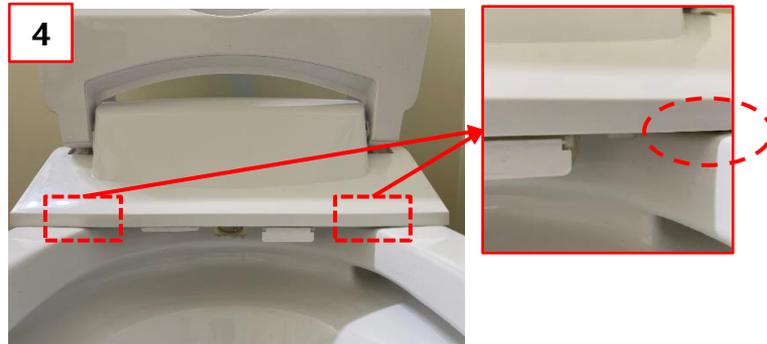

④ Check whether the cover base is assembled perfectly. If you heard clicks, it's perfectly done.



⑤ Screw the 2 screws back using a Phillips head driver.