


**If the nozzle doesn't coming out check the catch plate is flat or not**

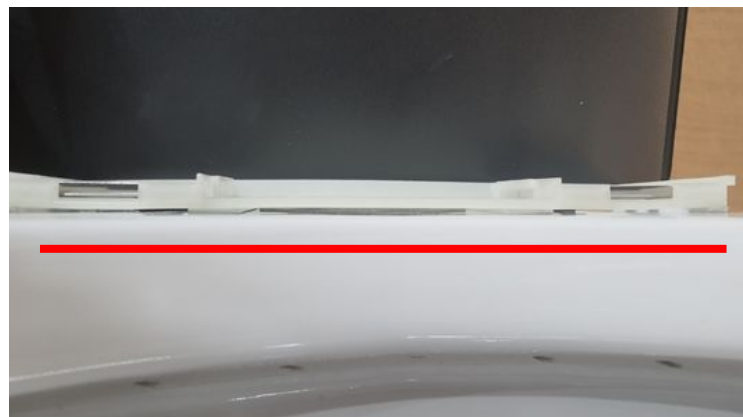

If the catch plate is not flat then it may causes the nozzle not coming out.

Please unscrew the bolts and install the catch plate again.