

Quick Guide VOVO AIR CARE

※ Please plug in 10 seconds before using the WARM temperature Function.

VOVO
Air Care



ON/OFF



LOW/HIGH



COOL/WARM



FOOT/BODY

100 lb
kg



KIDS

SCALE



POWER

Power

Connect power and Power LED will turn on at the same time.

- Auto Mode : When the weight above 10kg is detected, the dryer will operate automatically.

+ Manual Mode: Please touch the power button for more than 3 seconds while not standing on the scaffolding.



LOW/HIGH

Wind Volume Control

Touch the icon to turn the scale mode on/off



COOL/WARM

Temperature Control

Touch the icon to change the wind temperature from cool to warm.

When the warm air function is initially turned on, the wind temperature will gradually increase.



FOOT/BODY

Dryer Mode Control

Touch the icon to change the dryer mode from Foot dryer to Body dryer.



SCALE

Scale Mode

Touch the icon to turn the scale mode on/off

- When the weight is below 10kg, please use the manual mode.

100 lb
kg

Scale Display (kg, lb)

To change the measurement unit, touch the scale icon for more than 3 seconds.



KIDS

Kids Mode

When the device detects children under 20kgs, it will automatically start with Low setting.

Water Leak Sensor

The product will shut off automatically when the sensor detects the leakage.