 
 




How to use Remote Control

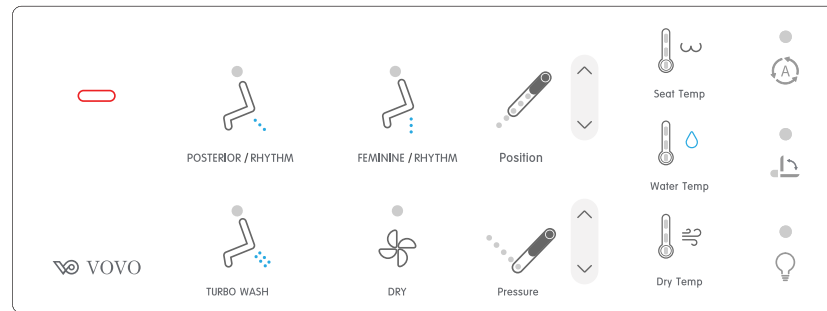

- TCB 090SA



  - TCB 090S

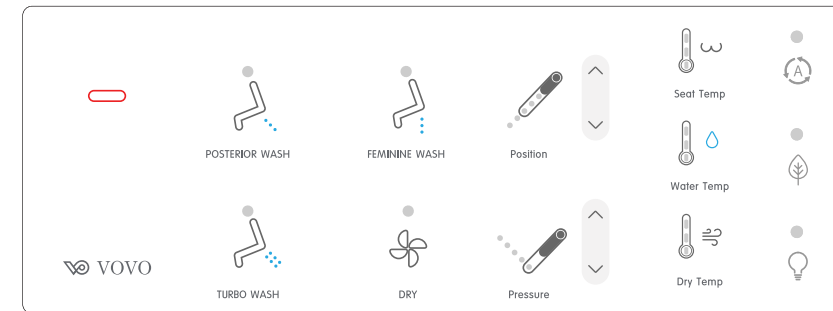

● Flush (Full. Small) Button

- Press the flush button to activate the full or small flush.

● Power Save On / OFF

- In power save mode, water temperature, and seat temperature will be adjusted efficiently when not used for more than one hour.
- When the product is used again, the temperature returns back to the original setting.

● Position

- The nozzle position can be adjusted in five steps.

● Water Temp

- It is possible to adjust the water temperature of Posterior wash, Feminine wash, and Turbo wash in three steps.

● Seat Cover Opening/Closing

- Press the seat cover button to automatically open and close the toilet seat cover

● Nozzle Cleaning

- Press the nozzle cleaning button to clean the nozzle in a moving forward position.

● Seat Temp

- The toilet seat temperature button can adjust the temperature of the toilet seat in three steps.

● Dry Temp

- The temperature of the drying function can be adjusted in three steps.

● Seat Cover and Seat Closing

- Press the close button to close both the toilet seat cover and toilet seat.

● Stop

- To stop the function being used, press the STOP button.

● Turbo Wash

- Press the Turbo Wash button to activate washing water spray from the nozzle.

● Auto Flush ON/OFF

- The seat sensor detects user's seating and flushes automatically by differentiating large and small flushes based on user's seated time. (Less than 2mins, small flush / more than 2 mins, large flush)

● Cover and Seat Opening

- When you press the cover or toilet seat buttons, both the toilet seat cover and the toilet seat are automatically open and closed.

● Posterior/Rhythm

- Performs Posterior wash(Back area of the body) by pushing the button once.
- Performs Rhythm function when pushed the button again while the posterior function is on the process.
- During Rhythm function, the nozzle will move to wash wide area and provide pulsating massage effect with changing water pressure.

● Dry

- Dry off the water after using the posterior Wash, Feminine Wash, and Turbo Wash function.
- It takes time to dry completely.

● Auto Lid Open / Close

- When you stand in front of the toilet, the lid automatically opens, and when you move away from the toilet, the lid automatically closes.

● Auto Deodorant ON / OFF

- Press the deodorant button to remove the odor inside the bowl.

● Feminine/Rhythm

- Performs Feminine wash(Frontal area of the body) by pushing the button once.
- Performs Rhythm function when pushed the button again while the feminine function is on the process.
- During Rhythm function, the nozzle will move to wash wide area and provide pulsating massage effect with changing water pressure.

● Pressure


- It is possible to adjust the water pressure of Posterior wash, Feminine wash, and Turbo wash in five steps.

● UV LED Light ON / OFF (Option)


- UV LED eliminates germs and bacteria as well as sterilizing the bowl.
- When UV LED function is activated, UV LED will turn on and it will automatically turn off while seated.

How to use Remote Control

- PB-707S

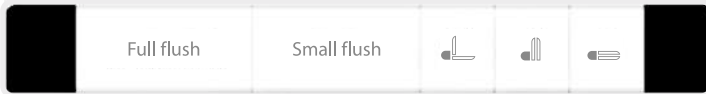

- PB-101S

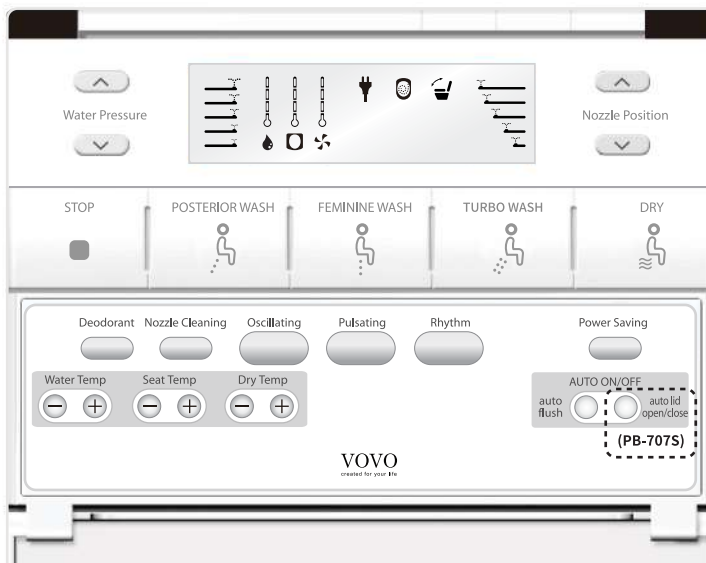

● Flush (Full. Small) Button

- Press the flush button to activate the full or small flush.

● Cover and Seat Opening

- When you press the cover or toilet seat buttons, both the toilet seat cover and the toilet seat are automatically open and closed.

● Stop

- To stop the function being used, press the STOP button.

● Water Temp

- It is possible to adjust the water temperature of Posterior wash, Feminine wash, and Turbo wash in three steps.

● Nozzle Cleaning

- Press the nozzle cleaning button to clean the nozzle in a moving forward position.

● Rhythm

- If you push 'Rhythm' button during the posterior Wash or Feminine function, nozzle will move to wash wide area and provide pulsating massage effect with changing water pressure.

● Seat Temp

- The toilet seat temperature button can adjust the temperature of the toilet seat in three steps.

● (PB-707S) Auto Lid Open / Close

- When you stand in front of the toilet, the lid automatically opens, and when you move away from the toilet, the lid automatically closes.

● Seat Cover Opening/Closing

- Press the seat cover button to automatically open and close the toilet seat cover

● Water Pressure

- It is possible to adjust the water pressure of Posterior wash, Feminine wash, and Turbo wash in five steps.

● Posterior Wash

- Press the posterior button to activate washing water spray from the nozzle.

● Dry

- Dry off the water after using the posterior Wash, Feminine Wash, and Turbo Wash function.
- It takes time to dry completely.

● Oscillating

- When you press the move button, the nozzle moves forward and backward.

● Power saving ON / OFF

- You can turn the power saving function ON / OFF feminine key. to save the unused time and electricity cost.

● Dry Temp

- The temperature of the drying function can be adjusted in three steps.

● Seat Cover and Seat Closing

- Press the close button to close both the toilet seat cover and toilet seat.

● Nozzle Cleaning

- Press the nozzle cleaning button to clean the nozzle in a moving forward position.

● Feminine Wash

- Press the feminine button to activate washing water spray from the nozzle.

● Deodorant ON / OFF

- Press the deodorant button to remove the odor inside the bowl.

● Pulsating

- Press the pulsating button to repeat the intensity of the water pressure from strong to weak.

● Water Temp



- It is possible to adjust the water temperature of Posterior wash, Feminine wash, and Turbo wash in three steps.

● Auto Flush ON/OFF

- The seat sensor detects user's seating and flushes automatically by differentiating large and small flushes based on user's seated time.
(Less than 2mins, small flush / more than 2 mins, large flush)

How to use Remote Control

- TCB 8100B / TCB 8100W

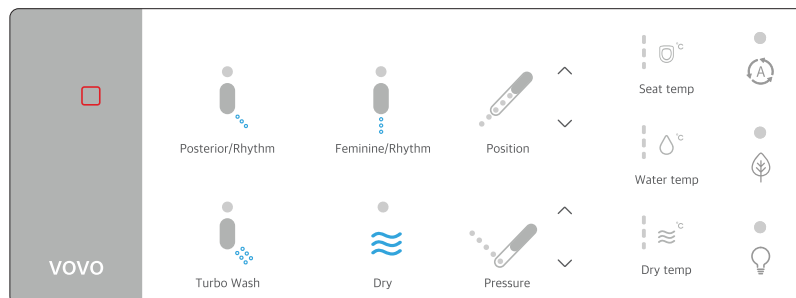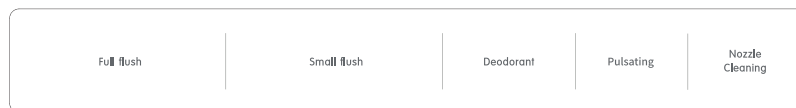

● Flush (Full. Small) Button

- Press the flush button to activate the full or small flush.

● Auto Deodorant ON / OFF

- Press the deodorant button to remove the odor inside the bowl.

● Pulsating

- Press the pulsating button to repeat the intensity of the water pressure from strong to weak.

● Nozzle Cleaning

- Press the nozzle cleaning button to clean the nozzle in a moving forward position.

● Stop

- To stop the function being used, press the STOP button.

● Posterior/Rhythm

- Performs Posterior wash (Back area of the body) by pushing the button once.
- Performs Rhythm function when pushed the button again while the posterior function is on the process.
- During Rhythm function, the nozzle will move to wash wide area and provide pulsating massage effect with changing water pressure.

● Feminine/Rhythm

- Performs Feminine wash (Frontal area of the body) by pushing the button once.
- Performs Rhythm function when pushed the button again while the feminine function is on the process.
- During Rhythm function, the nozzle will move to wash wide area and provide pulsating massage effect with changing water pressure.

● Position

- The nozzle position can be adjusted in five steps.

● Turbo Wash

- Press the Turbo Wash button to activate washing water spray from the nozzle.

● Dry

- Dry off the water after using the posterior Wash, Feminine Wash, and Turbo Wash function.
- It takes time to dry completely.

● Pressure

- It is possible to adjust the water pressure of Posterior wash, Feminine wash, and Turbo wash in five steps.

● Seat Temp

- The toilet seat temperature button can adjust the temperature of the toilet seat in three steps.

● Water Temp

- It is possible to adjust the water temperature of Posterior wash, Feminine wash, and Turbo wash in three steps.

● Dry Temp

- The temperature of the drying function can be adjusted in three steps.

● Auto Flush ON/OFF

- The seat sensor detects user's seating and flushes automatically by differentiating large and small flushes based on user's seated time. (Less than 2mins, small flush / more than 2 mins, large flush)

● Power Save On / OFF

- In power save mode, water temperature, and seat temperature will be adjusted efficiently when not used for more than one hour.
- When the product is used again, the temperature returns back to the original setting.

● UV LED Light ON / OFF (Option)

- UV LED eliminates germs and bacteria as well as sterilizing the bowl.
- When UV LED function is activated, UV LED will turn on and it will automatically turn off while seated.