

POWERGLYDE™ PLUS

SIDE X SIDE STROLLER

Jeep®

INSTRUCTION MANUAL

11808

Styles and colors may vary

**▲ WARNING:
CHOKING HAZARD**

Adult assembly required because of small parts. Keep assembly parts out of reach of children under 3 years.



Read all instructions BEFORE assembly and USE of product
KEEP INSTRUCTIONS FOR FUTURE USE.

Customer Experience Center
email: gcs@DeltaChildren.com

DELTA♥CHILDREN

www.DeltaChildren.com

DGP-IM-07082021

WARNING

WARNING: Please follow all of these instructions to ensure the safety of your child.

Keep these instructions for future reference.

WARNING: Failure to follow these instructions could result in serious injury or death.

- Avoid serious injury from falling or sliding out. **ALWAYS** insure that the child is properly positioned by using the safety harness according to these instructions. **ONLY** children who have developed enough upper body control to sit without leaning forward can use the front seat in the upright position.
- **NEVER** leave children unattended.

WARNING: CHOKING HAZARD Adult assembly required because of small parts.

Keep (assembly parts) out of reach of children under 3 years.

CAUTION: Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause hazardous unstable conditions.

TO PREVENT INJURY

- Make sure all body parts are clear of the stroller when folding and unfolding.
- **DO NOT** place hot liquids in the cup holder. Hot liquids can burn your child.
- The maximum weight that can be carried in the lower basket, and child tray, each is 3 lbs (1.36 kg). Excessive weight may cause a hazardous unstable condition to exist.
- Before allowing the children near the stroller, be certain the stroller is fully erect and latched in the open locked position.
- Use of the stroller with children weighing more than 50 pounds (22.62 kg) or over 42 inches (106.7 cm) tall, may cause a hazardous unstable condition to the stroller.
- **NEVER** use the stroller on stairways or escalators.
- **NEVER** allow your stroller to be used as a toy.
- **NEVER** use the stroller in conjunction with bicycles, skateboards, roller skates, or in-line skates. Please discuss using the jogging stroller with your health care provider prior to jogging use.
We recommend that the child occupant needs to be 6 months of age, at the minimum, before use of the stroller.

Product features and decorations may vary from the photo.

CARE AND MAINTENANCE

- To clean the plastic parts on stroller use a mild cleaning solution with warm water on a sponge or damp cloth. Hand wash fabric with damp cloth and air dry. Do not use bleach.
- To keep your stroller wheels from squeaking, use silicone or graphite based lubricant.
- Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed, discontinue use of stroller if it should become damaged or malfunctions.



Before returning this product to the store! Let's see if we can assist you!

- **Not sure how to assemble our product?**

Visit our site for easy to follow instructions along with some Tricks and Tips assembly video's
<https://www.deltachildren.com/pages/instructions>

- **If you are missing a piece or have a damaged part**

Please contact our Consumer Experience Center for assistance at gcs@DeltaChildren.com.
To better assist you please have your Style #, Lot # and Manufacturer Date information available along with the part number that you need assistance with.

- **In the event we do not have a replacement part available**

You may need to return your product to the retailer for an exchange or refund.

- **Warranty**

In order to protect your investment, don't forget to register your product.
You may also wish to consider purchasing our extended warranty.
Visit <https://www.deltachildren.com/pages/extended-warranty> for more details.

- **Please note:**

"All Final", "As Is" or Third Party/Liquidator sales are not covered under our Limited Manufacturer Warranty..

DELTA CHILDREN

LIMITED MANUFACTURER WARRANTY

This Delta product is warranted to be free from defects for a period of 90 days from the date of purchase under normal use. This warranty extends only to the original retail purchaser and is valid only when supplied with proof of purchase, or if received as a gift, when the registration is on file with Delta. This limited manufacturer warranty does not cover the following:

- Products purchased as floor models or samples.
- Items purchased on an “as-is” basis, as a second hand product, or as a resale product.
- Items purchased at a Final sale, a “Going out of Business” sale, or a Liquidation sale.

TO REGISTER YOUR PRODUCT for important safety alerts and updates to your product please visit www.deltachildren.com

TO REPORT A PROBLEM, please log on to www.deltachildren.com and click the Consumer Care Tab, or contact us by email at gcs@DeltaChildren.com

Date of Purchase: _____ (you should also keep your receipt)

EXTENDED WARRANTY

DON'T MISS YOUR CHANCE TO BE COVERED FOR ALL OF LIFES MISHAPS!

With Delta's Extended Warranty, you're covered for mechanical failure from normal use or if your item stops working due to normal wear and tear, plus all those unexpected surprises.

2 YEARS OF PROTECTION

For Additional Information:

 
Simply visit our Website, register your product, and add the Extended Warranty

<https://www.deltachildren.com/pages/product-registration>


Extended Warranty only available in the following States: Arkansas, Colorado, Delaware, District of Columbia, Georgia, Idaho, Illinois, Indiana, Iowa, Kansas, Kentucky, Louisiana, Maryland, Michigan, Mississippi, Missouri, Nebraska, Nevada, New Hampshire, New York, North Carolina, North Dakota, Pennsylvania, Rhode Island, South Dakota, Tennessee, Utah, West Virginia

PARTS


IMPORTANT! Please remove all parts from the package and identify them before assembly.
IMPORTANT! Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts, or sharp edges. **NEVER** use if any parts are missing or broken. Contact manufacturer for replacement parts and instructions if needed. Never substitute parts. **IMPORTANT!** Adult assembly is required.

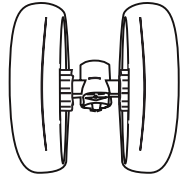


**Front Swivel
Wheels (x3)**

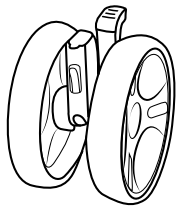 


**Rear Non-Swivel
Wheels (x3)**

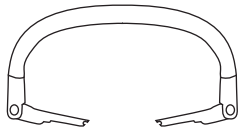 


Child Bar (x2)

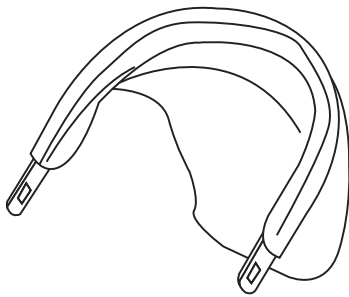 

Canopy (x2)

 

Cup Holder

 


Handle Bar (Left)



Handle Bar (Right)




 ***Screw is actual size to scale
M5 (31MM) Screw (X2)**

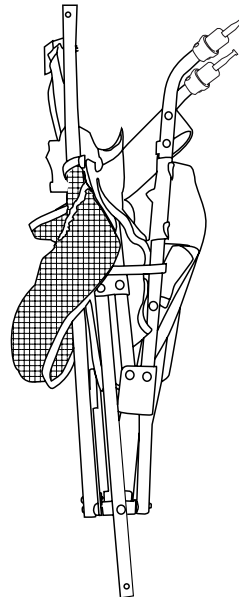

Stroller Frame

 
ASSEMBLY

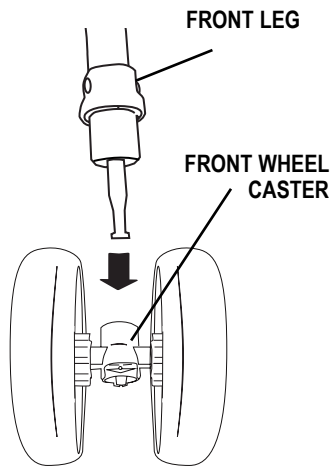


1

ATTACHING FRONT SWIVEL WHEELS

- Slide the front wheel caster onto the front leg as shown until you hear a “click”.
- Pull down on the front wheel assembly to make sure it is securely attached to the front leg.
- Repeat this procedure to attach the other front wheel assemblies.

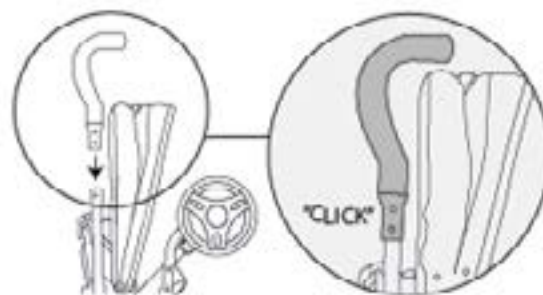

*Screw is actual size to scale
M5 (31MM) Screw (X2)

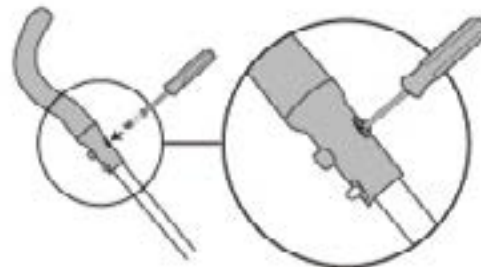


3

ATTACHING LEFT & RIGHT HANDLE BARS

- Locate a LEFT & RIGHT handle bar.
- Align the left handle bar to the left post of stroller frame and assemble until you hear a “CLICK”.
- Locate a M5 screw and assemble to the top hole above the valco pin and secure with a screw driver. Make sure the head of the M5 screw is facing outward of the stroller frame.
- Once completed, repeat steps for the right handle bar.


NOTE: Make sure the valco pin and M5 screw is aligned with the housing, until it is into a fully locked position. Pull upward on both handle bars to ensure they are all well fastened.

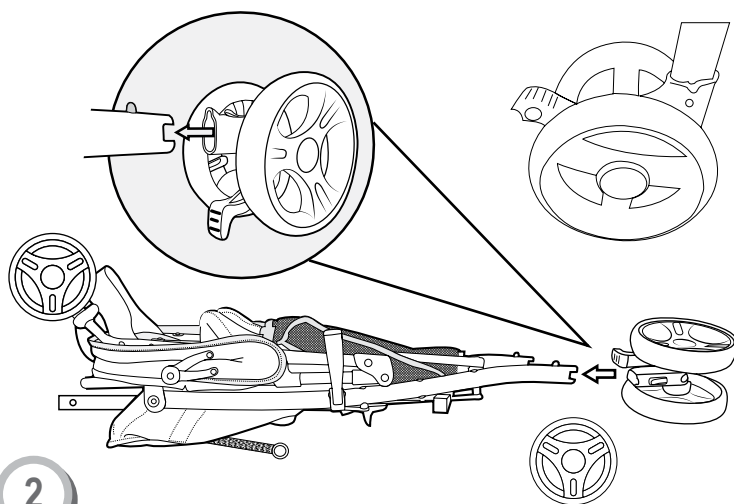

2

ATTACHING REAR NON-SWIVEL WHEELS

- Locate the legs on the rear of the stroller.
- Locate the Rear Non-Swivel Wheels and align with the stroller frame leg.
- Attach Rear Non-Swivel Wheel into the rear of the stroller frame leg.
Make sure the pin is aligned with the housing, until it “CLICKS” into a fully locked position. Make sure the wheel is in a fully locked position by pulling outward on the wheel.
- Repeat for all wheels.


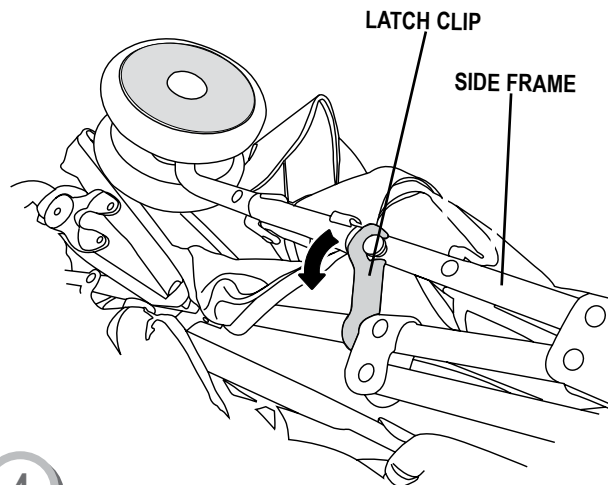


4

REMOVING LATCH CLIP

- Locate the latch clip on the side frame of the stroller.
- Pull to release latch clip.

ASSEMBLY

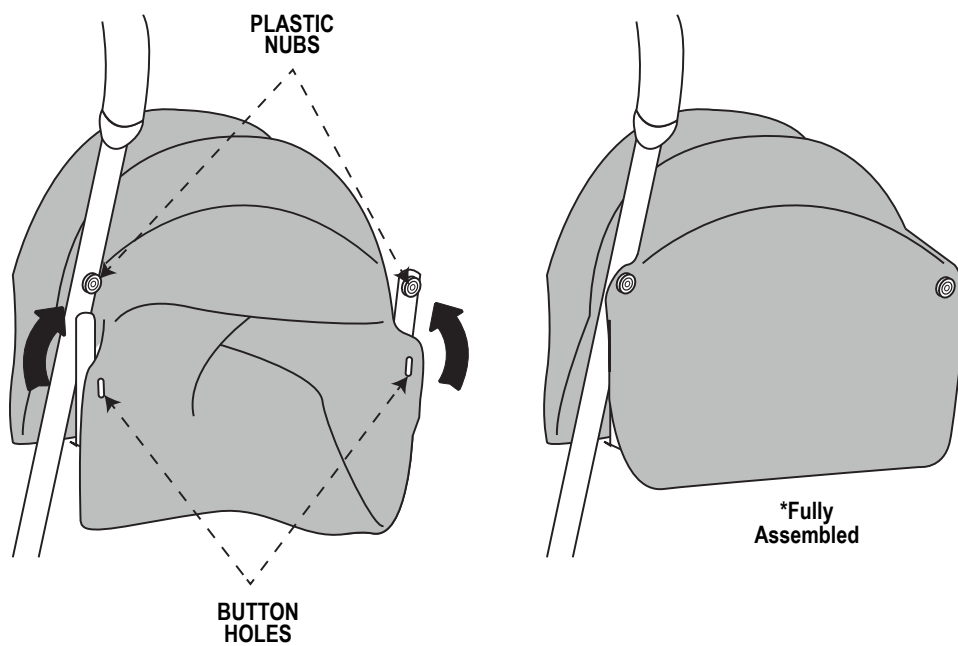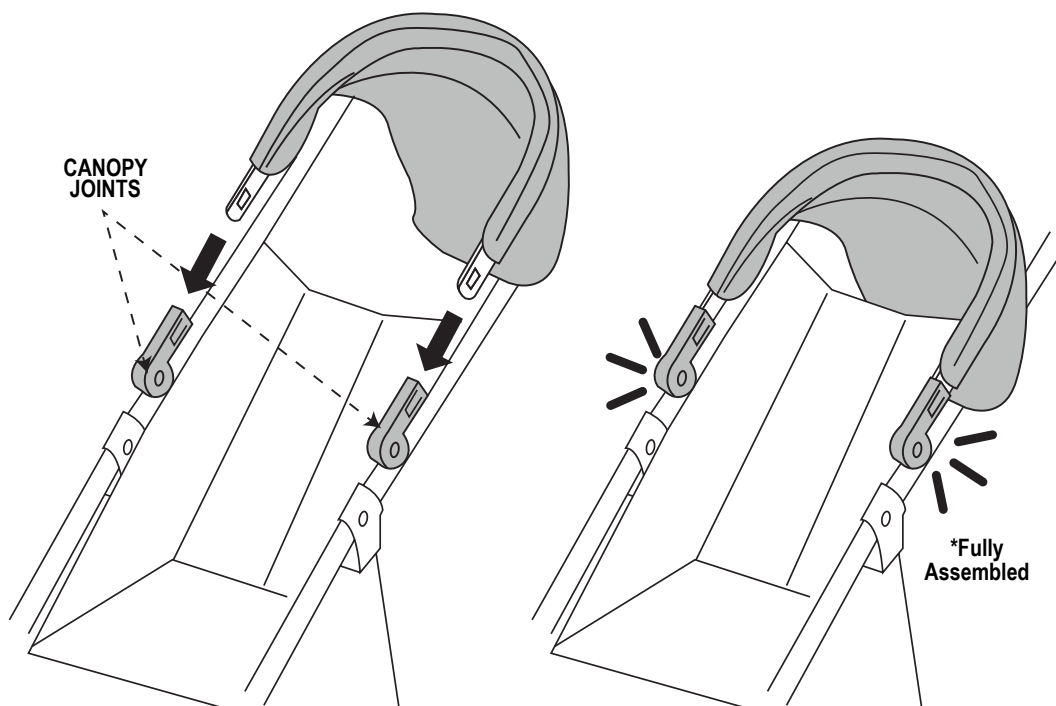


1

ASSEMBLING CANOPY

- Slide both ends of the canopy to the canopy joints as shown until you hear a “click” (Fig.1).
- Locate the two button holes behind canopy and attach it over the plastic nubs of the stroller frame (Fig. 1A).
- Repeat this procedure to attach the opposite canopy.

ASSEMBLY

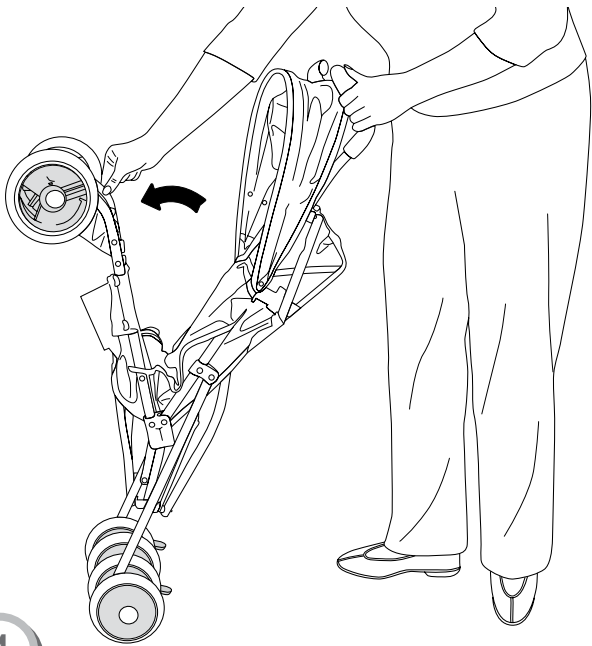


4

UNFOLDING STROLLER

- Position the stroller upright on its rear wheels.
- Grasp a handle with one hand, and with your hand push down on the front of the stroller to open.



WARNING: Be careful when unfolding stroller to avoid finger entrapment.

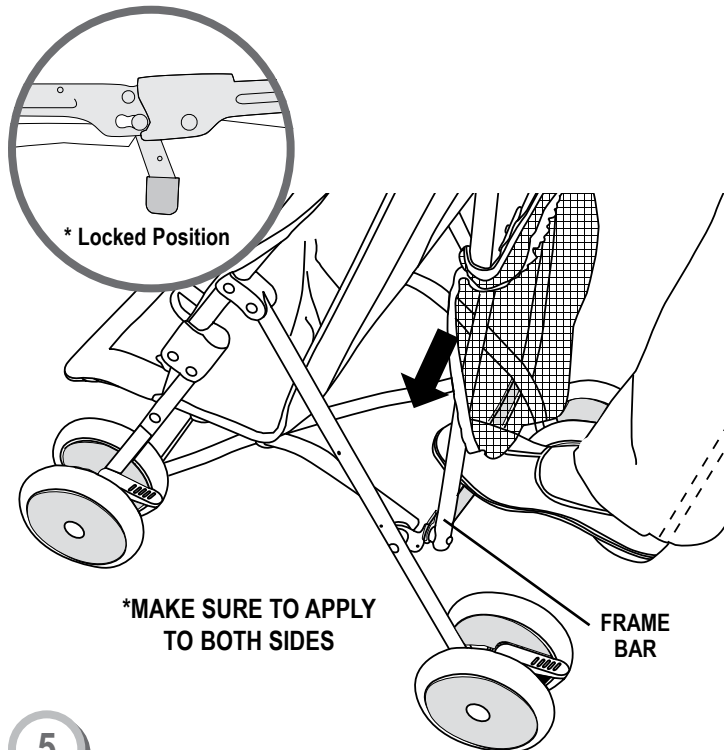

5

FINISHING UNFOLD


- With your foot, press down on the frame bar until it “clicks” into place.
- Check to be sure the stroller is locked open by pulling up on the frame bar.

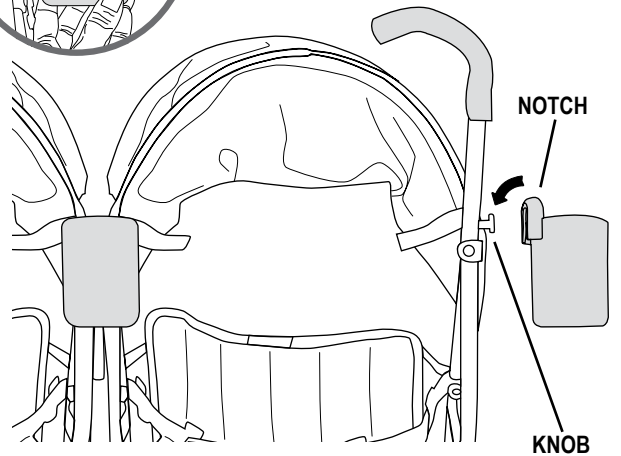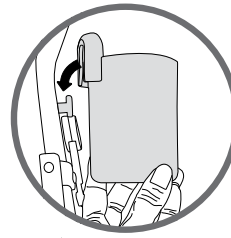

6

ATTACHING CUP HOLDER

- Locate the knob on the center or either side of the stroller.
- Fit the notch in the cup holder over the knob on the side rail and push down until you hear a “click”. Pull up on holder to ensure it is secure.

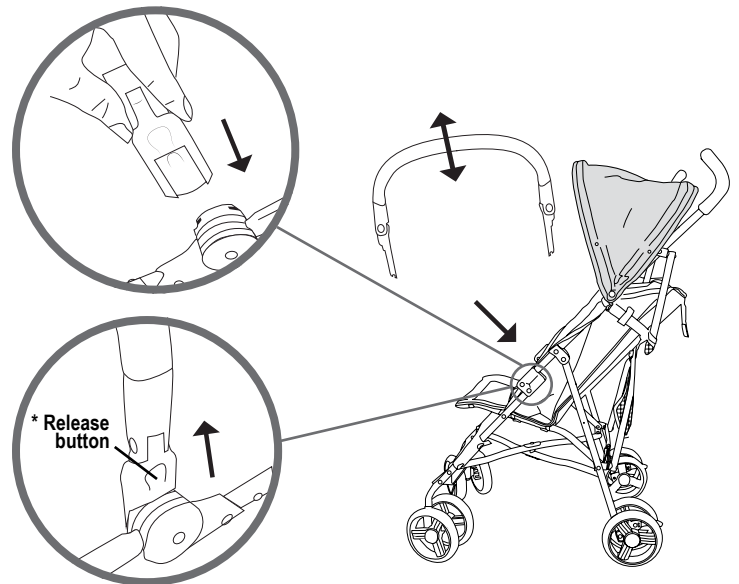

7

INSTALLING & REMOVING CHILD BARS

- To install child bar: Align the child bar with the slot on the frame and slide in until you hear a ‘CLICK’. Child bar is properly inserted when release buttons are in the raised position.
- Repeat for remaining child bar.
- To remove child bar: Push in release buttons located at child bar connection slots and pull the child bar away from the stroller frame.
- Repeat for remaining child bar.

NOTE: Child bar can be inserted in either direction.

NOTE: Make sure the child bar is secure before use by pulling on bar.

SETUP & USE

WARNING

PREVENT SERIOUS INJURY FROM FALLS OR SLIDING OUT:


- **ALWAYS** use the restraint system.
- Only children who have developed enough upper body control to sit without leaning forward can use the front seat in the upright position.
- **NEVER** leave child unattended.
- **DO NOT** use the storage bag to carry children.

TO PREVENT PRODUCT FROM TIPPING OVER:

- **DO NOT** exceed the maximum storage weight limit of 3 lbs (1.36 kg) in the storage bag.
- **DO NOT** exceed the maximum storage weight limit of 3 lbs (1.36 kg) in the cupholder.
- **DO NOT** place additional items on this product, except as recommended in the instructions.

TO PREVENT INJURY:

- Make sure all body parts are clear of the stroller when folding and unfolding.
- **DO NOT** place hot liquids in the cup holder. Hot liquids can burn your child.

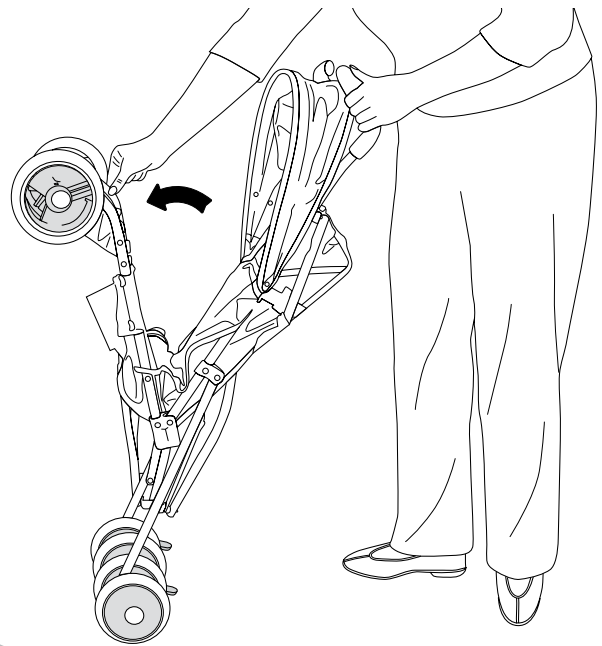


2

UNFOLDING STROLLER

- Position the stroller upright on its rear wheels.
- Grasp a handle with one hand, and with your hand push down on the front of the stroller to open.


WARNING: Be careful when unfolding stroller to avoid finger entrapment.

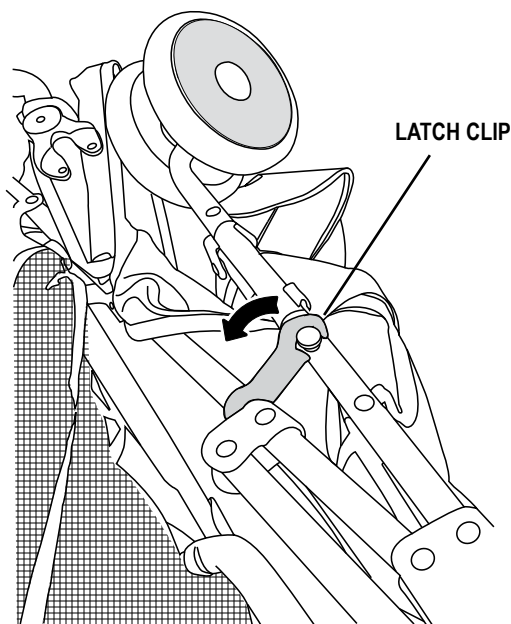

1

REMOVING LATCH CLIP

- Locate the latch clip on the side of the stroller.
- Pull to release the latch clip on the side of the stroller.

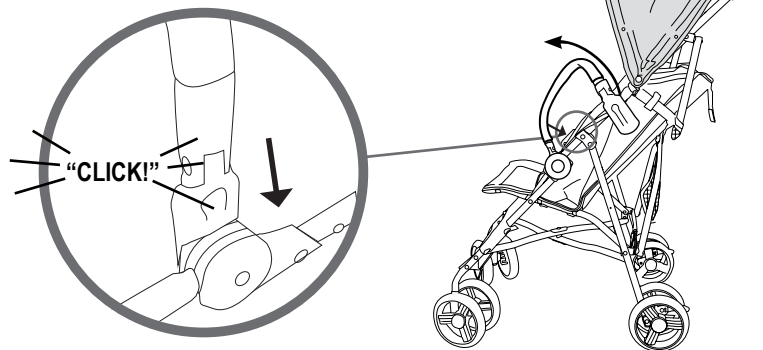


3

Connecting child bars after unfolding.

- Swing child bar around from back. Then rotate child bar so that it crosses over the seat.
- Align the child bar with the slot on the frame and slide in until you hear a 'CLICK'. Child bar is properly inserted when release buttons are in the raised position.
- Repeat for remaining child bar.


SETUP & USE

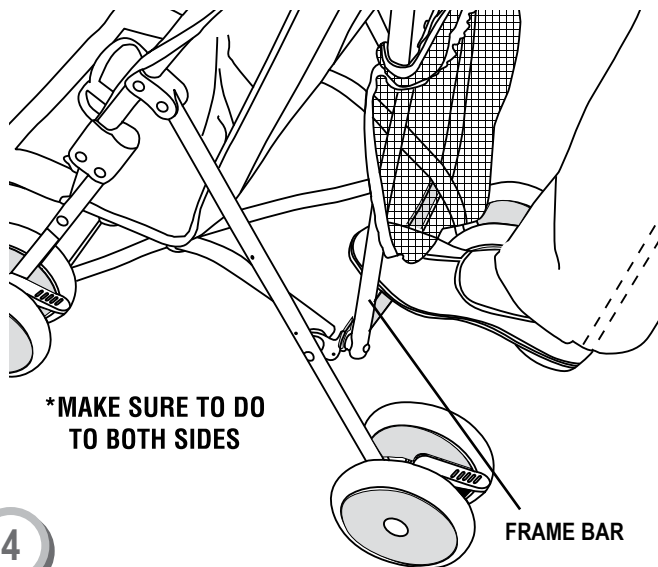

4

FINISHING UNFOLD


- With your foot, press down on the frame bar until it “clicks” into place.
- Check to be sure the stroller is locked open by pulling up on the frame bar.

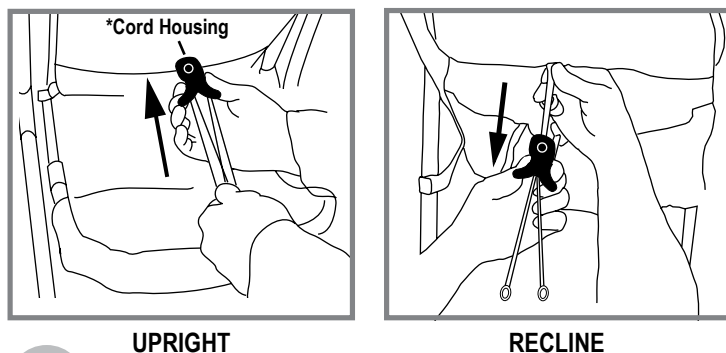

5

SEAT RECLINE POSITIONING

- To recline stroller seat squeeze both sides of cord housing and pull away.
- To return to an upright position hold bottom cord loops while squeezing cord housing and move cord housing upwards towards the backseat, as shown.

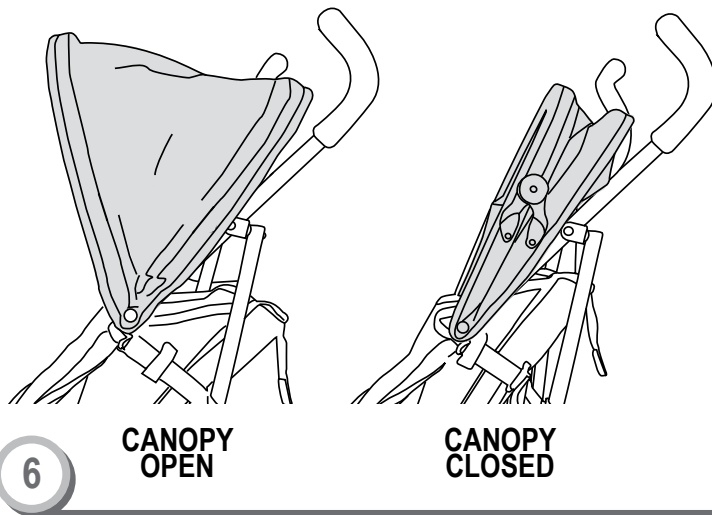


6

CANOPY
OPEN

CANOPY
CLOSED

CANOPY ADJUSTMENT

- The canopy can be adjusted to an open or closed position.

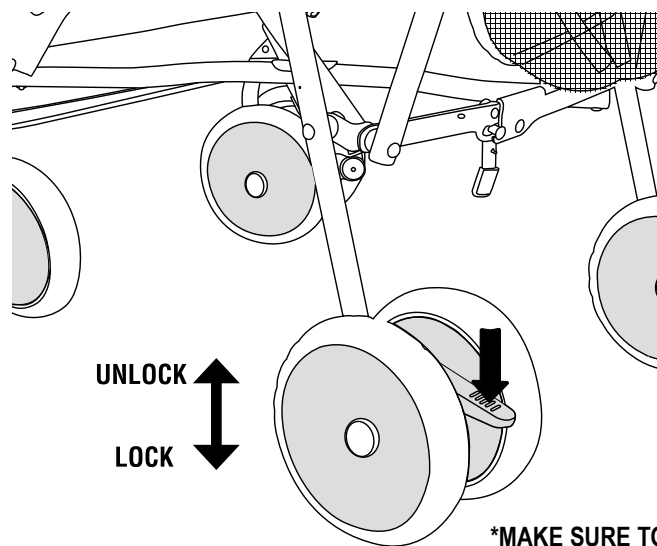

7

REAR WHEEL BRAKES

- To lock rear wheels, press all brake pedals down until they “click” into the locked position. Make sure the brake pedals are pressed down completely.

NOTE: Always set all brake pedals whenever you park the stroller.

- To unlock rear wheels, lift all brake pedals until they “click” into the unlocked position.



SECURING CHILD

Before Placing your Child in Stroller:

Close Canopy. Press both brake pedals down until they “click” into the lock position.


Make sure the brake pedals are pressed down completely.

Always set both brake pedals when parking the stroller.

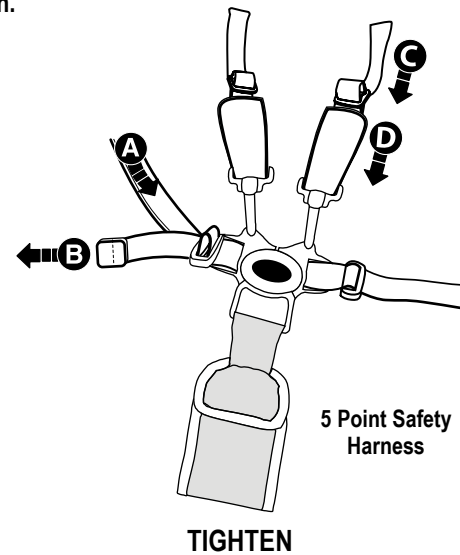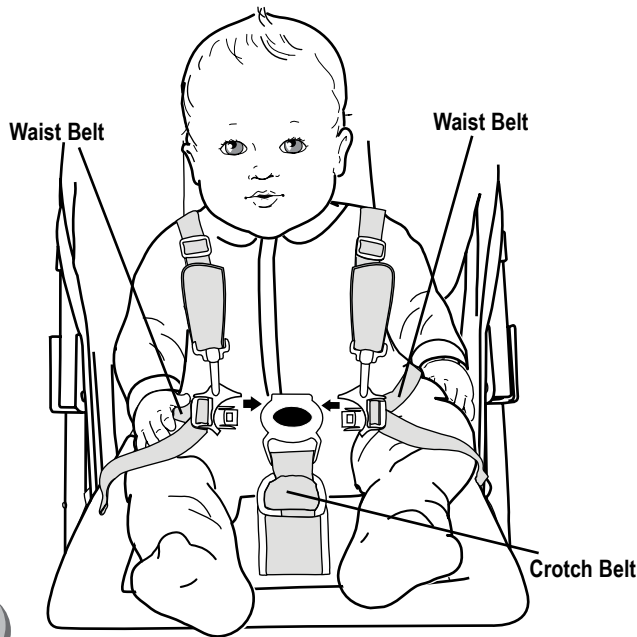

Securing Child

- Place your child in the stroller. Position the crotch belt between your child’s legs.
- Pull shoulder straps over child’s arm and shoulder and fasten both strap ends to the restraint system.
- Fasten both waist belts to the buckle on each side of the crotch belt. Make sure you hear a “click” on both sides.
- Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached.

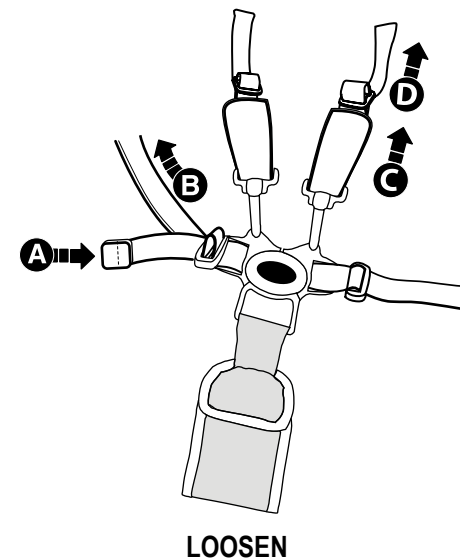

3

To tighten the waist belts and shoulder straps:

- Feed the anchored end of a waist belt up through the buckle to form a loop **A**. Pull the free end of the waist belt **B**.
- Repeat this procedure to tighten the other waist belt.
- Feed the top end of the shoulder strap through the plastic stay to form a loop **C**. Pull the bottom end down to tighten the strap **D**.
- Repeat this procedure to tighten the other shoulder strap.

To loosen the waist belts and shoulder straps:

- Feed the free end of the waist belt up through the buckle to form a loop **A**. Enlarge the loop by pulling on the end of the loop toward the buckle. Pull the anchored end of the waist belt to shorten the free end of the waist belt **B**.
- Repeat this procedure to loosen the other waist belt.
- Feed the bottom end of the shoulder strap through the plastic stay to form a loop **C**. Pull the top end up to loosen the strap **D**.
- Repeat this procedure to loosen the other shoulder strap.


Please Note: After adjusting the restraint system to fit your child, make sure you pull on it to be sure it is securely fastened.

2

- Tighten each waist belt and shoulder strap so that the restraint system is snug against your child.

Please refer to the next section for instructions to tighten the waist belts.


STORAGE

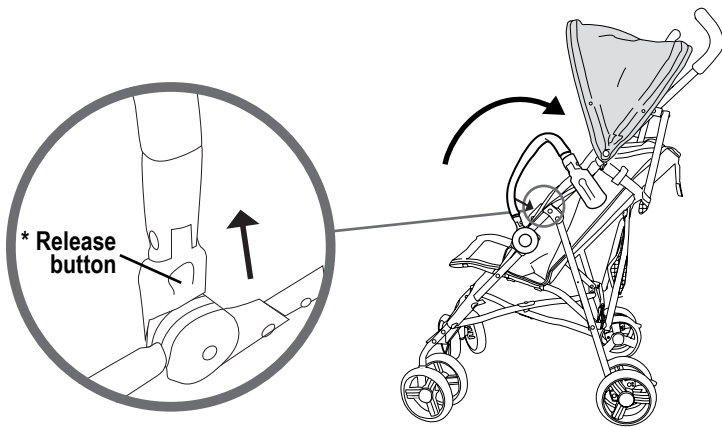

1

Folding with child bars

- To prepare child bar: Push in release button located at the inside child bar connection slot in the middle section of the stroller, then rotate child bar outward away from the center.
- Repeat for remaining child bar.

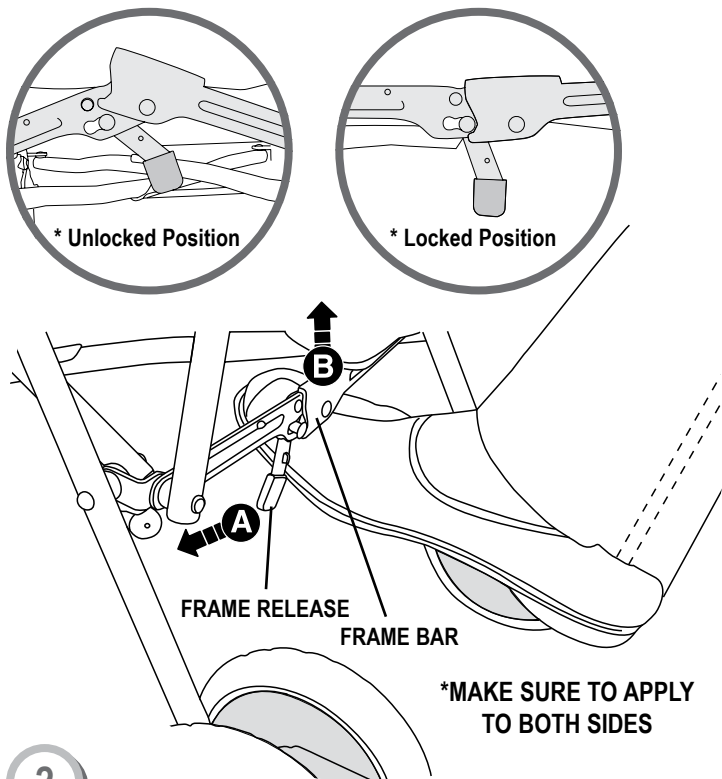


2

FOLDING STROLLER

Hint: Make sure canopies are closed before folding the stroller.


- Using your foot, slide the frame release to the left **A**, then push up on the frame bar **B**.

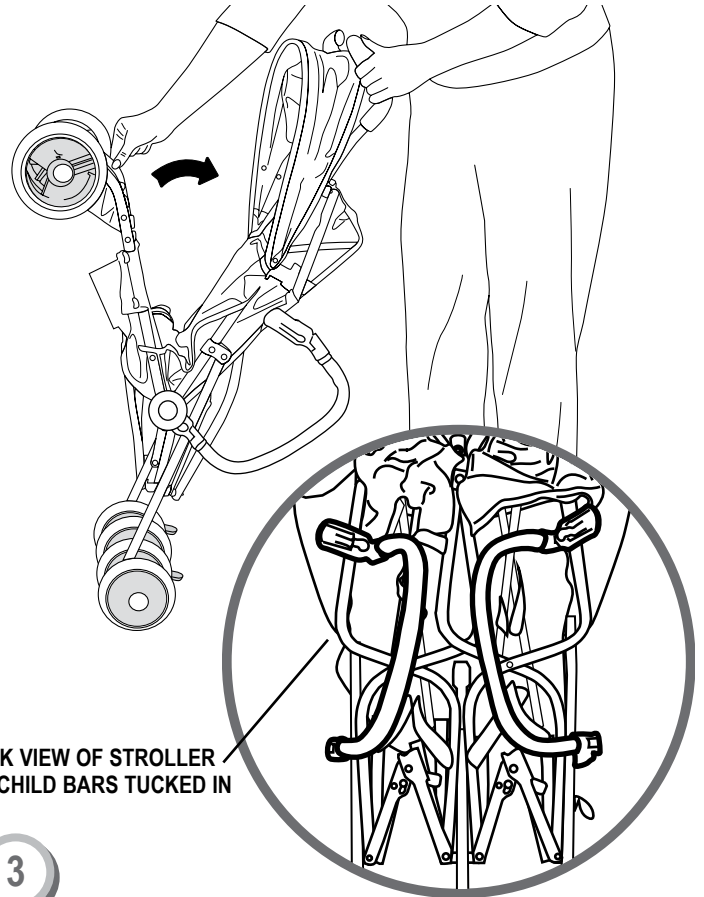

3

FINISHING FOLD

- Lift the front wheels towards the closed canopy.
- To complete fold, swing child bars around back and tuck them into folded seat back.

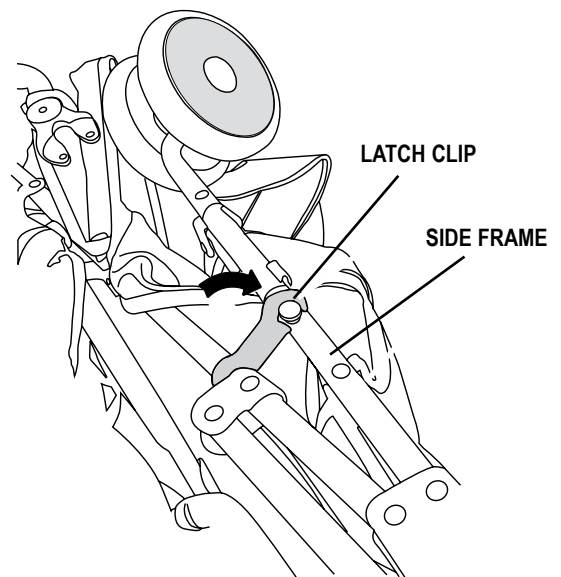

4

APPLYING LATCH CLIP

- Slide the latch clip onto the side frame to secure in the folded storage position.

NOTES

NOTES

NOTES

DELTA♥CHILDREN

Delta Children's Products Corp.
114 West 26th Street
New York, NY 10001
gcs@DeltaChildren.com
www.DeltaChildren.com

follow us



@deltachildren