

# nstruction Manua

• Thank you for purchasing this great product.


The ON/OFF switch and adaptor port can be found at the rear side of the unit.

- Please take a few moments to read through the manual to ensure proper operation.
- Please keep the instruction manual for future reference.

ON/OFF switch

Adaptor port


ITEM NO.: KA03-D20BB-L-A Infrared remote Control Probe(RF)

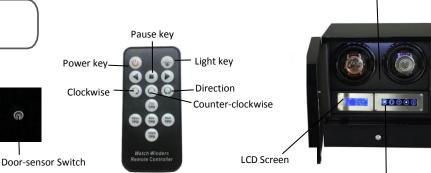

■ Item Specification ■

Adaptor: I/P: AC 100-240V,50/60 Hz, 0.2A O/P: DC 12V,1A Automatic Watch Winder with Smart LCD Touch Screen LCD Display shows all the available information about the operating

- modes of the Watch Winder. • Each winder is controlled independently and can be set to rotate clockwise,
- anti-clockwise or bi-directional, (rotating clockwise then anti-clockwise). • 5 different rotating settings. Turns per day can be set to either 650, 750, 850, 1000 or 1950 TPD.
- Can be set using the Remote Control.
- Exterior casing is coated using multi layers of lacquer to give a highly polished

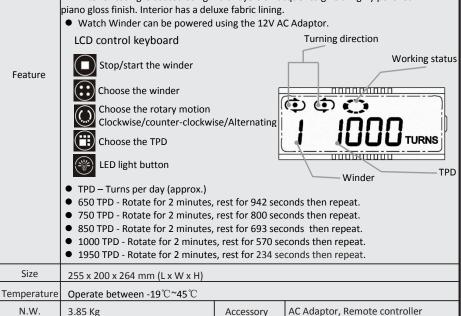

### Note:

Please use the AC adaptor Input: AC/100-240V, 50-60 Hz

LCD control keyboard

- Outlet:DC/12V 1A Remove the adaptor when the winder is not in use.
- Always turn off the power when inserting or removing watches
- Don't shake or rotate when winder is stationary.

#### **CUSTOMER SERVICES**

Phone No: +44 (0) 161 214 0700 Email: sales@timetutelary.co.uk Web: www.timetutelary.co.uk

#### Operation:

- Insert the adaptor into the adaptor port located at the back of the watch winder and plug it into the electrical outlet.
- Open the lid and carefully pull out the watch holder by forefinger and thumb.
- Place the watch on the watch holder.
- Place the watch in the winder it was taken from.
- Using the Mode switches, select the required rotating mode direction, clockwise, anti-clockwise or bi-directional and TPD, 650, 750, 850, 1000 or 1950.
- Press the ON/OFF switch at the back of the watch winder to ON, the watch winder should now be working.

## Attention:

- If you do not use this product for a long time, please switch off the unit and unplug from the electrical outlet.
- Please dispose of this product responsibly at an approved disposal site or recycling facility.
- Do not dispose of this product in normal household waste.
- If the watch winder is in the middle of a program and you use the off switch to stop the unit and remove a Watch, when you switch it back on it will restart at the beginning of the program.

