


# Instruction Manual

ITEM NO.: KA03-S24BC

- Thank you for purchasing this great product.
- Please take a few moments to read through the manual to ensure proper operation.
- Please keep the instruction manual for future reference.

The ON/OFF switch and adaptor port can be found at the rear side of the unit.  
Battery box at the bottom.

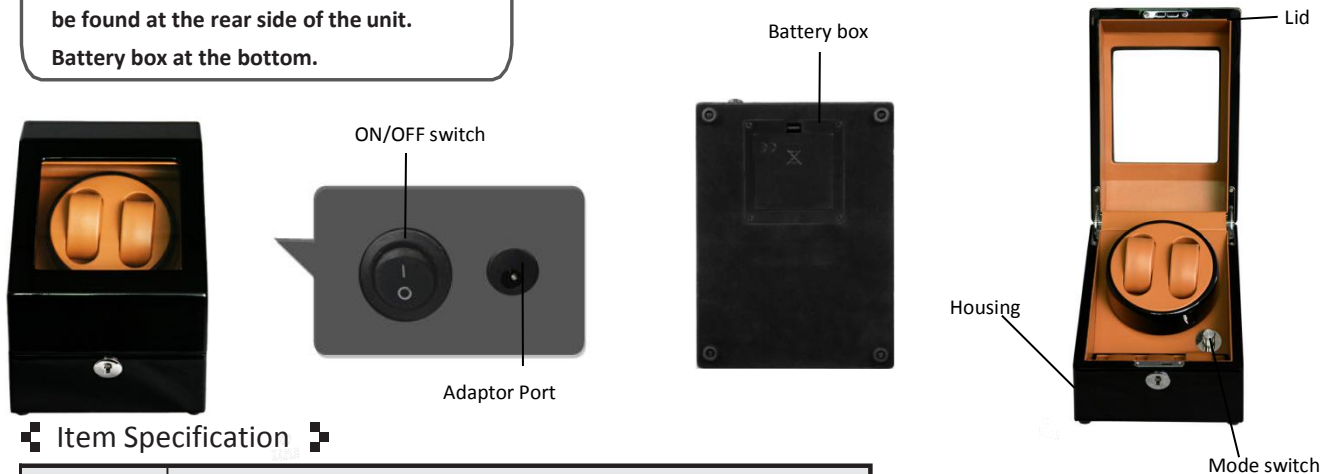

## Item Specification

Power	Adaptor: I/P: AC 100-240V,50/60 Hz, 0.2A O/P: DC 3V,1.5A Batteries: 2 x Type D Batteries (Not Included)		
Feature	<ul style="list-style-type: none"> <li>• Winding functions - Winds clockwise, anti-clockwise and bi-directional by operating the mode switches located inside the watch winder.</li> <li>• Rotating modes.</li> <li>• OFF - In this mode the watch winder is switched off.</li> <li>• ↻ - Rotates clockwise for 2 minutes, rests for 6 minutes then repeats. 3420 TPD.</li> <li>• ↺ - Rotates anti-clockwise for 2 minutes, rests for 6 minutes then repeats. 3420 TPD.</li> <li>• ↻↺ - Rotates clockwise for 2 minutes, rests for 6 minutes. Rotates anti-clockwise for 2 minutes, rests for 6 minutes then repeats. 3420 TPD.</li> <li>• ↻↺ - Rotates clockwise for 5 minutes then anti-clockwise for 5 minutes continuously for 3 hours then rests for 9 hours, then repeats. 3420 TPD.</li> </ul>		
Size	190 x 255 x 220 mm (L x W x H)		
Temperature	Operate between -19°C~45°C		
N.W.	2.87 Kg	Accessory	AC adaptor

**Note:**

- \* Please use the AC adaptor Input: AC/100-240V, 50-60 Hz or 2 x Type D Batteries (Not Included)
- \* Output: DC/3V 1.5A
- Remove the adaptor when the winder is not in use.
- \* Always turn off the power when inserting or removing watches.
- \* Don't shake or rotate when winder is stationary.

**CUSTOMER SERVICES**

Phone No: + 44 (0) 161 214 0700  
Email: sales@timetutelary.co.uk  
Web: www.timetutelary.co.uk

## Operation:

- Insert the adaptor into the adaptor port located at the back of the watch winder and plug into the electrical outlet or insert 2 x Type D batteries in the battery compartment.
- Open the lid and carefully pull out the watch holder by forefinger and thumb.
- Place the watch on the watch holder.
- Place the watch holder back in the winder it was taken from.
- Using the mode switch, select the required rotating mode direction, clockwise, anti-clockwise or bi-directional.
- Press the ON/OFF switch at the back of the watch winder to ON, the watch winder should now be working.

## Attention:

- If you do not use this product for a long time, please switch off the unit and unplug from the electrical outlet.
- Please dispose of this product responsibly at an approved disposal site or recycling facility.
- Do not dispose of this product in normal household waste.
- If the winder is in the middle of a program and you use the off switch to stop the winder and remove a Watch, when you switch it back on it will restart at the beginning of the program.