

KD-LMVC Instruction Manual

Thank you for purchasing the Kodak Essentials A4 Personal Laminator, KD-LMVC, under normal use and maintenance your Laminator will provide years of satisfactory performance. Please read the instruction manual carefully and retain for future reference.

General Safety.

When using electrical appliances, basic precautions should always be followed to reduce risk of injury or electric shock, including the following:

- Always unplug the appliance when not in use.
- This appliance is not intended for use by persons, (including Children), with reduced physical, sensory or mental capabilities or lack of experience or knowledge. They should be given supervision and instruction in the use of the appliance, by a person responsible for their safety.
- The laminator will become very hot in use and care should be taken when handling the machine. Do not touch the top of the machine as it will get hot.
- Protect against the risk of electrical hazards. Do not immerse the power cord, plug or appliance in water or other liquids, or use near water.
- Do not insert any metal objects or other foreign objects such as jewellery, hair, fingers or clothing into the appliance.
- Remove paper clips and staples before laminating.
- Do not operate the appliance with a damaged plug or power cord or after the appliance has malfunctioned or become damaged in some manner.
- If the Power Cord is damaged, it must be replaced by a qualified Engineer in order to avoid a hazard.
- The appliance should be installed near the outlet socket and the socket should be easily accessible.
- Only laminate paper or board. Do not laminate unusual objects.
- Do not use aerosol dusters or cleaners.
- Do not spray anything into or lubricate the appliance.

Setup:

- Operate the machine on a flat and stable surface.
- Ensure there is enough clear space at the rear of the machine for the laminated pouch to exit the machine.
- The KD-LMVC operates with laminating pouches 100 (2 x 50) microns – 250 (2 x 125) microns thick, (Credit card size to A4 size)


Operating the Laminator:

- The KD-LMVC is operated by a rocker switch, located at the right-hand side of the appliance. There are 2 positions **ON and OFF**.
- Plug the machines cable into a convenient 13 Amp domestic supply outlet.

- To Laminate press the switch to the ON position, laminating can begin when the Green "Ready" light comes on, which indicates the Laminator is hot enough to laminate, (Allow approx 3-5 minutes for the Laminator to warm up).
- Prepare the laminating pouch for inserting into the machine. **See How to load a laminating pouch below. Do not use pouches thicker than 250 microns (2 x 125microns per side)**
- When the machine has reached operating temperature, you may insert the pouch, (sealed edge first), squarely into the machine until it engages with the rollers. Never insert a pouch open edge first into the machine.
- The pouch will move through the machine and exit at the rear.
- During the process the **READY** light may go out as heat is absorbed by the laminating pouch, this is normal.
- There may be a slight smell from the laminating Pouch, this again is normal.
- Do not cut down Laminating Pouches to Laminate smaller sizes of Paper, smaller sizes of Pouches are available, see back of IM for details, please use these.
- Turn the laminator to **OFF** after use and remove the plug from the mains socket
- **DO NOT** laminate thermal printed paper, such as concert tickets, ultrasound photos as they may turn black.

How to load a Laminating Pouch:

- The laminating pouch is sealed along one side. Open the pouch and place the paper to be laminated centrally inside the pouch as close to the sealed edge as possible.
- Ensure there is an equal border all around the paper (e.g.: A4 paper should have a 3mm border). The sealed edge (not the open edges) is placed into the entry slot to start the lamination process.
- Always watch the pouch during the laminating process to ensure it comes out the other side of the Laminator. It may wrap around the rollers if not placed squarely and centrally in the entry slot, see below images.
- It takes approx. 60 secs to laminate an A4 pouch. If after 25-30secs the pouch has not started to emerge from the back of the machine, stop the laminator. At the back of the Laminator, on the right-hand side is a jam release button. Push it across to the left and hold, then pull the jammed pouch out from the front of the laminator.
- In the unlikely event the pouch is completely jammed inside the Laminator, please switch off, don't open the appliance. Only a qualified service engineer should repair the appliance.

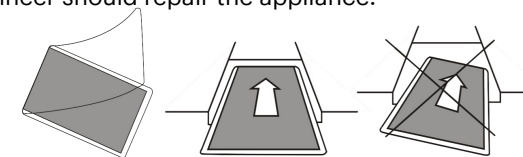

Pouch Thickness:

Laminating Pouches come in various thicknesses which are measured in microns. We recommend that for this Laminator you use pouches that are between 100-250microns, (0.1 -0.25mm thick), for the best laminating results.

IMPORTANT!

Do not touch the top of the machine during use, as it will get very hot and take approx.

3-4 hours to cool down. Do not place items on top of the machine at any time.

KD-LMVC Laminator Specification:

Rollers:	2 Roller (hot shoe)
Entry width:	230mm
Min lamination thickness:	100(2x50) micron
Max lamination thickness:	250 (2x125) micron
Min pouch size:	Credit card size (54x86mm)
Max pouch size:	A4 size (303 x 216mm)
Max lamination Thickness:	0.6mm, excluding the Pouch.
Lamination speed:	25cm/ min
Jam Release:	Yes
Warm-up:	3-5 minutes
Power consumption:	265 Watts
Input:	AC 220-240V, 1.15A
Dimensions:	330 x 106 x 60 mm (L x D x H)

Laminating Pouch Sizes:

A4 – 303 x 216mm A5 – 216 x 154mm A6 – 154 x 110mm A7 – 80 x 111mm


ID Card – 90 x 60mm Credit Card – 86 x 54mm

Model: KD-LMVC

Type: Essentials A4 Personal Laminator



KD-LMVC A4 Personal Laminator

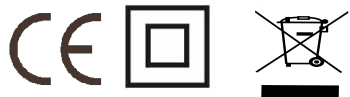

MADE IN CHINA

Disposal:

UK: Waste Electrical products/batteries should not be disposed of with household waste. Facilities exist, for your nearest facilities see www.recycle-more.co.uk or in store for details.

Please read the following instructions carefully before use and keep for future reference.