


A4 PAPER TRIMMER KD-TTA4-5

Specifications/Technical Data

Cutting Length	305mm	
Cutting Capacity	Straight cutting blade	5sheets (70gsm)
Cutting Size	A4 / A5 / A6 / A7 (70gsm)	
Net Weight	60gms	
Product Size (W x D x H)	353 x 95 x 21mm	

KODAK KD-TTA4-5 A4 Trimmer Instruction Manual

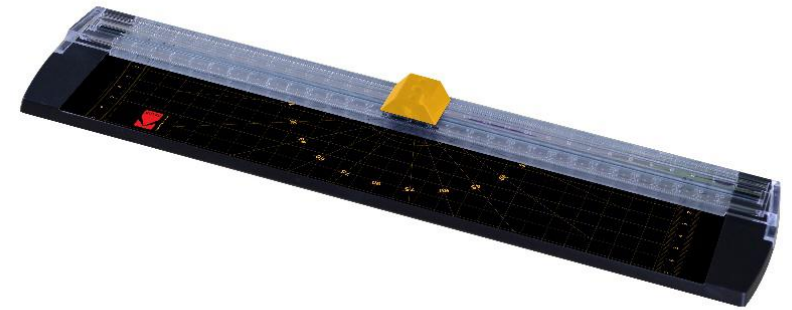

Please read these instructions carefully before use and keep for future reference.

Thank you for purchasing the Kodak Trimmer, KD-TTA4-5, under normal use your trimmer will provide years of satisfactory performance. Please read the instruction manual carefully and retain for future reference.

The trimmer has a straight cut blade which can cut a maximum of 5 A4 sheets of 70gms paper at the same time.

The maximum number of A4 Sheets that the blade can cut is based on the paper having a thickness of 70gsm, (grams per square metre). For 5 sheets at 70gsm the total paper thickness would be 350gsm, (5 x 70gsm). If you are using paper that is thicker than 70gsm you will need to reduce the maximum number of A4 sheets you can cut at the same time, to the following.

80gsm – Maximum of 4 A4 Sheets of paper.

90gsm– Maximum of 3 A4 sheets of paper.

100gsm – Maximum of 3 A4 sheets of paper.

Safety instructions



- Do not use the cutting head to carry the trimmer.
- Do not overload the paper trimmer. Do not insert more sheets or stronger sheets than stated in the Technical data.
- Do not touch the edge of the blade as it is very sharp!
- Please keep this operating manual for further reference!
- If you pass this device on to third parties, please forward this instruction manual as well.

Do not cut hard material such as metal strips, glass etc. Always operate the device with both hands. Use the device on a stable, flat and even surface only. Before each cut, please check that the Blade in the cutting head is secure.

Instructions for use.

The Trimmer is designed for the creative cutting of Paper, Photo. Film and other similar types of materials.

The Trimmer has one straight-cut blade, which allows you to cut 5 A4 Sheets at once.

- Place the Paper Trimmer onto a non-slip surface.
- Push the cutting head to the top of the ruler.
- Lift the ruler up and place the material to be cut under the cutting ruler and bring it into the required position.
- Press the Blade Head onto the material and use the other hand to hold the Trimmer and paper in place.
- Now pull the cutting head in a constant movement and with slight downward pressure along the cutting ruler.


TIPS when trimming paper.

- When cutting 5 A4 sheets of 70gsm, paper more pressure needs to be applied than when cutting 1 or 2 sheets, otherwise the cutting blade will not cut through all 5 sheets correctly.
- When cutting paper that is thicker than 70gsm, (grams per square metre), you will need to reduce the max number of sheets the trimmer will cut from 5 to either 4, or 3 depending on the thickness of the paper you are cutting.
- When cutting the maximum number of 5 A4 70gsm sheets at the same time, **ENSURE** that all 5 sheets of paper are level, along the edge. Try tapping the edge of the sheets against a hard surface like a table or desk once or twice to ensure they are all level.
- Make sure when you are using the trimmer that you are holding the paper in place, if possible, spread your fingers and press down firmly to ensure the paper does not move as you are cutting the sheets. Any movement in the sheets of paper will result in the edges of the paper not being cut straight.


Instruction on how to Change the Blade

- To replace the blade slide it to the centre of the trimmer.
- Using your forefinger and thumb push the top and bottom parts of the plastic ruler open, then remove the old blade and replace it with a new one, as per the below drawing.
- Your new blade is ready to use.

Do not touch the edge of the blades as they are very sharp!

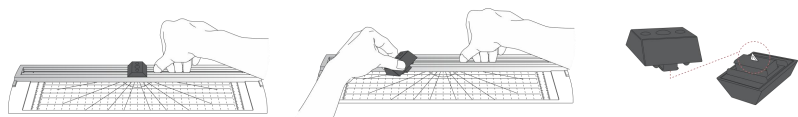

Replacement Blade Heads available from The Hira Company Ltd.

 This hand operated trimmer is only suitable for persons aged 16+. Persons over the age of 12 years but under the age of 16, may however, use the device while under the supervision of an adult.