


User's Manual

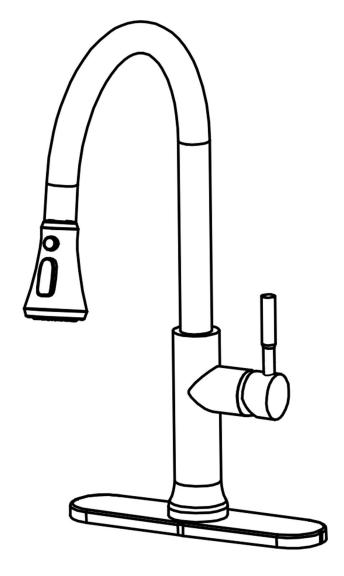

www.rbrohant.com

Installation Manual



RB0846













IAPMO RESEARCH AND TESTING, INC.









CERTIFICATE OF LISTING



IAPMO RESEARCH AND TESTING, INC.





 








INSTALLATION STEPS

This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.




 Before installing the product, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the product.




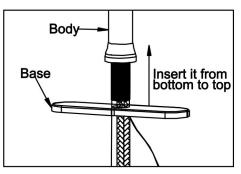


1. Insert the base to the corrugated tube from bottom to top.

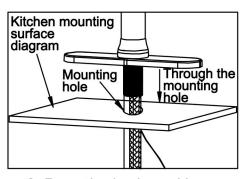


2. Pass the body and base through the mounting holes.

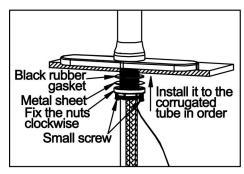


3. Insert the washer, metal sheet, locknut, small screw into the corrugated tube in order and tighten and fix the faucet (clockwise rotation).

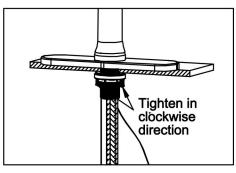


4. Use a Phillips screwdriver to tighten the 2 small screws clockwise.

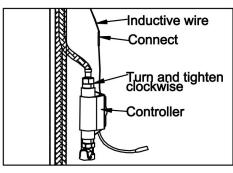


5. Tighten the controller clockwise and connect the touch inductive wire.

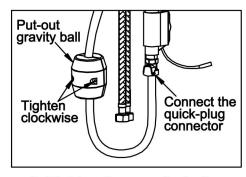

6. Tighten the gravity ball clockwise with a screw at an appropriate position of the put-out tube, and insert the tube connector into the quick-plug connector of the controller.

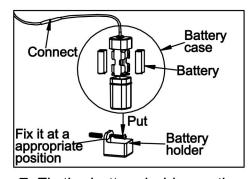

7. Fix the battery holder on the wall with self- tapping screws at the appropriate position, put the battery into the battery case and then place it on the holder. Connect the positive and negative pole of the battery correctly.

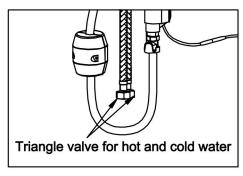


8. Red and blue inlet braided hose to connect hot and cold.

INSTALLATION STEPS


Installation Instruction:

- 1. Drain off the water in order to eliminate the impurities for one minute before installation.
- 2. Check if there is any leakage from every joint after installation, and then check if it functions well.
- 3. Pay attention to the installation of positive and negative poles of the battery.
- 4. Do not suspend the battery case, neither put it inside the bathroom cabinet, nor tie the battery wires. The battery case should be grounded, and mounted against the wall.
- 5. The Stainless steel braided tube should be connected to the valves for both hot and cold water.
- 6. Operating temperature and ambient temperature:
- 4°C-60°C. Please pay special attention to the hose which is connected with showers should be far away from the heater, otherwise it may cause damage to the shower and its sealing parts, and even will be harmful to the user.

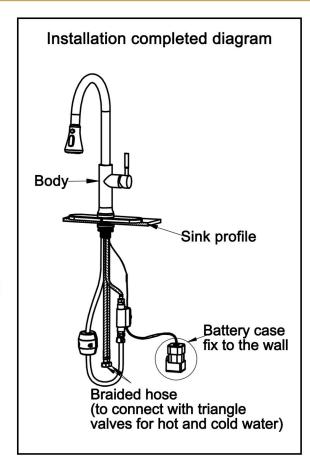

Brief description of the operations:


- 1. Pull out the handle to adjust the flow, and move the handle toward left or right to adjust the hot and cold water temperature.
- 2. Touch the faucet's large elbow to turn the water on and off, and the elbow can rotate 360°.
- 3. Water outlet of adjustable bubble-type shower head: blade-type water outlet-shower- type water outlet effect; the shower head can be pulled out and retracted randomly.

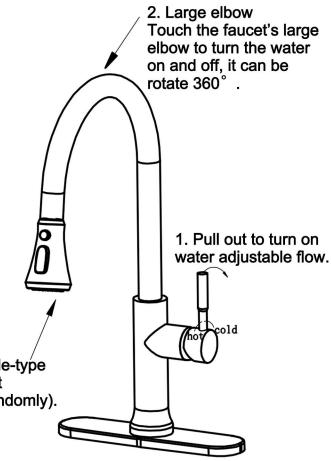

3. Shower head

Water outlet of adjustable bubble-type-blade-type water outlet-shower-type water outlet effect (available to be pulled out and retracted randomly).

INSTALLATION DIMENSION

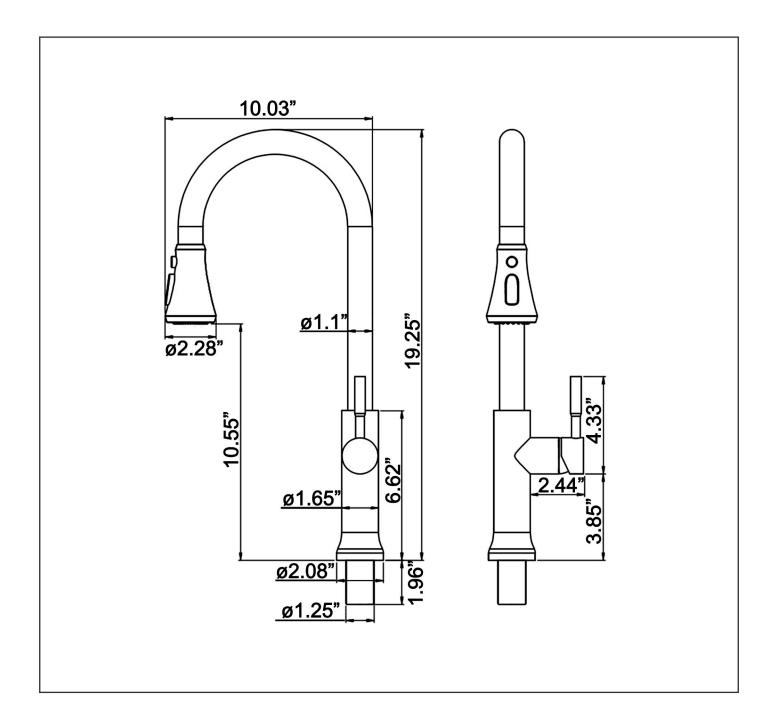

CLEANING CARE

In order to keep the appearance of product clean, bright and good performance, please take care of the product as follows;

- 1. Rinse with water only and dry with soff cotton cloth;
- 2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film, or use polish without abrasive effect;
- 3.Do not use abrasive deterfgent, polish, emery cloth, paper towel or scraper, etc;
- 4.Do not use acid cleaner, or cleaner and soap with insoluble gran etc;
- 5.In the process of use, mud my accumulate in the bubbler and make the water flow show, The bubbler can be unscrewed, rinsed with water, and then installed back in place.









Service Contact:

+1(801) 800-9309 services@rbrohant.com

Made in China