


DevosOutdoor.com

Devos 565 N Main St, Springville, UT 84663

[DevosOutdoor.com/pages/warranty](https://www.DevosOutdoor.com/pages/warranty)

Devos™

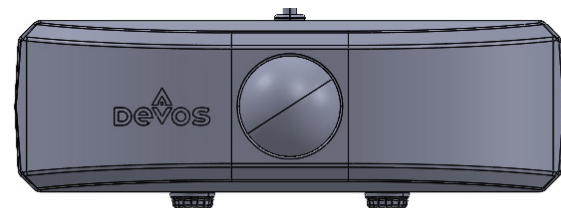

**LightRanger™
Motion Sensor**

Motion Sensor Instructions

1. Snap the quick-connect compression strap around the pole. The motion sensor works best when 5 to 6 feet above the ground.

(If you have a 3-section pole; snap on to the top tube section. If you have a 4-section pole; snap onto the second section from the top.)

2. Plug the motion sensor's cord into the USB-C port at the bottom of the LightRanger 1200

3. Turn on the light and immediately select the number of sides and dim level

(If the light is already on and at desired setting, simply plug cord into the USB port)

4. The LightRanger LED's will blink once indicating the motion sensor is activated

5. Adjust the time the LightRanger stays on by adjusting the time knob (1 to 5 min)

6. Adjust sensitivity (distance) by adjusting the sensitivity knob (15 to 30 feet)

