

PUSHBACK LOADING USER INSTRUCTIONS

The unit must be located on firm level ground, ideally a concrete base at least 150mm deep and 100mm bigger overall than the footprint of the unit.

LOADING

STEP 1

Using an appropriately sized forklift truck position the first pallet onto the rails of the pushback loading system.

STEP 2

With the 2nd pallet loaded on the forklift truck use it to push the first pallet backwards, at the same time positioning the 2nd pallet onto the rails of the pushback loading system.

STEP 3

Repeat this process in all the other location

UNLOADING

STEP 1

Position the forks of the forklift truck under the front pallet and raise it enough to clear the front edge of the unit.

STEP 2

In a controlled manor reverse the pallet out of the unit using it to control the speed of the pallet behind until it comes to a rest in the front position

IMPORTANT

FORKLIFT TRUCK DRIVERS SHOULD BE TRAINED IN THE SAFE USE OF THE PUSHBACK LOADING SYSTEM

EXCESSIVE SPEED WHEN REMOVING THE FRONT PALLET MUST BE AVOIDED AT ALL TIMES

