


Use group handle to unlock boiler cap



Fill boiler with cold water (every time you brew)

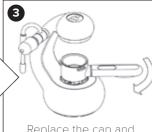

Replace the cap and turn to locked position

TOP TIP


Filling the boiler

The Little Guy's brewing system is completely sealed and is independent of the body. Steam and water will pass freely between the body and brewing system, occasionally exiting between the head, boiler and body. It is normal for water to pass between the body and the boiler at The Little Guy's base. **This is** avoidable by filling the boiler accurately.



IMPORTANT: Always use espresso ground coffee

Choose the correct

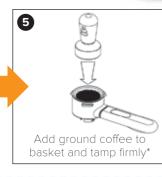

Lock the group handle into place

Supermarket basket i.e. store bought

espresso grind



Professional espresso basket i.e. ground for a professional espresso machine

2. Fill to the top again, level off, tamp again.



Place The Little Guy on your chosen heat source...



Setting a timer is a great idea!

The Little Guy induction top





been designed specifically for The Little

The induction top will beep twice about the time the


dripping, showing you've dosed the basket perfectly.

coffee should start

Guy and is highly recommended. You can also use an electric stove but third-party induction tops will not work reliably with The Little Guy. The perfect extraction



On electricity or gas flame

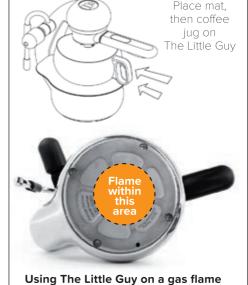

The best position for a gas flame is within 3cm of the centre of the boiler.

The Little Guy's performance will be optimised by focusing the heat as close to the centre of the boiler as possible.



Now for the milk...

The perfect extraction


will start at approx 10 mins on a gas flame



8





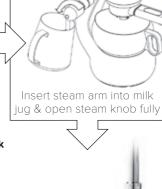



the correct resistance 12







lovethelittleguy.com



