

INSTALLATION INSTRUCTION

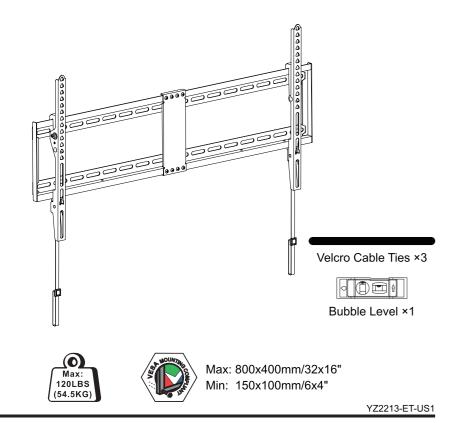


If you have any questions, please feel free to contact us via Amazon.

 
STEP 1 Attach the TV Brackets

 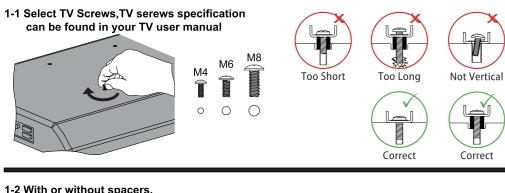


1-2 With or without spacers.

Yes, choose the appropriate screws, washers, and spacers for your TV.

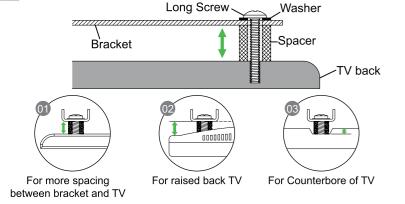





To avoid the

blocked input

Safety Caution


Please read this instruction carefully before installation.

If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, please contact us.


- This product is designed for use in wood stud or solid concrete wall.
- DO NOT install into drywall WITHOUT WOOD STUDS.
- The wall must be capable of supporting five times the weight of the TV and mount combined.
- Incorrect installation may result in product damage or body injury.

WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; please contact our customer service team. Never use damaged parts!


Must Check Before Getting Started

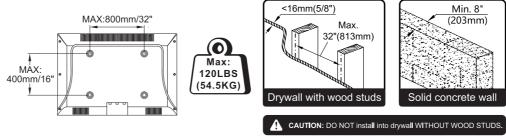


Extra Tools You Need (Not Supplied)

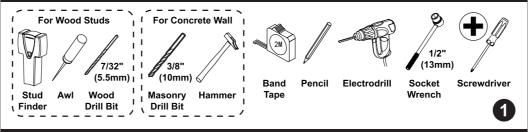


STEP 1 (Continued)

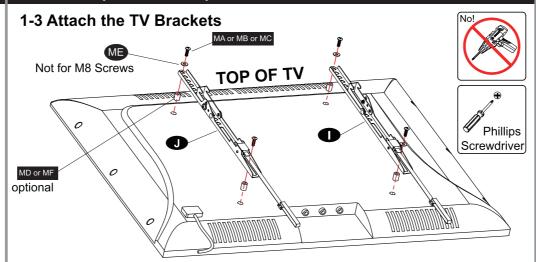

STEP 2 Attach Wall Plate to Wall

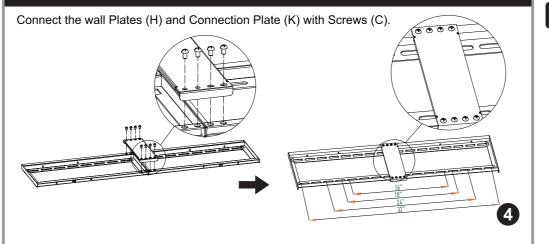

Supplied Parts and Hardware

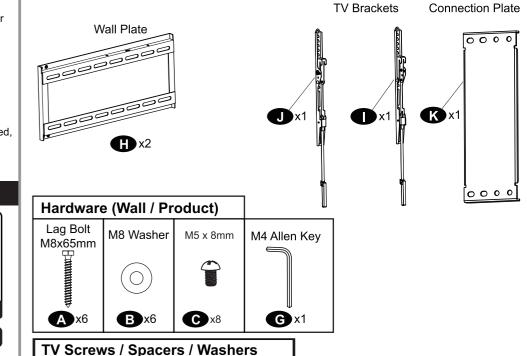

Philips Screws

M8 x 25mm

M8 x 45mm

Washers

M4-5-6

 \bigcirc

ME

L5mm

 \bigcirc

ME

L10mm

 \bigcirc

NOTE: Not all parts and hardware included will be used.

STEP 2 (Continued)


Philips Screws

M4 x 30mm


OPTION A: Wood Stud Installation

Philips Screws

M6 x 30mm

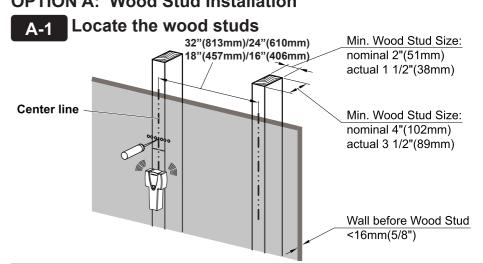

Align & mark mounting holes with wood studs.

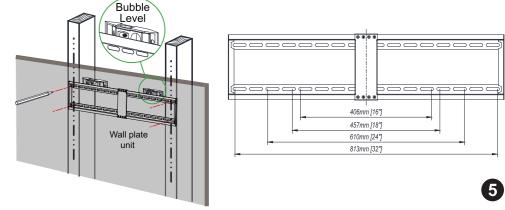






STEP 2 (Continued)

STEP 2 (Continued)

B-4

A-3 Drill pilot holes

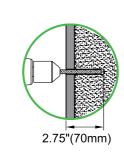

A CAUTION: To avoid potential personal

All 4 lag bolts A MUST BE firmly tightened

Install wall plate using lag bolts

Do not use in drywall or wood.

and washer with Socket Wrench,

6

9

to prevent unwanted movement of the wall

assembly is securely fastened to the wall

plate assembly. Ensure the wall plate


before continuing on to the next step.


NO Electrodrill.


CAUTION:

injury or property damage:


Be sure to drill into the center of the stud.

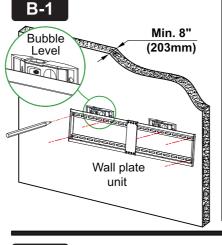

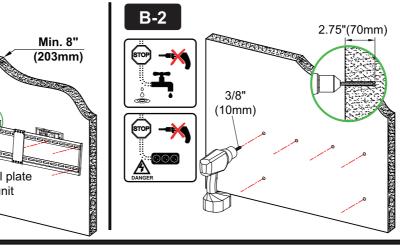

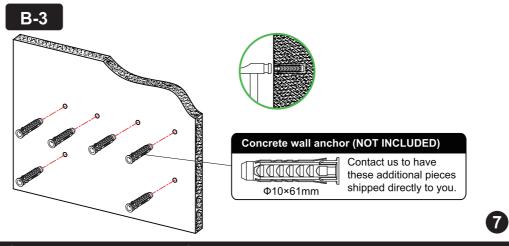


OPTION B: Solid Concrete or Brick Wall Installation

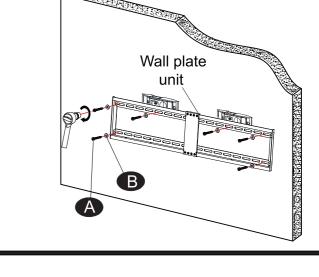

CAUTION: To avoid potential personal injury or property damage:
All 6 lag bolts A MUST BE firmly tightened to prevent unwanted movement of the wall plate assembly. Ensure the wall plate assembly is securely fastened to the wall before continuing on to the next step.




Install wall plate using lag bolts, washer and anchor with Socket Wrench, NO Electrodrill.

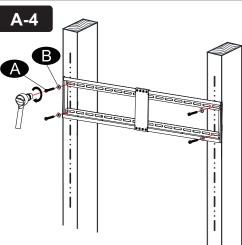


STEP 3 Adjustments

Tilting adjustment (-10°~0°)

Pull brackets to your desired angle then fasten 2 titing bolts with Allen Key (G).

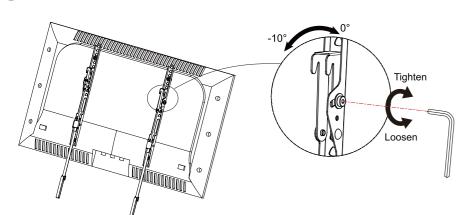



Option: To keep TV in vertical position, please use two M4 screws MA to insert the holes on two brackets respectively (as shown in below image).

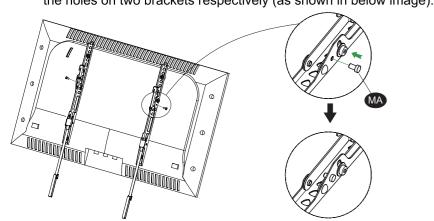


STEP 4 Hang and Secure TV to Wall Plate

4-1 Wall Plate Installation Integrity Test

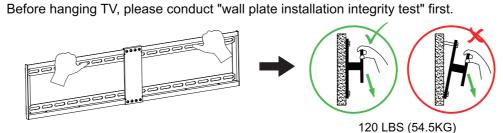

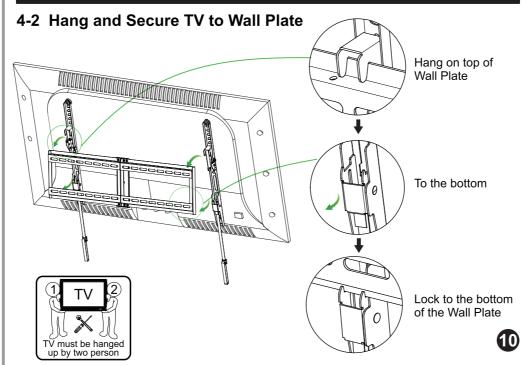

Take down the TV from the Mount (If necessary)

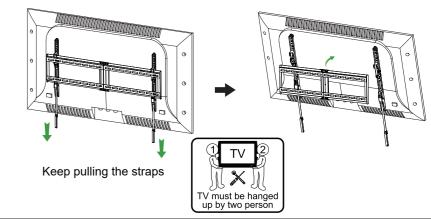

Product Dimensions

