
INSTALLATION INSTRUCTION

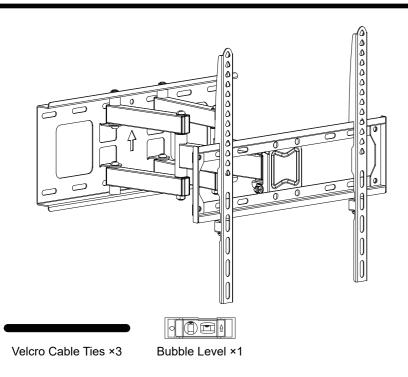

99LBS Min: 75x75mm/3x3"


If you have any questions, please feel free to contact us via Amazon.


Max: 400x400mm/16x16"

YZ1204-ET-US1

STEP 1

STEP 1 Attach the TV Brackets

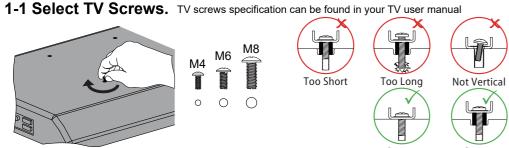

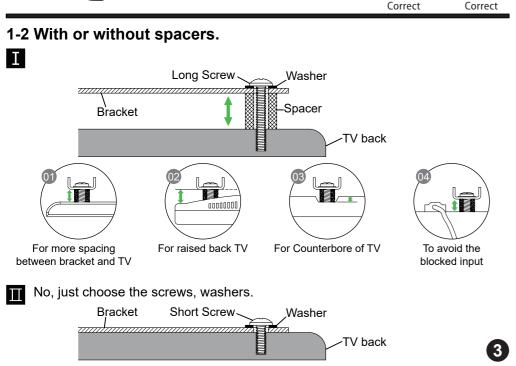

Safety Caution


Please read this instruction carefully before installation.

If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, please contact us.

- This product is designed for use in wood stud or solid concrete wall.
- DO NOT install into drywall WITHOUT WOOD STUDS.
- The wall must be capable of supporting five times the weight of the TV and mount combined.
- Incorrect installation may result in product damage or body injury.

WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; please contact our customer service team. Never use damaged parts!

Must Check Before Getting Started

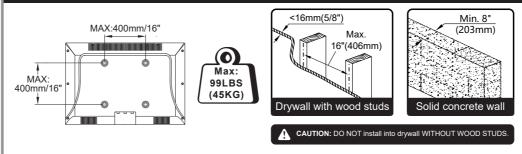

Extra Tools You Need (Not Supplied)

(Continued)

MA or MB or MC


TOP OF TV

1-3 Attach the TV Brackets

Not for M8 Screws

MD or MF


optional

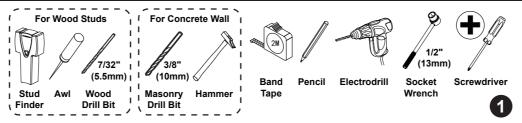



Phillips


Screwdriver

 Supplied Parts and Hardware

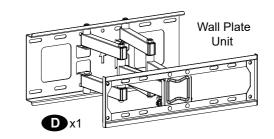



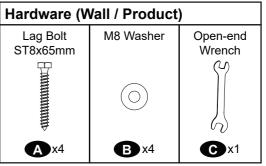


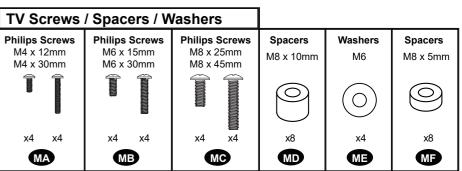


NOTE: Not all hardware included will be used.

STEP 2 Attach Wall Plate to Wall



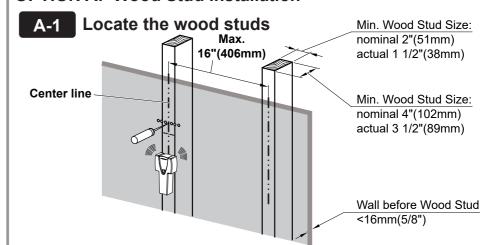


A-2 Align & mark mounting holes with wood studs.

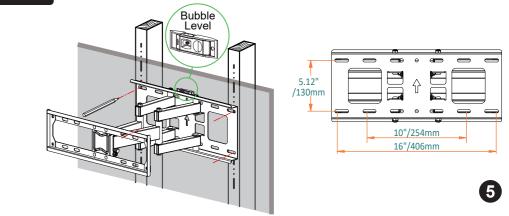




STEP 2 (Continued)

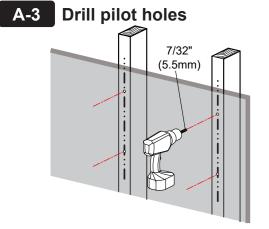

2.75"(70mm)

Be sure to drill into the center of the stud.

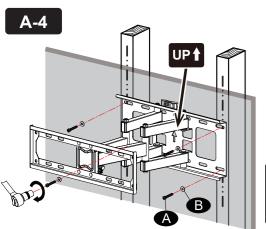

Ensure the lag bolts to be screwed into the studs tightly and securely.

A CAUTION: To avoid potential personal injury or property damage:

All 4 lag bolts A MUST BE firmly tightened to prevent unwanted movement of the wall plate assembly. Ensure the wall plate assembly is securely fastened to the wall before continuing on to the next step.

To prevent the TV falling down, the Arrow Must Keep UP at this step!!




Install wall plate using lag bolts and washer with Socket Wrench, NO Electrodrill.




CAUTION: Do not use in drywall or wood.


6


STEP 2 (Continued)

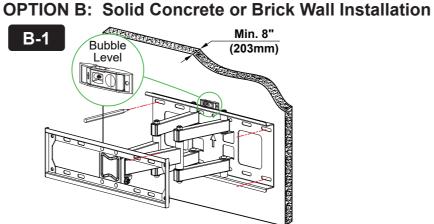

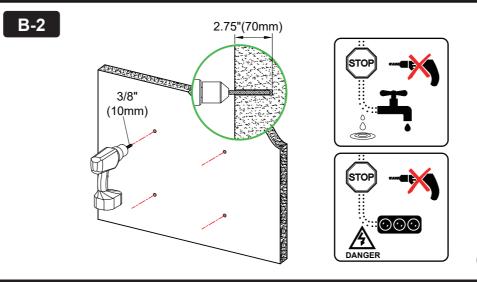

STEP 2 (Continued)

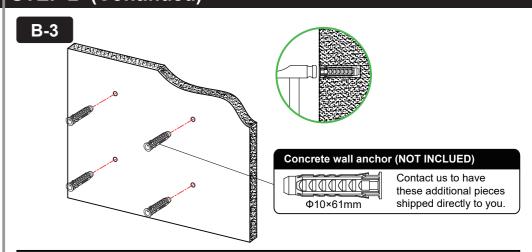

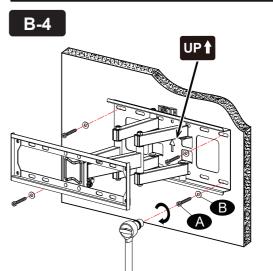

A CAUTION: To avoid potential personal injury or property damage:

All 4 lag bolts A MUST BE firmly tightened to prevent unwanted movement of the wall plate assembly. Ensure the wall plate assembly is securely fastened to the wall before continuing on to the next step.

To prevent the TV falling down, the Arrow Must Keep UP at this step!!




Install wall plate using lag bolts, washer and anchor with Socket Wrench, NO Electrodrill.


STEP 3 Hang and Secure TV to Wall Plate


3-1 Wall Plate Installation Integrity Test

Before hanging TV, please conduct "wall plate installation integrity test" first.

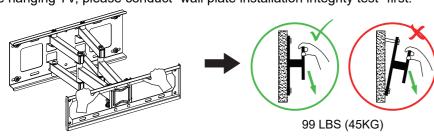


 STEP 4 Adjustments




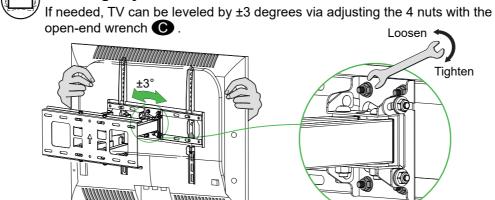



Tilting adjustment If needed, TV can be tilted by +5~-13 degrees via adjusting the 2 nuts with the open-end wrench C

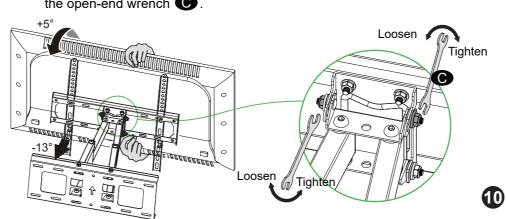

Product Dimensions

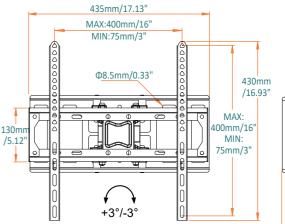

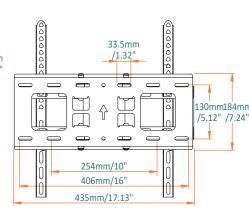

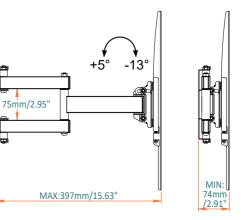



3-2 Hang and Secure TV to Wall Plate

Release preassembled screws down on brackets, hang TV with brackets onto the Plate, then fasten the safety screws.

