


Installation Instruction

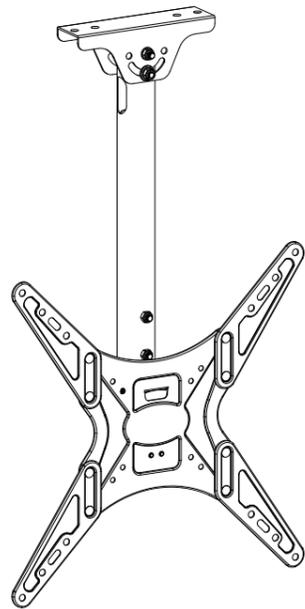

Velcro Cable Ties x3



Max: 400x400mm / 16x16"
Min: 100x100mm / 4x4"

YZ2219-US1

If you have any questions, please feel free to contact us via Amazon.


Safety Caution

Please read this instruction carefully before installation. If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, please contact us.

- At least two people are required to install this mount!
- This product is designed for use in wood joist or solid concrete wall.
- **DO NOT install into drywall alone.**
- The wall must be capable of supporting five times the weight of the TV and mount combined.
- Incorrect installation may result in product damage or body injury.


⚠ WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; please contact our customer service team. Never use damaged parts!

Must Check Before Getting Started

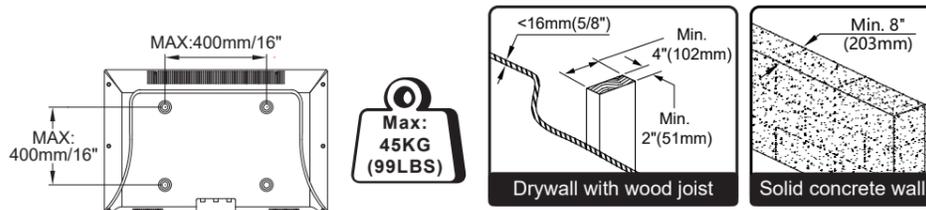


⚠ CAUTION: DO NOT install into drywall alone.


Extra Tools You Need (Not Supplied)

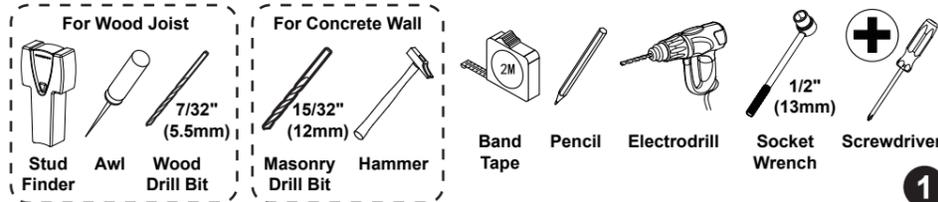


Supplied Parts and Hardware

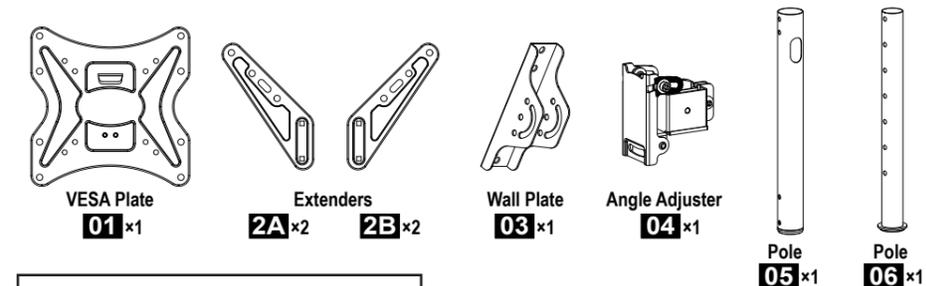

Hardware (Wall / Product)

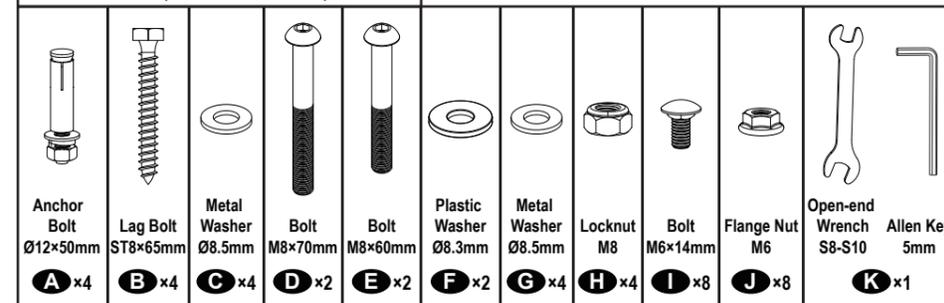

TV Screws / Spacers / Washers

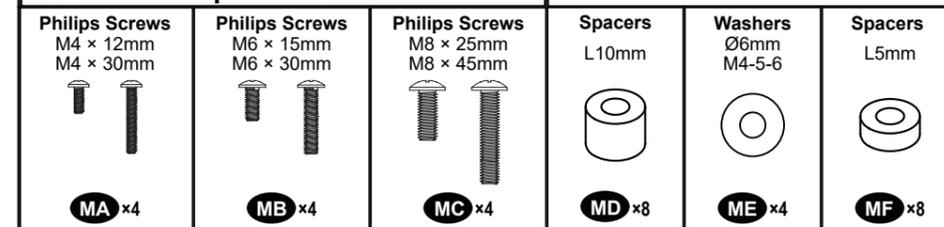


NOTE: Not all parts and hardware included will be used.

STEP 1: Attach the VESA Plate

1-1 Select TV Screw Diameter

Thread screws by hand into the threaded holes on the back of your TV to select which screw diameter fits your TV.

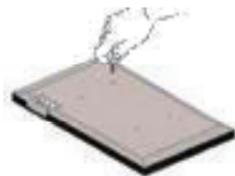

1-2 Select TV Screw Length


 
⚠ When attaching brackets to the flat screen, be careful not to over tighten screws and be sure that screws do not bottom out in the mounting holes.



1-3 Select VESA plate configuration

Measure and note the width and the height of the square or rectangle formed from the VESA holes pattern.


100mm ≈ 4in.
200mm ≈ 8in.
300mm ≈ 11 3/4in.
400mm ≈ 16in.

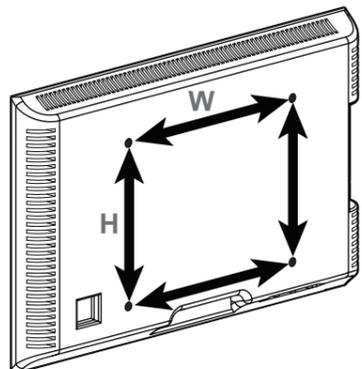


STEP 1: (Continued)

Select the configuration to use based on the measurement from TV.


VESA Pattern (WxH)	Configuration	VESA Pattern (WxH)	Configuration
100mm x 100mm	A	300mm x 200mm	C
200mm x 100mm	A	300mm x 300mm	E
200mm x 200mm	A	400mm x 200mm	C
200mm x 300mm	B	400mm x 300mm	D
200mm x 400mm	B	400mm x 400mm	E

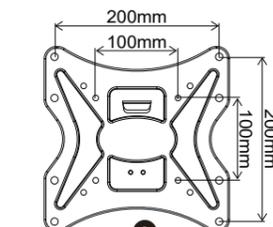


for VESA Hole Pattern: 100x100mm, 200x100mm, 200x200mm.

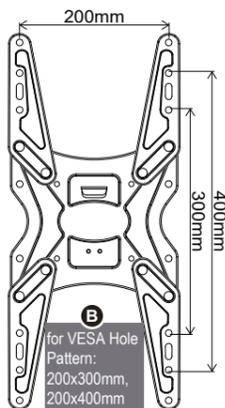


for VESA Hole Pattern: 200x300mm, 200x400mm

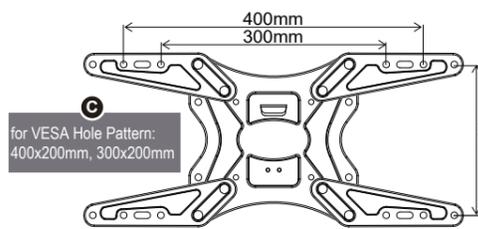

for VESA Hole Pattern: 400x200mm, 300x200mm

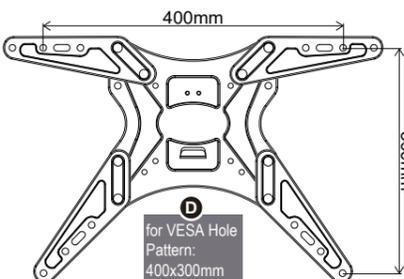

for VESA Hole Pattern: 400x300mm

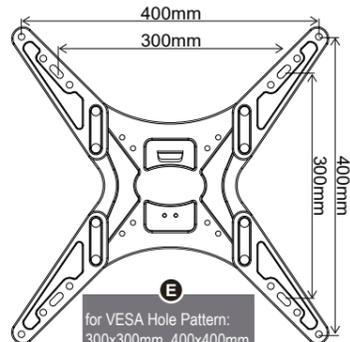


for VESA Hole Pattern: 300x300mm, 400x400mm


STEP 1: (Continued)

1-4 Assemble VESA Plate and Extenders

If your TV hole pattern is greater than 200x200mm, attach extenders **2A** and **2B** to VESA plate **01** using Nut **J** and Bolt **I**.

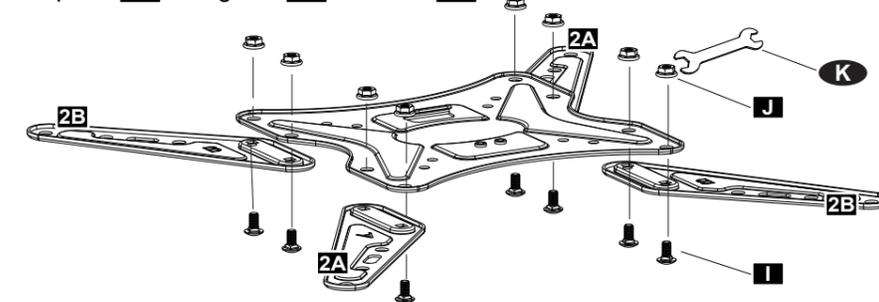

1-5 Attach the VESA Plate

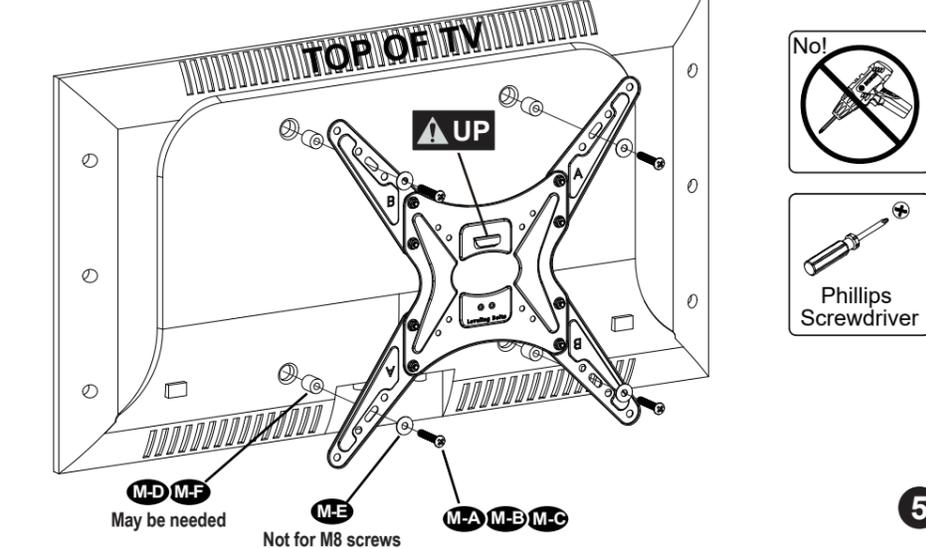

STEP 2A: Ceiling Plate Installation (Wood Joist)

Wood joist using lag bolt (B) and washer (C).

ATTENTION: Pole must be kept vertical.

03

CAUTION 1: DO NOT install into drywall alone.
CAUTION 2: DO NOT use anchor in drywall or wood.
Please check and make sure there is no electrical outlet or inlays within the 4 mounting holes area of the ceiling.

6

STEP 2B: Ceiling Plate Installation (Concrete)

Concrete / brick wall using anchor bolt (A).

ATTENTION: Pole must be kept vertical.

03

7

STEP 3: Pole Installation

STEP3-1

STEP3-2

STEP3-3

STEP3-4

8

STEP 4: Hang and Secure TV to Wall Plate

1. Remove two preassembled screws and washers, save them for using to next step.

2. Lift and hang TV assembly.

3. Secure the VESA plate with the removed screws and washers.

TV

At least two people are required to install this mount!

9

STEP 5: Adjustments (If necessary)

Swivel 360°

Tilt +5° -15°

Level ±3°

Leveling Bolts

10

Product Dimensions

MIN: 516.5mm/20.33"
MAX: 766.5mm/30.18"

Tilt +5° -15°

Swivel 360°

11