# ASSEMBLY INSTRUCTIONS FOR SKYLAND AIR CHAIR



## **Contents**


Your Skyland Air Chair comes in a carry case. Inside the carry case you'll also find a hardware pack (1 eye bolt, 1 S-hook, and 1 chain) wrapped inside of the cupholder, a footrest, and a wooden dowel.



#### **Assembly**



1. Insert long overhead dowel into pockets to spread lounge evenly.

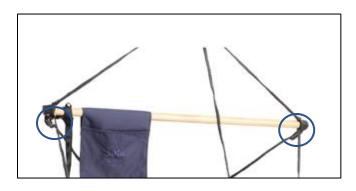

2. Use adjustment clips to set your recliner forward or backward.

### **Installing the Eye Bolts**



Locate the ceiling beam/joist by using a stud finder or tapping and verifying with a small nail. Be sure to locate the exact center of the ceiling joist for the most secure installation. Using a 3/16" (3mm) wood drill bit, drill a starter hole (approx. 4" or 10 cm deep) perpendicular to the ceiling. Screw in the supplied eye bolt until all threads have disappeared into the joist. Do not loosen or adjust once in place. Caution: swinging or spinning could loosen the eye bolt from the ceiling joist and compromise the sturdiness. We highly recommend hanging the Skyland Air Chair no more than 18" above the ground and not exceeding a maximum weight recommendation of 300 pounds.

#### **Washing and Care Instructions**

Your Skyland Air Chair will last longer depending on its use, where it is installed, and the care it is given. It will last longer if you keep it dry by either covering it (yes, we sell those!) or storing it indoors when not in use. We recommend using a fabric protector such as Scotchgard on the pad and ropes to resist stains. To wash, scrub gently with a soft brush and a mixture of water and a mild laundry detergent. You can spot-treat stains using Resolve, Shout, or other laundry stain removers on the fabric parts of the chair. **Warning: Not suitable for washing machines, tumble dryers, or chemical bleaches.** 

#### **Important Reminders**

- ✓ The Skyland Air Chair is NOT a swing. We highly recommend using only a gentle to and fro motion. Swinging or spinning could loosen the eye bolt from the ceiling joist and compromise the sturdiness.
- ✓ Check the eye bolt from time to time to make sure it's holding fast.
- ✓ Visually inspect the ropes, lounger hardware, and attachment hardware periodically.
- ✓ We highly recommend hanging the Skyland Air Chair no more than 18" above the ground.
- ✓ We recommend not exceeding a maximum weight limit of 300 pounds.
- ✓ Enhance your relaxation with optional springs and footrests.

#### Warranty

Your Skyland Air Chair is guaranteed for two (2) years from the date of purchase to be free from defects in workmanship and materials, under normal residential use and conditions. SoCo Swings agrees, at its option during the warranty period, to furnish a product of equal value in exchange without charge (except for a fee for shipping, handling, packing, return postage, and insurance which will be incurred by the customer). Such repair or replacement is subject to verification of the defect or malfunction and proof of purchase as confirmed by showing the model number on original dated sales receipt.

#### **Warranty Limitations**

This warranty does **not** include:

- Any condition resulting from other than ordinary residential wear or any use for which the product was not intended
- Any condition resulting from incorrect or inadequate maintenance or care
- Damage resulting from misuse, abuse, negligence, accidents, or improper installation

- Dissatisfaction due to buyer's remorse
- Normal wear and tear
- Damages incurred during transportation
- Damages incurred during assembly or maintenance
- Any used, previously displayed items (such as a demo item)

#### **Disclaimer**

SoCo Swings and all agents and representatives thereof cannot assume responsibility for special, indirect, or consequential damages or contingent liability for use of the Skyland Air Chair in a manner not expressly intended by the manufacturer. The Skyland Air Chair is NOT a swing. We highly recommend using only a gentle to and fro motion. Swinging or spinning could loosen the eye bolt from the ceiling joist and compromise the sturdiness. The end consumer is ultimately responsible for verifying proper installation of the chair and the eye bolt according to the guidelines explained in this installation guide. We strongly recommend not exceeding our maximum weight limit of 300 pounds.

If you have any questions regarding our products, please contact us via email <a href="mailto:info@socoswings.com">info@socoswings.com</a> and/or our website: <a href="www.socoswings.com">www.socoswings.com</a>. If you're not totally satisfied with any part of your purchase or gifting experience, please let us know. Our customer service reps are fully trained, happiness ninjas ready to solve your problems quickly, efficiently, and with as little fuss as possible.