


Installation and Operating Instructions of Fiat Electric Baby Car

FIAT

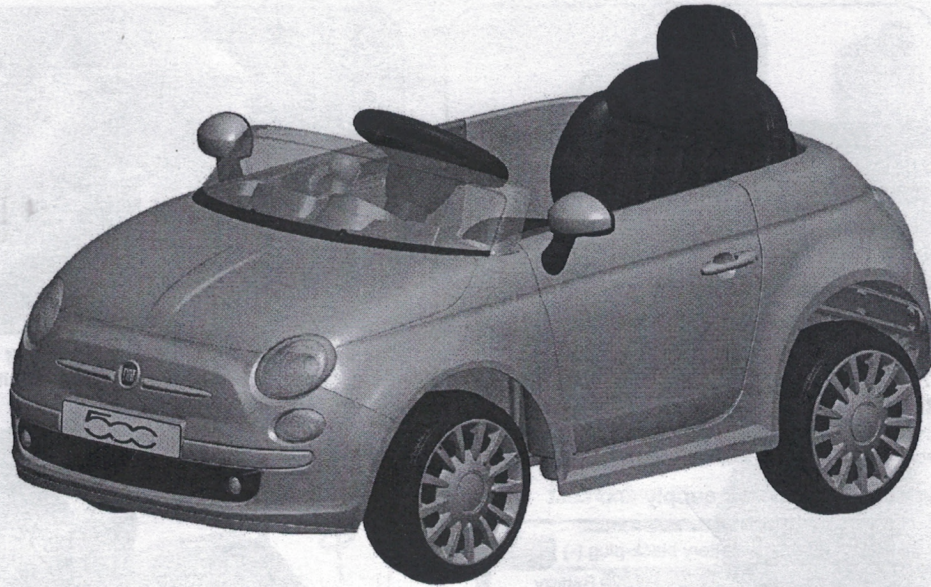

ASTM STANDARD

"Please charge battery for 3-4 hours only"

Please read the operating instructions carefully before use

















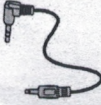

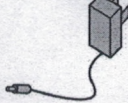
Contents

- I. Product Specifications and Parameters
- II. Components List
- III. Assembly Diagram
- IV. Installation and replacement of remote control batteries
- V. Function and Operation
- VI. Battery and Charger Operating Guide
- VII. Simple Fault Removal Guidance
- VIII. WARNING
- IX. Care and Maintenance
- X. Dimensions of entire car

I. Product Specifications and Parameters


1. This product is suitable for the children of 3-6 years old, and shall be used under adult supervision!
2. Product dimensions: 109×65.2×53.6CM
3. Product maximum load weight: 30 kg
4. Product speed: 2.2km/h (load: 30kg)
5. Product driving motor: DC 6V/12000r (390 dual drive)
6. Product charger: input AC 100-240V (50/60Hz), output DC 15V/400mA
7. Product rechargeable battery: DC 12V/3.5AH (1 piece), about 200 cycles of charging and discharging
8. Remote control and manual switching functions, 2.4G one-to-one remote control function
9. Remote control DC power supply: 3×1.5V AA battery (not included in this product)
10. Product operating ambient temperature: 0-40°C

II. Components List


1. Car Body 	7. Driving wheel (With rubber wheel ring) 2PCS 	14. MP3 connecting wire 
2. Windshield 	8. Seat 	15. Charger 
3. Steering Wheel 	9. J-shaped stick 	16. Gearbox fixing J-shaped stick screw (3×10PWAB) (D=10) 2PCS 
4. Rear-view mirror 2PCS 	10. Steering wheel screw (5×42PM) 	17. Remote Control 
5. Handle 	11. Seating screw 4×15BAB 2PCS 	
6. Wheel 2PCS 	12. Steering wheel locknut (5MM) 	
	13. Rear wheel axle 	

III. Assembly Diagram

1. Installation of wheels

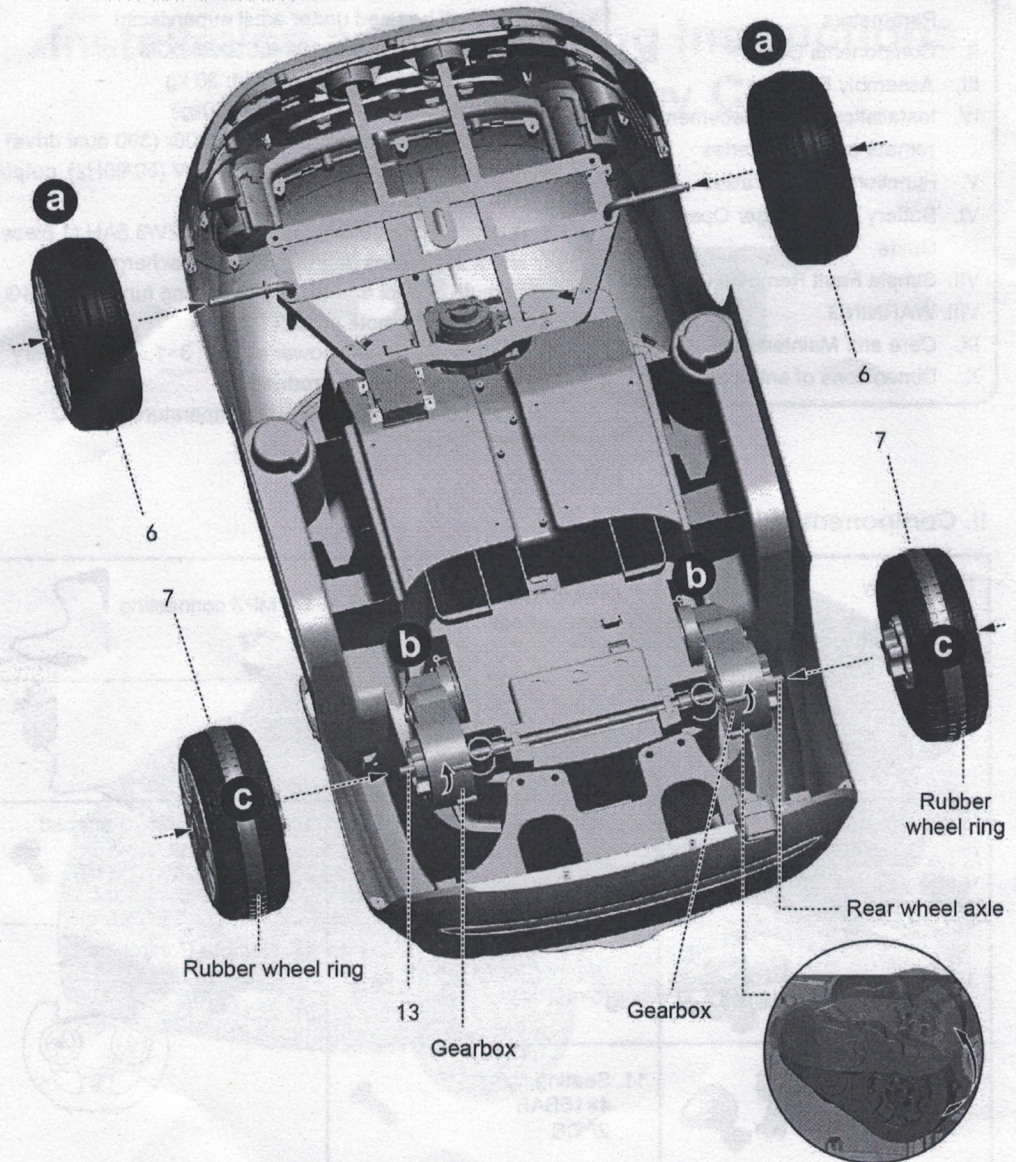


- a** Use the thumb to press the wheels (part 6) center button, and then put them into the front axle in sequence.
- b** Rotate the motor gearbox upwards according to the direction indicated by the arrow until the motor gearbox hole aligns with the car body axle hole, and then insert the rear axle (part 13) into the assigned location of the car body.
- c** Use the thumb to press the center button of the driving wheels (part 7) to put them into the rear wheel axle in sequence.

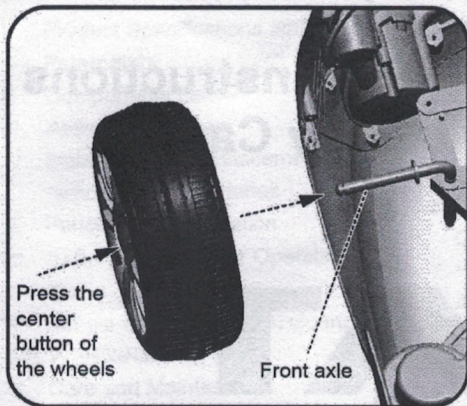


When the wheels are installed, press the center button of the wheels, insert the wheels into the front axle and fix them; press the center button of the wheels to pull out the wheels from the axle so as to remove the wheels.

2. Installation of J-shaped stick

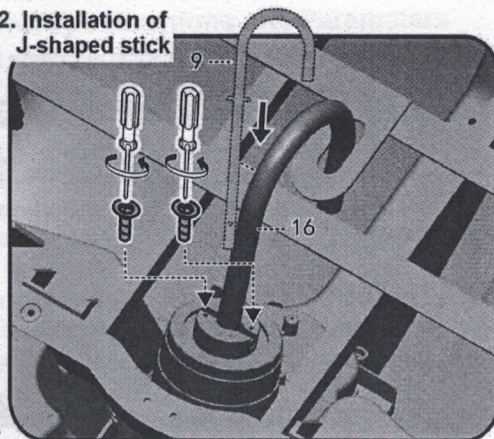


Insert the J-shaped stick (part 9) into the car-front assigned gearbox. And then tighten it with gearbox fixing J-shaped stick screw (part 16) through the assigned hole.

3. Install steering wheel and handle

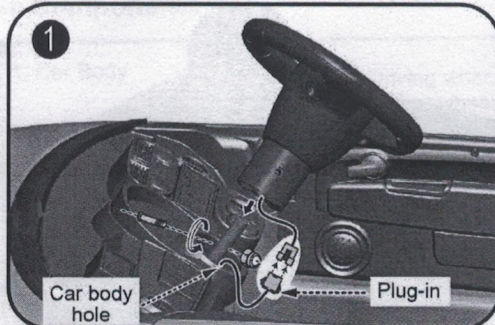


Plug the wire plug of the steering wheel into the wire plug from the car body hole correspondingly, and then put the connected plugs into the car body hole. Install the steering wheel (part 3) on the J-shaped stick, and then tighten it with the steering wheel screw (part 10) and locknut (part 12).

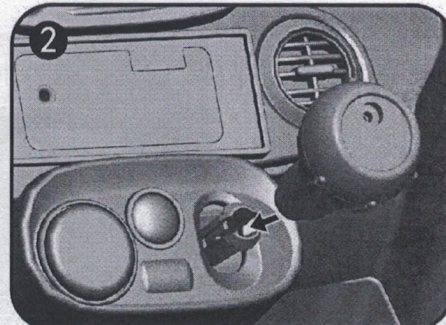


Mount the handle (part 5) onto the toggle of the transfer switch and press it downward until it is connected reliably.

4. Installation of power supply and seat

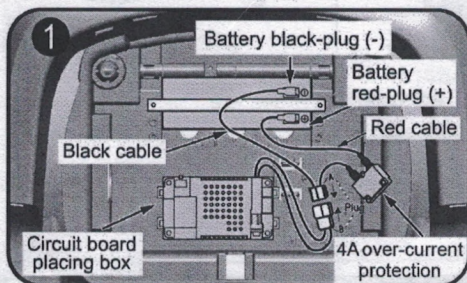


To charge the battery connect the main circuit A plug with the battery B plug.

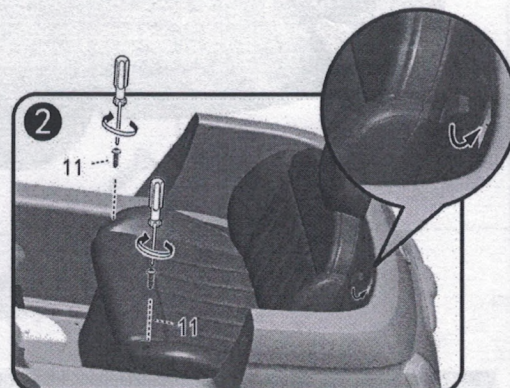

Put the seat (part 8) into the assigned location of the car body after the installation of power supply, and tighten it with the seat screw (part 11).

5. Installation of windshield and rear-view mirror

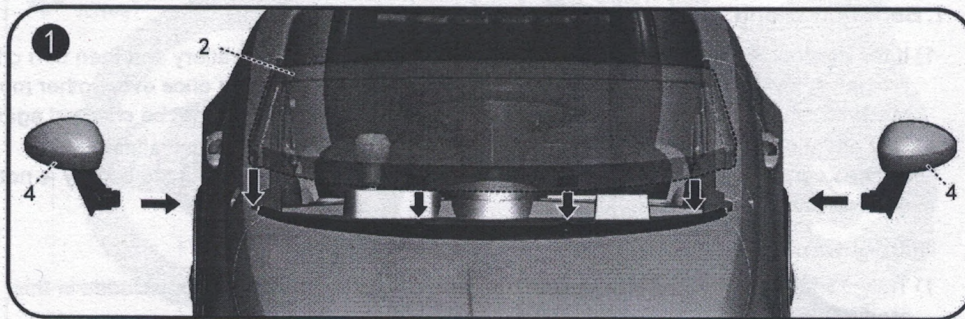

Install the windshield (part 2) and rear-view mirror (part 4) at the assigned location of the car front end, find each buckle position before installation, and then press it forcefully until each buckle position is tight.

2 Open the car door




Press the switch button inside the car door plate and then push the door outwards to open it.

3 Assembly completion drawing



IV. Installation and replacement of remote control batteries

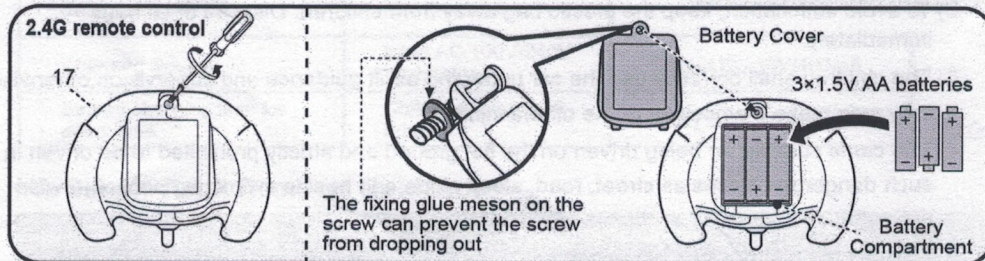

Unscrew the battery cover screws of the remote control (part 17), open the battery cover, find the positive and negative poles, put 3 AA batteries into the battery compartment, close the battery cover and fix it with screws.

V. Function and Operation

1. Main functions:

- 1) Remote control and foot-tread change-over switch
- 2) Postposition dual drive: Two 6V/12000r (390) motor gearboxes can provide the strong "front or rear" power.
- 3) Forward/backward function: the transfer handle (transfer switch) of the forward gear, neutral gear and reverse gear is arranged at the right side of the dashboard.
- 4) Foot-tread driving function: When the lever is in a forward or backward state, the car can move forward or backward if the footswitch is stepped, and the car will stop running if the footswitch is loosened.



- 5) Charging protection function: All functions needing to be powered by the battery will fail when the battery is being charged.
- 6) Forward/backward brake function: No matter what the forward or backward is operated, there will be the relay brake function during stop.


2. Functions of dashboard and steering wheel:

- 1) Power switch: press the power switch. Then, the power indicator lamp is on.
- 2) The dashboard has the functions of MP3.
- 3) Horn sound button: Press the "horn sound button" to activate the horn sound.
- 4) Left/right music button on the steering wheel: Every time you press the left/right music button once, a song will start for some time.
- 5) The steering wheel has the volume adjusting button: The volume of IC music, and MP3 music, can be adjusted.

3. Normal operation:


- 1) Manual foot-tread mode:
 - A. Turn on the main power switch
 - B. Convert the switch into the foot-tread mode
 - C. Select the forward/backward direction
 - D. Footswitch
- 2) Remote control code-matching operation:
 - A: Press car power button
 - B: Press the "Turn Right" button and remote control mobile switch, the indicator light will flash after 5 seconds. When the indicator light lights up without flashing, the signal is matched successfully so that the front wheel will turn left and right for one second. (2 minutes available.)
- 3) Remote control function:
 - A: Power switch
 - B: Forward/Backward button
 - C: Left/Right movement button
 - D: The remote control will be in sleeping condition under 1 minute without operation. It can be restarted when press any button.

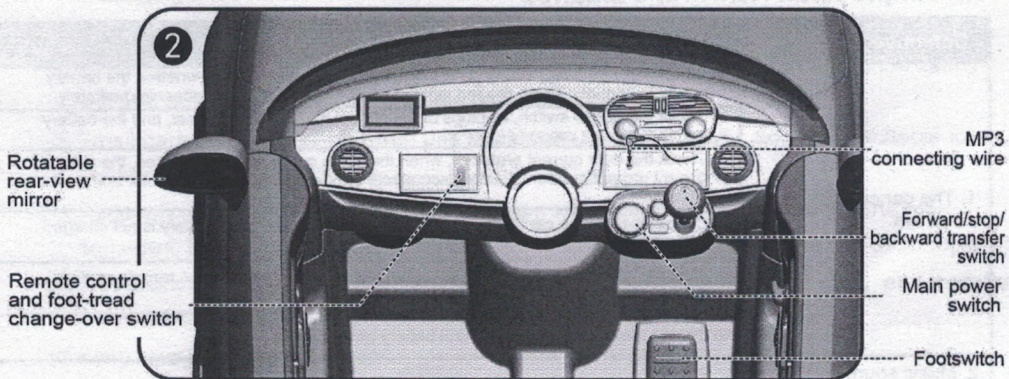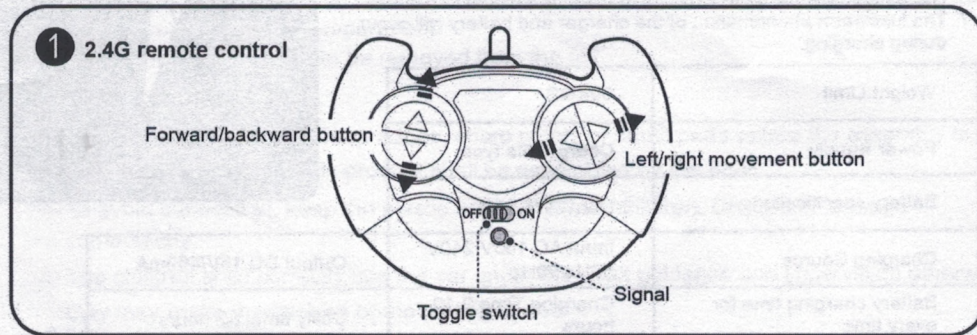

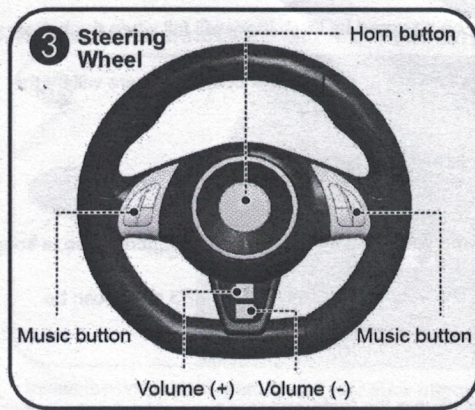

VI. Battery and Charger Operating Guide

1. The charging socket is located at the lower part of the car seat.
2. The battery and charger which are provided or recommended by Chilokbo can be used only.
3. Please do not play with the charger and battery because they are not toys.
4. The battery charging operation is carried out only by adults but not children.
5. The color of the charging status lamp in the charger is red during charging and turns green after being fully charged.
6. The battery shall be fully charged before first use; the battery charging time shall be 9-10 hours and can not exceed 15 hours.
7. The lukewarm phenomenon of the charger and battery will occur during charging.

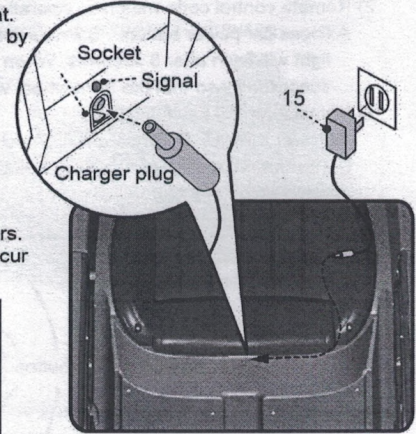

Weight Limit	30KGS	
Power Supply	Chargeable type	
Battery specifications	DC 12V/3.5AH	
Charging Source	Input AC 100V-240V 50Hz/60Hz	Output DC 15V/400mA
Battery charging time for every time	Charging Time:9-10 hours	Utility time:1-2 hours

VII. Simple Fault Removal Guidance

Defective conditions	Key points of inspection
1. The car can not be driven.	1) You can observe the battery power display lamp when checking whether the battery power is enough. If only the red lamp is on, please charge the battery immediately.
	2) Check the power switch, all plugs of the control plate under the seat, and the battery terminal line are properly inserted.
	3) Check the over current protector, when the car is over loaded or blocked, the over current protector automatically disconnects the circuit to protect the motor and controlling IC board.
	4) Check whether the car has been stored for a long time and its battery is not charged on time.
	5) If the remote control cannot start the car, please check whether the remote control code-matching function is normally operated.
	6) Check whether the remote control battery power is low.
2. Music sound is distorted or silent	Check whether the battery has enough power, otherwise charge fully.

Ⓞ

VIII. WARNING

1. Battery warning:

- 1) If the product is not used for a long time, please fully charge the battery and then turn off the power switch for storing the car. The battery shall be recharged once every other month, otherwise the battery service life will be shortened or the battery cannot be charged again.
- 2) Pay attention to the positive and negative poles of the battery during installation (the reverse connection or short circuit of the positive and negative poles of the battery is not allowed to occur).

Battery warning:

- 1) This product needs to be provided with three DC 1.5V AA batteries (not included in this product).
- 2) Pay attention to the positive and negative poles of the battery during installation (the reverse connection or short circuit of the positive and negative poles of the battery is not allowed to occur).
- 3) Rechargeable batteries charging operation can be carried out only by adults.
- 4) Non-rechargeable batteries cannot be charged.
- 5) The rechargeable batteries can be charged only after being taken out from the remote control battery compartment.
- 6) Please do not mix different types of batteries or used batteries and new batteries.
- 7) If this product has not been used for a long time, the batteries shall be taken out from the remote control battery compartment.
- 8) Exhausted batteries are to be removed from the toy.

2. Product warning:

- 1) There may be potential sharp edges, sharp points or small parts before the assembly of this product, and therefore this product shall be assembled by the adult.
- 2) To avoid suffocation, keep the plastic bag away from children. Dispose of all bags immediately.
- 3) The children shall correctly use the car under the adult guidance and supervision, otherwise they may make themselves or the others injured.
- 4) The car is suitable for being driven on the flat ground and strictly prohibited to be driven in such dangerous places as street, road, steep slope and beside swimming pool, otherwise the traffic and drowning accidents may occur.
- 5) Please put on shoes and protection equipment before use, such as fastening the safety belt and putting on the helmet, gloves, knee pads, etc.
- 6) Small parts possibly fall off when this product is used improperly. So, it is unsuitable for children under 36 months old.
- 7) Regularly check whether the battery, charger, wire, plug, casing and other parts are damaged; if the damage occurs, please cease to use this product until it has been repaired.
- 8) This product is only allowed to be used by a child; the maximum load is 30kg, and therefore the overload is not allowed.
- 9) Keep away from fire.
- 10) The product instructions shall be kept as they contain important information.

3. WARNING:



WARNING

To reduce the risk of injury, adult supervision is required.
Strictly forbidden using on the roadways, near motor vehicles, slopes, swimming pools and where there is water;
Please wear shoes; this toy car can only be used simultaneously by one person.
Keep away from kids before assembled by adult, as there are potentially sharp edges, points, or small parts.



WARNING

Do not mix alkaline battery, standard (carbon-zinc) battery or rechargeable (nickel-cadmium) battery.



WARNING

Protective equipment should be worn. Not to be used in traffic.




WARNING

This product is unsuitable for children under 3 years due to its maximum speed.

IX. Care and Maintenance

- 1) Regularly wipe and clean it with a piece of cloth.
- 2) The rotating parts of the car should be checked regularly to determine whether any foreign matter obstructs the rotation and to keep lubricating state of normal operation.

X. Dimensions of entire car

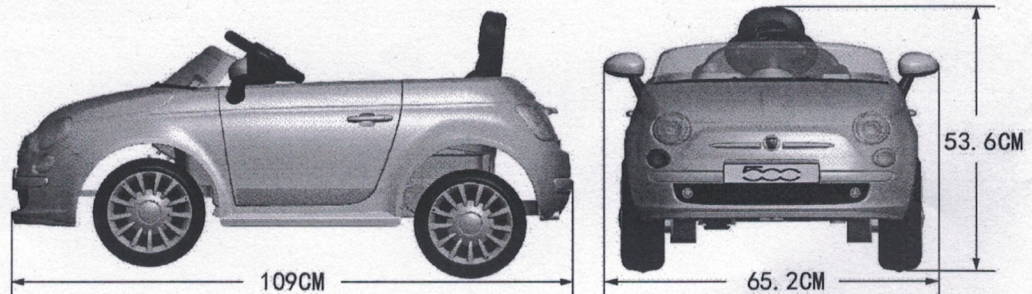

"Fiat" and "500" are trademarks of and licensed by the FCA Group Companies.

