

Please read the assembly manual before using the product.  
Keep the manual and packing list for later references.  
Assemble as per the instructions stated in the manual.

### Mercedes-Benz Authorization



Optional



# Hollity

The assembly manual of  
baby rides—push pull car

**Model: SXZ1578**

Executive standard:

GB6675.1-2014、GB6675.2-2014

GB6675.3-2014、GB6675.4-2014

GB19865-2005

EN71-1

EN71-2

EN71-3












EN62115



0 000092

Hollity, future together

## PARTS DRAWING

PARTS NAME	PICTURE	NUMBER	PARTS NAME	PICTURE	NUMBER
Car Body		1PC	Handrail (optional)		2PC
Steering wheel		1PC	Wheel		4PC
Backrest (optional)		1PC	Wheel cap		4PC
Push bar (optional)		1PC	Spare parts package		1PC
Backrest (optional)		1PC	Charger (optional)		1PC
The instructions		1PC			

## PRODUCT SPECIFICATION

storage battery / dry battery (optional)	6V-4.5AH/1.5V*4
Major component	PP
Age suitable to use	18-35 months
Weight capacity	20kg
Body size	89.2X28.6X85.2cm
Use of time	Continuous use 1-2 hours after charging for 8-10 hours


## PEDAL HAS TAKE IN FUNCTION AND SWING IS FOLDABLE (OPTIONAL)

Pedal has the take in function:

Pedal can slid left and right, in the space of the baseplate between upper housing and lower housing, so that pedal can be taken in. (The left side is the same as the right side.)


Swing is foldable:

When the swing is unfoldable, pull down the lock which is connected with swing, rotate the swing inwards and lose it, the swing will be fixed under the influence of spring. When unfold the swing for using, please pull inwards the lock which is connected with swing, then rotate the swing so that it can be unfolded. (The left side is the same as the right side.)


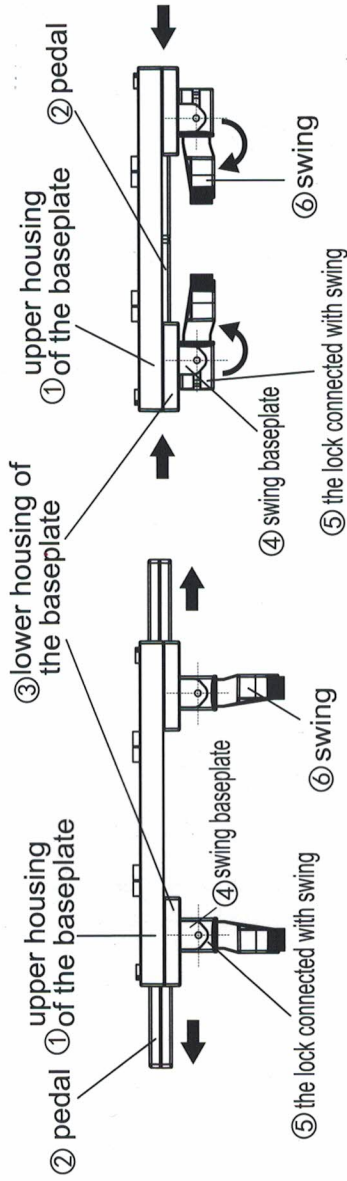


Disclaimer:

The picture in the manual design for assembly reference only, please kindly subject to the actual goods.

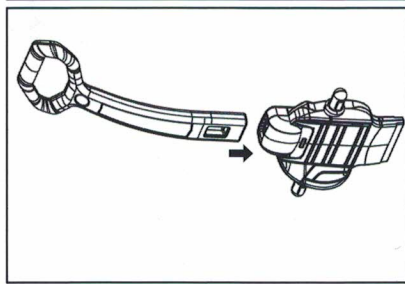

4. Backrest and push bar assembly (optional)  
Insert the push bar to the card slot of the backrest, then connect the backrest and the card slot of vehicle body.

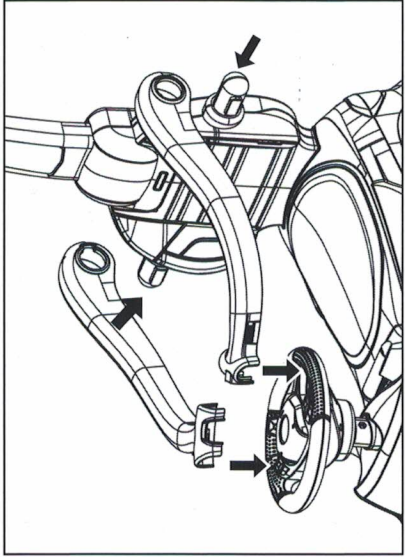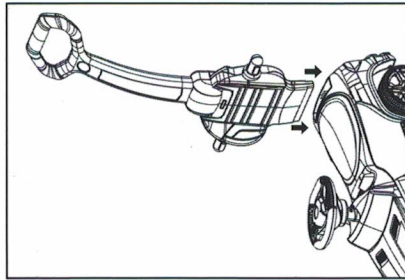

5. Handrail assembly (optional)  
Aim one end of the handrail to the backrest, insert the handrail separately and rotate to the right position, then connect the other end of handrail and the steering wheel.

### FUSE (OPTIONAL)

This car has the auto-reset fuse, if the car stops suddenly during driving, it is mainly caused by instantaneous current exceeds, and make the fuse to trip. Then just stop operating for about 8 seconds, and this fuse can be reset.


In order to avoid the fuse tripping and cut off power supply, please pay attention to the following matters:

This product can't overload, the maximum load is 20kgs.

Don't drag anything behind products.

Don't let the water or other liquid into the batteries and other electrical components.

Do not change the circuit system and the structure of the product.

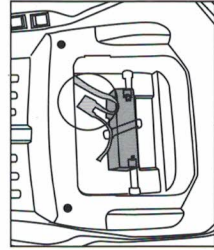

## SECURITY WARNING

### WARNING

This product is not the vehicle for transportation, it should be used under adult guidance. Parents should ensure that children have taken the safety measures before use.


1. The installation and charging of vehicle should be under adult supervision at all times.
2. This product is limited to the children from 18 to 35 months, 20 kg weight limit, please do not overload.
3. This product is ideal for driving on a hard flat surface.
4. It is strictly prohibited in the streets or the road, pot holes, and slopes.
5. Avoid driving in the sand or grass or uneven ground.
6. Children should be given full instructions on operation of the car. Improper operation can cause damage or accidents.
7. While children are driving, it is parents' duty to supervise at all time to avoid accidents.
8. Avoid driving in rains or flooded pathways. By doing so it can damage the motor, circuit and other electrical equipments.
9. Battery charger should be regularly inspected by parents to insure whether the wires, plugs, cruxts and other components are damaged. Please stop using if any damage is found, until it is completely restored.
10. In order to ensure product life and safety, avoid damage to the charger, battery or electric circuit, the car must use the default configuration of a dedicated charger and power supply.
11. Rechargeable batteries should be removed from the toy before charging.
12. When no use of product, please cut off the product power, and keep all the switch to "stop" or "off" position.
13. The charge provided is not a toy. To be kept away from children.
14. Strictly prohibit using the non-manufacturer provided parts.
15. This product is made of PP material mainly, the safe using time is two years.

## USING DIRECTION

1. Before using it, make sure that all the following works are done.
  - Step described in accordance with the instructions to complete the installation of the car, the battery plug-in has been connected, the power supply has been switched on.



- Make sure that all the positions which need the screws are fixed tightly.
- Parents or guardian should ensure that children have taken the safety measures before use.
- To reduce the risk during using:
  - ①. When driving the car, child should sit on the car seat.
  - ②. Only one kid is allowed to use every time.
  - ③. Adults should always supervise their child when the child driving.
  - ④. Adult or parents should take more care and guidance when child driving and can't leave away.
  - ⑤. Pay attention to the driving environment and driving on the hard flat surface, not the unsafe environment:
    - a. The trenches, the riverside, slope or uneven ground;
    - b. Road or other place for driving and walk;
    - c. The obstruction which is easily hitting and causing injury;
    - d. Other unsafety zone.
  - ⑥. Pay attention to the road, trenches, the riverside, slope or uneven ground.
  - ⑦. Not to be used in public roads.
  - ⑧. The car should be used only in daytime or bright place, avoid using under low visibility.
  - ⑨. Children can not deal with unexpected obstacles and events.

2. Operating (reference function diagram)

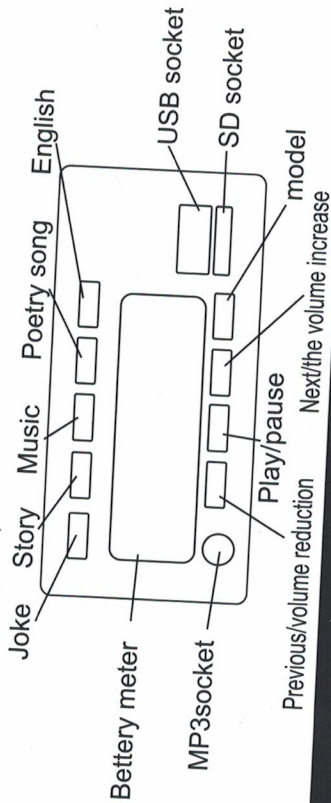

## CHARGING WAY (OPTIONAL)

- For safety purpose, the charging must be done by adults.
- Before first use, you must take off the seat, put into 4 pieces 1.5V alkaline battery or connect battery cable terminal.
- Charging socket located under the seat, follow the instructions to charge the battery.
- When the music can't played, it needs to charge the dry battery or to be charged by 8-12 hours, maximum 20 hours.

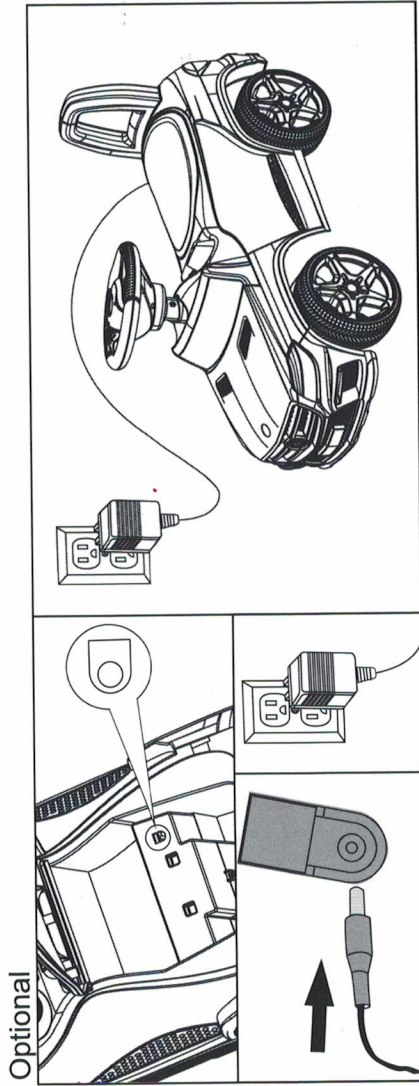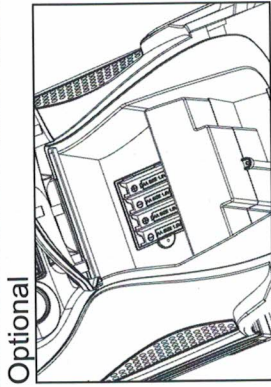

1. First insert the plug of the charger into the charging socket.
2. Then insert the charger to the power socket. (The music cannot be played when it is being charged.)

### Attention:


- Can only use the charger according to manufacturers regulations.
- Do not mix old and new or different types of batteries.
- The battery terminal should not be short circuit.
- Do not open the battery or charger.
- Do not reverse the battery.
- Before charging, please check the charger, battery and plug whether are ok, if you find any broken parts, you must stop using it immediately. And do not use it until it is fully repaired.
- The battery will be little warm when being charged, it is normal. If not, it may be caused from the short circuit of charger or circuit board.
- Must use the pressing plate to fix the battery.
- Run out of battery must be handled by adults, remove the batteries which is run out, from toys to recycle properly and shall not be arbitrarily discarded.
- Charger and battery are not toys. Keep it away from children.

### MAINTENANCE AND SERVICE

1. Parents should check whether all the parts are perfect before using, like battery, charger, wire, plug, out body and other parts are broken, whether the screw is loose. whether there is potential safety hazard, if found then it has to repair.
2. Use a small amount of lubricating oil for moving parts, to prevent wear and tear of rust after using the toys for some time.
3. The car should be far away from the fire and avoid sunlight, store flat, not upside down the car shall be stored indoors or cover outdoors.
4. The car should be far away from the hot things, like the stove or heater, the plastic part may melt. When charging, the car should be far away from the inflammable material to prevent it from fire.



5. Charging in time after using, and charging work must be done by adults, if the product is going to be unused for long time it must be fully charged, unplug the main red line on the battery, Charge it every 1 month to make sure the battery life.
6. Must use the soft cloth to clean the car, do not use chemical solvents to wipe the toy plastic parts, do not use soap and water to clean the car, driving in rainy or snowy weather, water will damage the motor, the vehicle's battery and circuit system.
7. When stop or storage the car, please cut the power and make all the switch to "STOP" or "OFF" position.
8. Do not use the fuse which is not same with this product specifications.
9. Do not change the product structure and circuit system, maintenance and repair work must be under the guidance of the professional or technical personnel in place.
10. Don't put toys for other purposes.
11. Put the battery in the right polarity.
12. It is forbidden to battery is negative short circuit.
13. Non rechargeable batteries, can't charge.
14. Chargeable batteries can only be charged adult the guardianship of adults.
15. Don't mix the old or new batteries or different type of batteries.
16. Run out of battery should be removed from the toy properly and prevent children from playing.
17. Disconnect the battery completely if not in use and prevent children from playing.

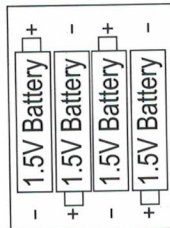

### TROUBLESHOOTING

Can not charger the car fully	when the charger has short dead
	when the battery is dead
	when the charger and battery connection is changed

