

Pedal Kayak Assembly Booklet

Congratulations on buying your Reel Yaks pedal kayak!! Note we also have assembly videos on our website at Reelyaks.com and on YouTube. If you have any questions on your Reel Yaks kayak assembly, then please email us at info@reelyaks.com or call us on 855 202 5035.

There are **six key** pieces of assembly to be done:

- 2 x Kayak halves
- Pedal drive
- Rudder
- Stadium seat
- Paddle
- Fishing rod holder

First step is to unpack your kayak which should come in two boxes and the kayak parts will have an outer sheet of bubble wrap, and some parts will be in cardboard boxes (e.g.: pedal drive). Please ensure to dispose of these materials safely in particular the plastic.



Box 1



Box 2

Each package will have:

- 1 x kayak (in two sections)
- 1 x rudder
- 1 x rudder security (cotter) pin
- 1 x paddle (in two sections)
- 1 x fin pedal drive unit
- 1 x pedals (2)
- 1 x spare fins (2)
- 1 x stadium chair
- 1 x fishing rod holder
- 2 x side carry handles, on the front section (attached to the accessory rails)
- 2 x accessory rail sliders

The larger items will be secured in the main cockpit area: pedal drive unit, pedal drive pedals, spare fins, paddle and stadium chair. Others like the fishing rod holder will be inside the cockpit hatch.

Kayak Assembly

For the kayak assembly ensure you have the two halves facing each other. Lift the rear section so that the lip of the rear overlaps the front half lip and then push down firmly on both sides. When this is done your kayak should be evenly aligned on both sides.



Next close the latches on both sides. The latches should be set correctly for your kayak, but if you find you're having to force it then stop. Adjust the nut (**orange arrow**) to get a firm lock closure, but not without forcing it. If it's too loose then adjust the nut accordingly to get a good firm fit. Forcing the latch closed for an overly tight fit can damage the screws unnecessarily (**blue arrow**) on the adjoining catch.



Latch open



Latch closed

Pedal Drive Assembly

For the pedal drive assembly ensure that you have the main unit with flaps (x1) attached and the pedals (x2).




Note the numbering on the top of the pedal drive unit, to know which is forward, '1' will be at the bottom (closest to the seat) for shorter people and '7' for taller people. For the time being don't worry about the numbering as this will help you set the correct leg length later on. Insert each pedal (**green arrow**) with the main bolt fully un-screwed (**orange arrow**), and while holding the red handle depressed. Aim for insertion around '3' on the top of the unit so each pedal is at the same locked location. The insertion will deliver a tight fit and once the spring-loaded ping beneath the red handle pops in then go ahead and secure the main bolt again. It's always worth checking all the nuts on the drive are tight before using if for the first time e.g.: brass nuts, etc. Loctite while not required is always a good preventative measure if you have any concerns.



Once the pedals have been inserted into the drive unit, then drop the pedal drive into place, and the kayak locking pins should lock over the pins.

REEL YAKS

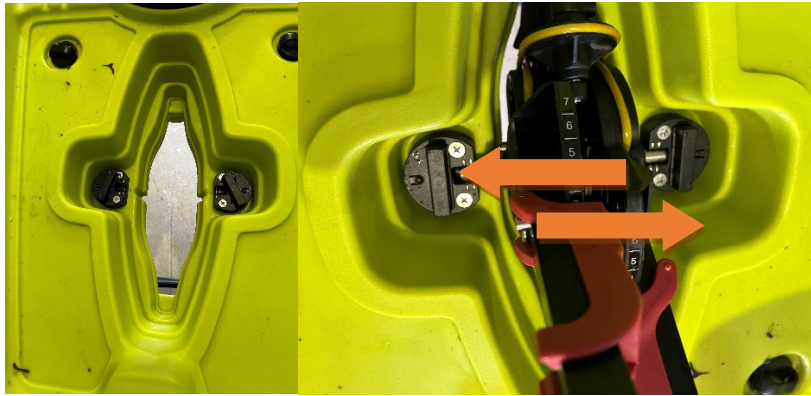


Note sometimes it requires pulling the pedals firmly to the left and right (**orange arrows**) each time when inserting the drive for the pins to lock in place. However you do need to keep this in mind when beaching the kayak, by always pushing forward on one of the pedals to ensure the flaps are flared and being careful when dragging the kayak up the beach.



Once you are in the kayak on the water you can then adjust the red handles on the pedals to fit your leg length.

Rudder Assembly

Start by ensuring that your rudder steering handle is in a neutral position with the handle parallel to the centre line of the kayak (orange arrow).

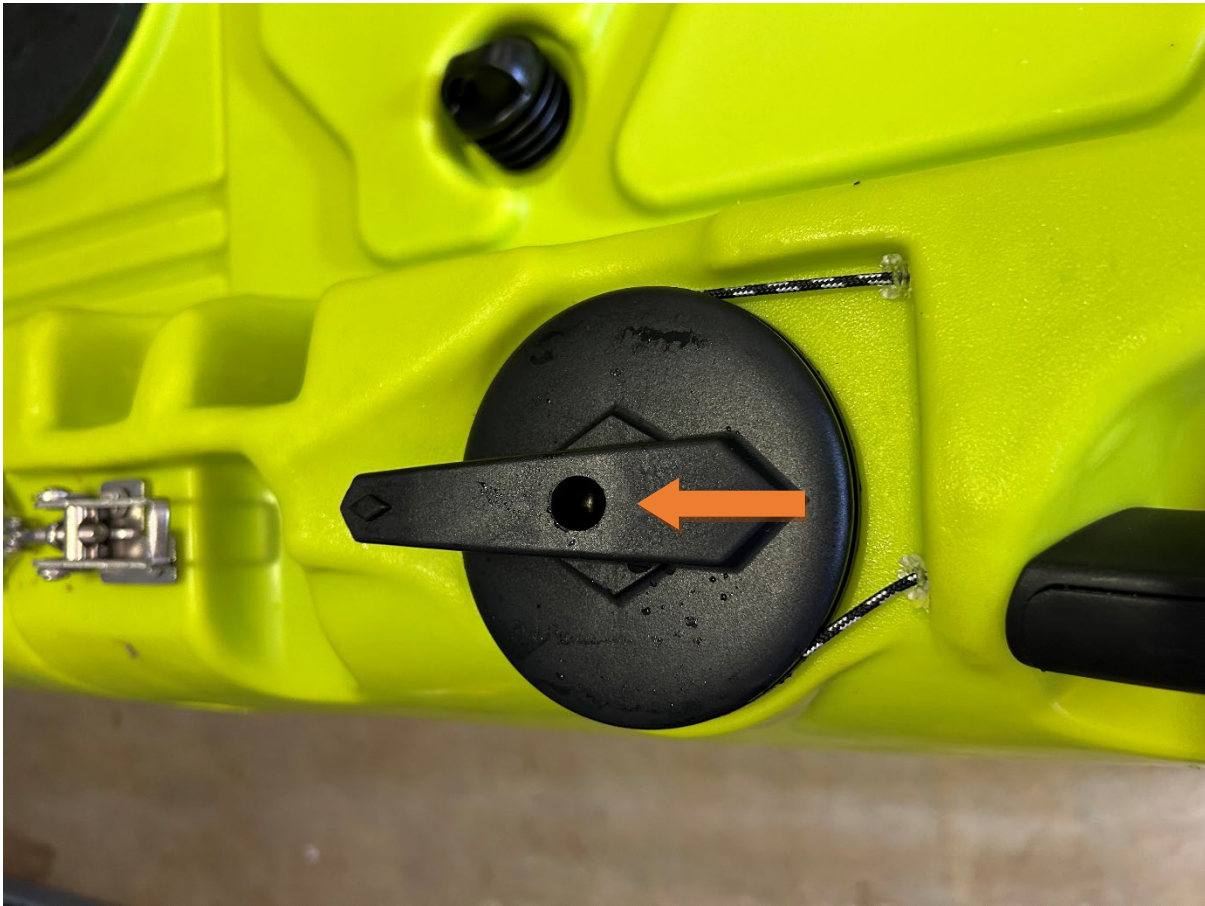


Next, ensure your rudder is untangled and the lines run free when taking it out of the cargo area. Put the pin of the rudder through the rear hole in the kayak. Check that the raising and lowering of the rudder operates smoothly. Next put in the rudder security pin (orange arrow) through the hole at the bottom of the rudder pin.



REEL YAKS

Next unwind the butterfly nuts and put them through the plastic holes on either side of the rudder and righten the butterfly nuts again.

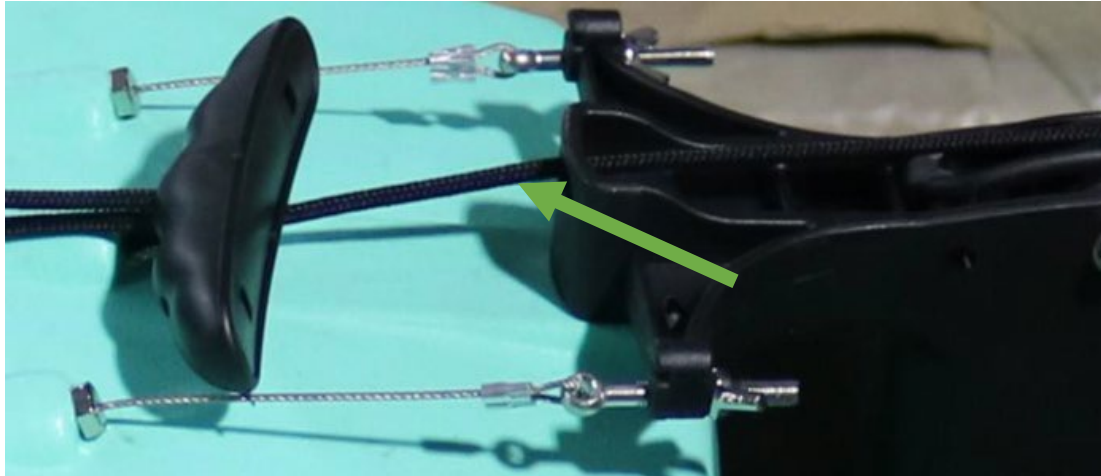

Next grab hold of the rudder steering handle on the left side of the kayak near where the seat would be located. Pull the rudder handle all the way left and then all the way right, to ensure the rudder is tracking correctly, adjust the butterfly nuts as needed. Leave the rudder steering in the approximate centre spot. The steering wires should have a little bit of slack for ease of turning and to ensure minimal wear and tear where they enter the kayak.

In most cases the rudders lowering and raising cable is attached for transport (**Green Arrow**). However in some cases it may not be and you'll need to thread the rudder rope through the center line of the rudder and attach it. Thread it through the main hole at the start of the rudder (**Yellow Arrow**) and down through the gap (**Orange Arrow**) and then thread it through the hole (**blue arrow**) and tie a knot.





Stadium Chair Assembly

Your stadium chair should be pre-installed in the front of the two seating option locations (**orange arrows**). If you're 5.8' and under then we recommend keeping it there to start with, if you're over 5.8 in height then move it to the rear seating location. You can easily adjust the seat at the water's edge if either of these positions isn't optimal for you. Also remember that the pedals on the pedal drive are adjustable for leg length so you have two items you can move to get the best pedalling position for you. Use the two screw bolts to secure the front of the seat (**blue arrow**) left and right side. There are no screw bolts for the back seat rail.



REEL YAKS

Paddle Assembly

The paddle assembly is super simple, just depress the button and pop it into the desired hold (3 locations to choose from) to get the preferred orientation of your blades. Then use the paddle stretch cord to secure it. Remember not to leave it attached like that when the kayak is travelling on your car or truck.



Front Carry Handles

The kayak comes with side handles for both the front and rear section to make it super simple to carry your kayak in two pieces down to the waters edge. The rear handles are moulded into the kayak body and the front side handles are located in the accessory rails. The front rails are easy to attached if they are not already, simply insert the two screws in with an allen wrench into two of the rail sliders. These handles not only help with carrying the forward section they're also extremely useful for pulling yourself to a standing position to fish.



REEL YAKS


Fishing Rod Holder Assembly

The rod holder assembly requires the: rod holder, the rod holder bracket (3 pieces), 2 x screws and the allen wrench.



Combine the three black round pieces together with the bottom, middle and top as indicated above. Decide which rail in the cockpit you want to secure it to and move the slider receivers apart the approximate width of the screw holds and insert the screws.

Next insert the fishing rod holder into the now secure base by 'opening' the base as indicated below (**orange arrow**). Next close the slider to lock the fishing rod holder in place (**green arrow**).

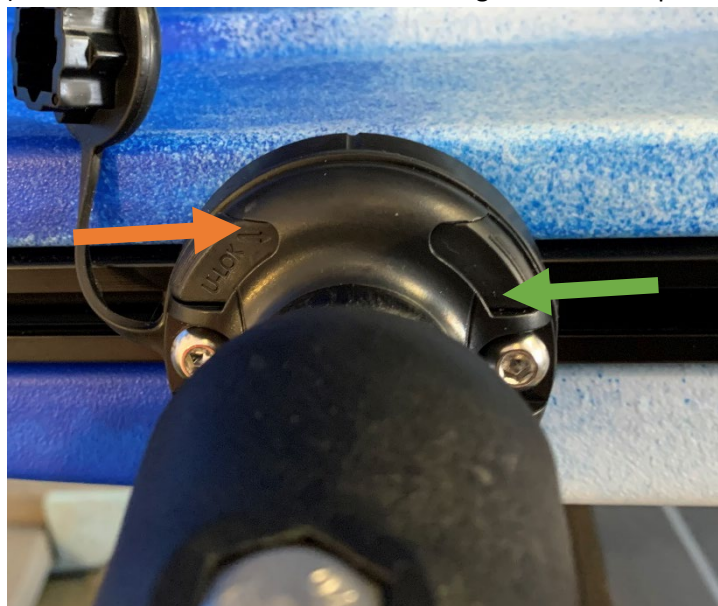



You're now ready to hit the water!!

And don't forget to fill out the warranty form on our site.

And a reminder if you have any questions or concerns in respect of your Reel Yaks kayak then please email us at info@reelyaks.com or call us on 855 202 5035.





If you are looking for any accessories to go with your Reel Yaks kayak such as a trolling mount, bimini, etc. then please visit us at REELYAKS.COM

Kayak Accessories

If you are looking for any accessories to go with your Reel Yaks kayak or spare parts then please visit us at REELYAKS.COM

Kayak Trolley Dolly		Pedal Drive Cover	
Kayak Uv waterproof Cover		Kayak Motor Mount Bar	
Kayak Stabilizer Pontoons		Spare Pedal Drive Fins	
6 pack Accessory Rail Slider Mounts		Kayak Anchor Trolley Kit	

RY REEL YAKS

<p>Kayak Uv shade Bimini</p>		<p>Kayak Sail Kite</p>	
<p>Pedal drive & bar mounted trolling motors</p> <p>Wide range 24lbs - 86lbs thrust</p>		<p>360 Fishing Rod Holder</p>	

Also checkout our **Reel Yaks Kayak Fishing shirts with SPF50 Protection**
And many many more....

