SEAT RAISERS

Your will have 4 seat raisers included in your kayak. This will give you the ability to elevate your seat across three levels.

If you want to replace your existing seat connections with the raisers it is pretty straight forward. Your will have 2 x left raisers and 2 x right raisers.



Step 1: On the rear seat bar, remove the end plastic plugs. You may need a flat head screwdriver to do this.



Step 2:

On the front seat bar, remove the front seat brackets. You will need a flat head screwdriver to remove the end caps. There is a bungy cord that runs through the bar keeping the two brackets secured to the bar. You will need to pull either of the brackets out sufficiently to see the bungy cord and undo the knot that ties them together. (Note that once you undo the

bungy cord you can go back to using these brackets again, but securing the bungy again in the same manner may be difficult).



Step 3: Put the four seat raisers on the seat bars. Ensure that each of the feet is pointing out from the chair and not in under the chair. Secure each screw into their respective rail sliders.

