

juice discoXL


WITH MICROPHONE



Package Contents

- Juice®DiscoXL portable Bluetooth® speaker
- Micro USB to USB charging cable
- 3.5mm AUX Cable
- Instruction booklet
- Wired Microphone

Overview

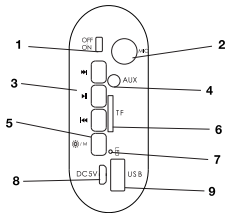

Functionality

1. On/Off switch
2. 6.5mm microphone input jack
3. **Track control buttons:** ◀▶▶
4. 3.5mm AUX input jack
5. **Mode Button:** Short press to select input signal, Long press to turn LED lights on/off
6. Micro SD slot
7. **LED charging indicator light:** Lights red while charging, turns off when fully charged
8. DC/5V input port
9. USB Flash drive port

Specifications

Model No.	Juice®DiscoXL	Output Power	10W
Power Capacity	1,500mAh	Input Voltage	DC5V/1A
Playback Time	Up to 6 hours BT	Operating Distance	Up to 33ft (10m)
Water Res.	IPX5 Rating	Charge Time	4 hrs
Dimensions	130 x 137 x 235mm	Net Weight	0.93kg
Bluetooth® Version	Bluetooth® 5.0		

How to charge your Juice®DiscoXL

1. Connect the micro USB connector from the cable to the **Juice®DiscoXL**.
2. Plug the USB connector to a USB compatible 1A wall charger. A red LED light will appear to indicate charging.
3. The LED light will off once the **Juice®DiscoXL** is fully charged.
4. It is recommended that you charge for 10 minutes before use if you haven't used it in over a week.

Note: A full charge takes approximately 4 hours. The charge will last up to 6 hours when connected wirelessly.

Playing audio from your Bluetooth® device

1. Short Press the mode button on the front of the speaker.
2. Go into the Bluetooth® settings on your music source and search for Bluetooth® devices.
3. Connect to "**Juice Disco XL**". Once connected simply play your music.
4. To skip to the next track, press the '▶▶' button once. To revert to the previous track, press the '◀◀' button once.
5. Press the play/pause button to pause or play your music.

Playing audio from your wired device

Power the speaker on, connect a 3.5mm audio cable to the AUX IN port. Connect the other end of your audio cable to your device and play.

Playing audio from your Micro SD card or USB stick

Power the speaker on, plug your card into the TF/Micro SD card slot or stick into the USB-A port. Select the correct mode with the mode button and the music will play.

LED light mode

Long press the Mode button for 3 seconds to activate the LED light show

Pairing with a second Juice®DiscoXL

1. Turn on both speakers and set to BT mode.
2. Choose a speaker & long press the '▶▶' button for 3 seconds, a chime will sound to indicate your speakers have paired. The speaker you chose initially is now the lead speaker.
3. Connect your BT device to the lead speaker & play your music – it should now play through both speakers simultaneously.

4. To unpair the speakers, long press the '▶▶' button for 3 seconds on the lead speaker.

Note: A maximum of two DiscoXL speakers can be connected at one time in this mode.

Using the Microphone

Plug the 6.5mm AUX head of the Microphone into the corresponding port on the speaker

Troubleshooting

Karaoke doesn't work

1. Ensure the microphone is plugged properly into the socket
2. Make sure the microphone switch is turned on
3. Adjust the microphone volume knob to correct level

Failed connection

1. Make sure the speaker is fully charged.
2. Make sure the speaker is in Bluetooth® mode.
3. Make sure your Bluetooth® device is available for connection.
4. Make sure the speaker is in range (10m) of your Bluetooth® device.

Note: If your device isn't paired to your speaker within 3 minutes, turn the speaker off & on again (ensure Bluetooth® mode is re-activated).

Device successfully paired, but no audio

Make sure the Bluetooth® device's volume is set to a reasonable listening level.

Device is connected with AUX cable, but no audio

1. Make sure the AUX cable is correctly plugged in to the speaker and the device.
2. Make sure the device's volume is set to a reasonable listening level.

SD Card or USB stick is plugged in, but no audio

Make sure the card or stick is correctly plugged in to the speaker.

Music quality low

1. Ensure there are not any solid obstacles between the device and speaker.
2. View the distance between the device and the speaker has not exceeded effective Bluetooth® connection range of 8-12 metres.
3. Check the playback device or whether the speaker is in a low power state.

Safety Warnings

This product is designed with full attention for safety performance. To ensure safe operation, please follow the following rules:

1. Place the speaker in a stable position to avoid fall and cause damage or personal injury.

2. Do not drop, disassemble, open, crush, bend, puncture, or burn the speaker.
3. Do not keep close to any heat source (such as radiators, heating tools, stoves or other heat generating sources)
4. Please send professional maintenance staff to repair for any damage related reasons.
5. Before wiping with a dry cloth to clean the speaker, ensure the speaker is turned fully off and is not connected to a power outlet.
6. Health considerations, please adjust the sound to a suitable level to avoid damage to hearing.
7. Only charge with devices rated and marked with 5V to avoid damage to the speaker.
8. To keep the warranty valid, never try to repair the product yourself.
9. Beware of rough handling as this can break the internal circuit boards and the mechanics.
10. Dispose of this product safely.
11. All Juice products are tested comprehensively to ensure quality.
12. Children should be supervised to ensure that they do not play with this product.

Legal Liability

Juice® speakers can only be used with compatible products. Please read your devices instructions to determine whether this product matches your devices requirements. The manufacturer will not be liable for any damage to your electronic equipment during the use of this product. Juice will not be held responsible for any equipment or accessories not suitable for use with this speaker. The manufacturer will not be held liable for damage caused by misuse or damage incurred by the buyer or the third party rising from any intentional or unintentional use of this product.

1-YEAR WARRANTY

Register your product at juice.co.uk to activate your free 1-year warranty. **Caution:** If the batch code is removed from the product, the warranty will be void.

juice.co.uk

Designed in the UK. Ethically made in China. Please retain packaging & instructions for future reference. Design & specification may be subject to change without prior notice. Juice®DiscoXL is part of the ©Juice® brand.

WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE. customerservices@juice.co.uk
Unit 10 Haslemere Way, OX16 5RW, UK
Juice®

Box 133, 3 Lombard Street East, Dublin 2, D02 HC78, Ireland
Helpline number: +35315256712

