



Bluetooth® juiceboom 360°

Package Contents

- Juice® Boom 360° portable Bluetooth® speaker
- Micro USB to USB-A and 3.5mm AUX cable
- Instruction booklet

Overview

Front view

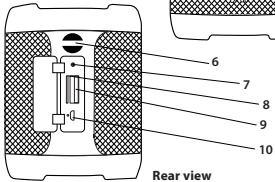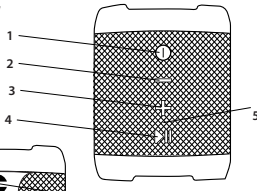

Rear view

Functionality

1. Power button: Press & hold to power on/off, press once to enter Bluetooth® mode
2. - : Multi-function buttons: Press & hold to decrease volume, press once to revert to previous song
3. + : Multi-function buttons: Press & hold to increase volume, press once to skip song
4. Multi-function button: play/pause/answer calls
5. Working & charging indicator light
6. Lanyard
7. AUX IN port
8. TF/Micro SD card slot
9. USB-A port
10. USB charging port

Specifications

Model No.	Juice® Boom 360	Output Power	5W
Power Capacity	1,200 mAh	Input Voltage	DC5V/1A
Playback Time	Up to 8 hours BT Up to 10 hours wired	Operating Distance	Up to 33ft (10m)
Water Res.	IPX5 Rating	Charge Time	3 hrs
Dimensions	89 x 89 x 106 mm	Net Weight	340 g
Bluetooth® Version	Bluetooth® 5.0		

LED Indicators

	Indicator	Status
⚡	RED	Charging
	LED OFF	Fully Charged
	Flashing Blue	Pairing Mode
AUX/BT	Blue	Connected
	Slow Blue Flash	Music Playing

How to charge your Juice® Boom360°

1. Connect the micro USB connector from the cable to the **Juice® Boom 360°**.
2. Plug the USB connector to a USB compatible wall charger with 1A current output (DC5V, 500mA). A red LED light will appear to indicate charging.
3. The LED light will turn off once the **Juice® Boom 360°** is fully charged.
4. It is recommended that you charge for 10 minutes before use if you haven't used it in over a week.

Note: A full charge takes approximately 3 hours. The charge will last up to 8 hours when connected wirelessly and up to 10 hours when connected through the line-in.

Playing audio from your Bluetooth® device

1. Press & hold the power/mode button on the front of the speaker for 3 seconds.
2. Go into the Bluetooth® settings on your music source and search for Bluetooth® devices.
3. Connect to "**Juice Boom 360°**". Once connected simply play your music.
4. To skip to the next track, press the '+' button once. To revert to the previous track, press the '-' button once.
5. Press the play/pause button to pause or play your music.

Note: For Android devices, the maximum volume attainable through the Boom 360's '+' & '-' buttons is dictated by the volume controls on your device. Ensure your device is at full volume if you want your Boom 360° at its maximum volume.

Playing audio from your wired device

Power the speaker on, lift the silicone cap on the front of the speaker and connect a 3.5mm audio cable to the AUX IN port. Connect the other end of your audio cable to your device and play.

Playing audio from your Micro SD card or USB stick

Power the speaker on, lift the silicone cap on the front of the speaker and plug your card into the TF/Micro SD card slot or stick into the USB-A port. The music will then play.

Automatic call answering

1. Press the play button to accept an incoming call. Long press the play button for 3 seconds to reject an incoming call.
2. Press the play button twice to redial the last number called.

Troubleshooting

Failed connection

1. Make sure the speaker is fully charged.
2. Make sure the speaker is in Bluetooth® mode.
3. Make sure your Bluetooth® device is available for connection.
4. Make sure the speaker is in range (10m) of your Bluetooth® device.

Note: If your device isn't paired to your speaker within 3 minutes, turn the speaker off & on again (ensure Bluetooth® mode is re-activated).

Device successfully paired, but no audio

Make sure the Bluetooth® device's volume is set to a reasonable listening level.

Device is connected with AUX cable, but no audio

1. Make sure the AUX cable is correctly plugged in to the speaker and the device.
2. Make sure the device's volume is set to a reasonable listening level.

SD Card or USB stick is plugged in, but no audio

Make sure the card or stick is correctly plugged in to the speaker.

Music quality low

1. Ensure there are not any solid obstacles between the device and speaker.
2. View the distance between the device and the speaker has not exceeded effective Bluetooth® connection range of 8-12 metres.
3. Check the playback device or whether the speaker is in a low power state.

Pairing Juice® Boom360 with TWS

1. Turn on both speakers.
2. Long press the Play/Pause button on one of the speakers and wait for the speakers to connect – this will be indicated by a "beep"
3. Go into the Bluetooth® settings on your music source and connect to "Juice Boom360". The two speakers are now combined under one name
4. To unpair the speakers, long press the play/pause button on either speaker until you hear the "beep"

Safety Warnings

This product is designed with full attention for safety performance. To ensure safe operation, please follow the following rules:

1. Place the speaker in a stable position to avoid fall and cause damage or personal injury.
2. Do not drop, disassemble, open, crush, bend, puncture, or burn the speaker.
3. Do not keep close to any heat source (such as radiators, heating tools, stoves or other heat generating sources)
4. Please send professional maintenance staff to repair for any damage related reasons.
5. Before wiping with a dry cloth to clean the speaker, ensure the speaker is turned fully off and is not connected to a power outlet.
6. Health considerations, please adjust the sound to a suitable level to avoid damage to hearing.
7. Only charge with devices rated and marked with 5V to avoid damage to the speaker.
8. To keep the warranty valid, never try to repair the product yourself.
9. Beware of rough handling as this can break the internal circuit boards and the mechanics.
10. Dispose of this product safely.
11. All juice products are tested comprehensively to ensure quality.
12. Children should be supervised to ensure that they do not play with this product.

Legal Liability

Juice® speakers can only be used with compatible products. Please read your devices instructions to determine whether this product matches your devices requirements. The manufacturer will not be liable for any damage to your electronic equipment during the use of this product. Juice will not be held responsible for any equipment or accessories not suitable for use with this speaker. The manufacturer will not be held liable for damage caused by misuse or damage incurred by the buyer or the third party rising from any intentional or unintentional use of this product.

Made from 100% recycled plastics

65% of the material on this speaker is made from recycled post consumer waste plastic. Designed in the UK. Ethically made in China. Please retain packaging & instructions for future reference. Design & specification may be subject to change without prior notice. Juice® Boom360° is part of the © Juice® brand.



**SCAN ME FOR
1-YEAR WARRANTY**

Caution: If the batch code is removed from the product, the warranty will be void.



customer services@juice.co.uk
Unit 10 Haslemere Way, OX16 5RW, UK Juice®

Box 133, 3 Lombard Street East, Dublin 2,
D02 HC78, Ireland Helpline number: +35315256712

WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.