

juice squash XL

Fast charge portable power bank
Squeeze out EXTRA power for your mobile device

 


Li-ion battery power bank with USB output

Package contents


- Juice®Squash XL power bank
- Micro USB Cable
- User Manual

Overview

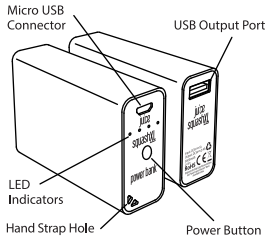

How to check the battery level

 1. When your device is connected to the Juice® Squash XL, press the power button to begin charging. Shake or tap the Juice®Squash XL to check the remaining battery levels at anytime.

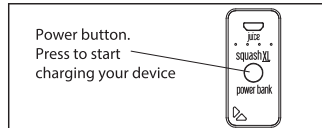

2. If your device is not connected to the Juice®Squash XL, press the power button once, then shake or tap to check the power bank to see the remaining battery levels. Juice®Squash XL has an integrated intelligent power saving mode, it will shut down automatically after being idle for 3 minutes to conserve it's battery.



Interpreting the LED Indicators

Charging

- 1 LED on $\leq 25\%$
- 2 LED on $\leq 50\%$
- 3 LED on $\leq 75\%$
- 4 LED on $\geq 75\%$
5. All LED's turn off when fully charged. You can now disconnect the USB cable from your charger or computer.

*Charging time: Approx. 7-8 hours

Discharging

To check the battery level shake the Juice® Squash XL. Remaining energy levels are:

 
1. 1 LED $\leq 25\%$, recharge the power bank
2. 2 LED $\leq 50\%$
3. 3 LED $\leq 75\%$
4. 4 LED $> 75\%$

Note: It is normal for the Juice®Squash XL and your device to get warm during charging and discharging. They may get even warmer if you use your device to, for example, play video or game while charging.

How to Charge Your Juice®Squash XL

1. Plug the Juice®Squash XL into your computer or a USB compatible mains charger with a current output of 1A (DC 5V, 1,000mA) using the included Micro USB cable.
2. When the Juice®Squash XL is fully charged, disconnect the cable.


*Charging time depends on the output power of the charging device.

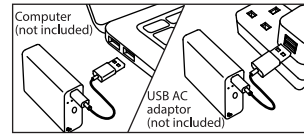

How to Charge Your Mobile Device

1. Connect your device to the USB output port on the Juice®Squash XL with the provided Micro USB cable. For Apple devices you will need to use your original cable that was supplied with your device.
2. Press the power button to turn it on.
3. When your device is fully charged or you want to stop charging, disconnect the cable. NB- The Juice®Squash XL will shut down automatically after being idle for 3 minutes, you may also press and hold the power button for 3 seconds to turn it off at anytime.

 In order to charge your device(s), you will need a USB cable compatible with your device. These come included as standard when purchasing most devices. Plug the device's standard USB end in to the Juice®Squash XL. Plug the other end of the cable into the device you wish to charge. Once charged, simply unplug your device and store your Juice®Squash XL until you are ready to use it again.

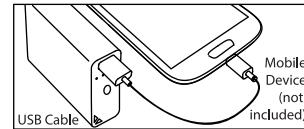

Note: The maximum output current of the Juice®Squash XL is 2.4A. Power cannot be discharged to your device requiring an amperage of more than 2.4A.

Note: Mobile and gadget device manufacturers have different requirements to charge their products, they may also use different cables to charge their devices. These manufacturers may vary the specifications of how to

charge a device and they may also introduce other charging methods on their new products, therefore we can not guarantee that the Juice®Squash XL will be able to charge all devices. Juice® always suggests that you use the original charging cable included with your device to charge your devices.

Specifications

Input	Micro USB (DC5V \equiv 1A Max)
Output	USB (DC5V \equiv 2.4A)
Dimensions	78 x 50 x 23 mm
Net Weight	130 grams
Capacity	5,600 mAh (Li-Ion Battery)

Safety Information

Read all information and warnings before the use of this product. Improper use of this product may lead to product damage. You (the buyer) other than the dealer will be held liable for damages such as overheating, toxic fume, fire or explosion.

- Do not attempt to charge the power bank by any other method other than with USB equipment or a computer.
- Do not modify or disassemble the battery. Do not dismantle or refit this power bank in anyway.
- Do not use this power bank in bathrooms etc. Do not expose the battery to moisture or immerse it in liquid. Keep it dry at all times.
- Do not keep the power bank in an environment with excessively high temperatures, including intense sunshine. Do not throw the power bank into a fire or place in extremely hot environments. Avoid dropping, force bumping, friction or any other direct impact to the power bank.
- Do not place the power bank on flammable materials (on beds or carpets) during charging.
- Do not touch the power bank with wet hands.
- Disconnect the USB connector from the power bank after charging.
- Only use the power bank in temperatures ranging from 0° to 40°.
- Do not connect input and output in reverse.

- Do not charge the power bank in excess of the rating.
- Do not subject the power bank to strong impact and do not throw it.
- In case of any abnormalities or problems, disconnect the USB connector from the computer port and contact your dealer.
- If any liquid from the inside of this product gets into your eyes, do not rub your eyes, but wash them with clean water and immediately consult a doctor.

All batteries have been tested comprehensively to ensure quality. If heat, discolouration or transformation are found during charging or storage please stop using immediately and contact the dealer. Neglect of doing so may cause the power bank to leak, overheat, smoke or ignite.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities. Or by anyone with lack of experience and knowledge, they should only use this product if they are under supervision or have been instructed on how to use the power bank by a person responsible for their safety. Children should be supervised to ensure that they do not play with the power bank, it is not a toy.

Legal Liability

This Juice®Squash XL can be used only with compatible electronic equipment. Please read your devices packaging and instruction manuals to determine whether this Juice®Squash XL is compatible with your equipment. The manufacturer shall not be held responsible for any damage to any electronic equipment during the use of this product. The manufacturer shall not be held liable for any damage caused by misuse or any damage incurred by the buyer or the third party rising from any intentional or unintentional use of the Juice®Squash XL, this also includes any equipment or accessories used with this product. As mentioned above, the manufacturer shall not be held liable for damage caused by misuse of the Juice®Squash XL.

Activate your free at juice.co.uk®
1 year warranty

Designed in the UK. Product made in China. Please retain proof of purchase as this will form part of your warranty. If you do not have proof of purchase for the product the warranty will be void. If you have purchased the product from a retailer please return the product directly to the retailer. If you have purchased the product from juice.co.uk please contact our customer service team. ©Gusto Telecom Solutions. ©Juice. Juice® Squash XL is part of the Juice® brand

customerservices@juice.co.uk
©Gusto Telecom Solutions. Juice®
10 Haslemere Way, OX16 5RW, UK



WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.