 


Juice® has built the Juice®MAX+ power JUICE MAX+ bank with you in mind. Speed is important when charging and when on the oo. the Juice®MAX+ will charge your device at a speedy 15W and will allow around 7 full charges of an average mobile. This handy charger will also charge THREE devices at the same time, ready for when you

- need it most USB C Input port 2 x USB A Charging ports - Output (12W)
- USB C Charging port Output (15W)

Contents

Juice@MAX+ power bank, USB-C to USB cable (for charging) and User Manual



Note: Click the OFF/ON button once to turn the Max+ on, Double Click to turn it of

How to charge the Juice®MAX+ power bank

To charge the Juice@MAX+, simply connect the supplied USB-C cable into the power bank and the other end into your computer or to a mains plug (plug not supplied). The LED will flash when charging, the LED will display four lights when fully charged. For best results, ensure you fully charge the Juice@MAX+ power bank before first use. Optimise your Juice@MAX+ by fully charging and using the power bank until fully drained 3 to 4 times. Take care to recharge your power bank before long periods of disuse. It is strongly advised that you do not leave your Juice@MAX+ on zero battery for a sustained period.

Checking the remaining charge

Charge Time: 7hrs (DC5V, 3A input)

To check the energy levels press the button on the side, the LEDs will indicate the remaining power.

Note: It is normal for the Juice@MAX+ and your device to get warm during charging. They may get even warmer if you use your device to play videos or for gaming while charging

Charging your gadgets

Always check the voltage your device can accept before cha rging with any Juice product, this will ensure full compatibility 1. Connect your device via the cable to the USB A or USB C port. You are able to charge from three output ports at the same time but the speed of charge will decrease for optimum safety. For other devices and Applie devices you will need to use your original cable that was supplied with your device, this will ensure

compatibility. Press the power button to turn the Juice®MAX+ on, now you can charge. Your device will show you when it is being charged via a sound or on the screen. The number of lit LEDs will decrease to show that power is being transferred from the power

bank to your device When your device is fully charged or you want to stop

charging, disconnect the cable

4. In order to charge your device(s), you will need a cable compatible with your device. These come included as standard when purchasing most devices. Plug the device's standard USB A end in to the Juice@MAX+, then plug the other end of the

cable into the device you wish to charge Once charged, simply unplug your device and store your Juice@MAX+ power bank until you are ready to use it again. charge the power bank fully every 3 months to keep the battery in optimum condition.

NOTE: Mobile and gadget device manufacturers have different requirements to charge their products, they may also use different cables to charge their devices. These manufacturers may vary the specifications of how to charge a device and they may also introduce other charging methods on their new products, therefore we can not guarantee that the Juice@MAX+ power bank will be able to charge all devices

Juice® always suggests that you use the original charging cable included with your device to charge.

DC5V/3A Input Output 2 x Outputs USB A: DC5V/2.4A Output USB C: DC5V/3A (15W) Dimensions 140.9 x 68.9 x 28 mm Net Weight 406a Capacity 24.000 mAh / 3.7V / 88.8Wh (Lithium polymer battery cell)

Legal liability

ets get techy

The Juice@MAX+ can be used only with compatible products. Please read your equipments compatibility instructions to determine whether this Juice@MAX+ matches your equipment The manufacturer will not be liable for any damage to your electronic equipment during the use of this product. Juice will not be held responsible for any equipment or accessories not suitable for use with the Juice@MAX+The manufacturer will not be held liable for damage caused by misuse or damage incurred by the buyer or the third party rising from any intentional or unintentional use of the Juice@MAX+. Average charge amounts shown (7 charges for the Juice@MAX+power

bank) are estimated on charging an iPhone 12 mobile.

Safety notes IMPORTANT: Read all information and warnings before using the Juice@MAX+. Improper use of this product may lead to the product being damaged and you (the buyer, not the dealer) will be held responsible for damages such as over heating, the release of toxic fumes, fire or explosion

 Do not attempt to charge the Juice®MAX+by using any other method other than a USB charger or computer. • Do not modify disassemble the battery. • Do not dismantle or modify the Juice®MAX+ in any way. • Do not use this charger in bathrooms etc. • Do not expose the **Juice®MAX+** to moisture or immerse it in liquid. • Keep the product dry at all times. • Do not keep the Juice®MAX+in an environment that has excessively high temperatures, including intense sunshine. . Do not throw this product into a fire or leave in a hot environment. Avoid dropping or any other impact or friction to this product. • Do not place the Juice@MAX+ on flammable materials, such as bedding or carpets during charging. . Do not touch the Juice@MAX+with wet hands. . Disconnect the cable from the Juice@MAX+once you have charged the device. • Only use this product within the following temperatures: 0' to 40'. • Do not connect input and output in reverse. • Do not charge the Juice®MAX+ in excess of the rating suggested. • If any issue arises when using the Juice®MAX+, disconnect the cable from the computer port and contact your dealer. • In the unlikely event that any liquid from the inside of this product gets into your eyes, do not rub them. Wash your eyes immediately with clean water and consult a physician. All Juice®MAX+'s have been tested comprehensively to ensure quality. If you encounter any unusual heat, discolouration or product distortion during charging or storage, please stop using it immediately and contact the dealer. These issues may cause

is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities (or lack of experience and knowledge) unless they have been given supervision or instructions concerning the use of the Juice®MAX+ by a person responsible for their safety. Children should be supervised to ensure that they do not play with the Juice@MAX+, this is not a toy. WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE ALL ELECTRONIC PRODUCTS WITH THE WEEL LOGG MUST BE COLLECTED AND SENT TO APPROVED OPERATORS FOR SAFE DISPOSAL OR RECYCLING PLEASE RECYCLING WHERE FACILITIES EXIST. MANY ELECTRICAL/ELECTRONIC EQUIPMENT RETAILER.

leakage, heat, smoke or ignition of the Juice@MAX+, • The Juice@MAX+

SEN I 10 PERIONAL MENTE EXIST. MANY ELECTRICAL/ELECTRONIC EQUIPMENT REPRESENTATE TO STRIBLUTOR TAKE BACK SCHEME* OF HOUSEHOLD WEEK CHECK WITH YOUR LOCAL AUTHORITY OR BEALIERS FOR DESIGNATED COLLECTION FACILITIES (DCF) WHERE CONSUMERS MAY DISPOSE OF THEIR WEEK FREE OF CHARGE.*







esigned in the UK. Product made in China, Please retain packaging ure reference. Design & specification may be subject to change with rondice. Juice@MXx+ is part of the Culice@ brand. stomerservices@juice.co.uk. Juice@. 10 Haslemere Way. OX16 5RW. L 33, 3. Lombard Shif East, Dublin 2, DUB 4/CR, it. Helpline nor. 4383162867