


juice party pro XXL

Package Contents

- Juice® PartyProXXL portable Bluetooth® speaker
- USB to DC power cable
- Instruction booklet

Overview

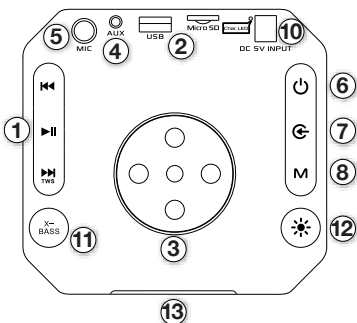

Functionality

1. **Track control buttons:** ⏪ ⏩ ⏮ ⏭
2. Micro SD & USB Flash drive ports
3. Master volume control knob
4. 3.5mm AUX input jack
5. 6.5mm microphone input jack
6. Power button
7. Input select button
8. Menu button
9. **LED charging indicator light:** Lights red while charging, battery logo on LED display will flash. Display will stop flashing when fully charged.
10. DC/5V input port
11. Bass control knob
12. LED Party light control button
13. LED Display screen

Specifications

Model No.	Juice®PartyProXXL	Output Power	40W
Power Capacity	2,000mAh	Input Voltage	DC9V/1A
Playback Time	Up to 5 hours Ⓡ†	Operating Distance	Up to 33ft (10m)
Water Res.	IPX5 Rating	Charge Time	3-4 hrs
Dimensions	545 x 240 x 215mm	Net Weight	3.7kg
Bluetooth® Version	Bluetooth® 5.0		

Note: A full charge takes 3-4 hours. The charge will last up to 5 hours when connected wirelessly.

How to charge your Juice® PartyProXXL

1. Connect the DC connector of the power cable to the **Juice® PartyProXXL**.
2. Plug the USB connector of the power cable to a USB compatible wall charger. A red LED light will appear to indicate charging.
3. The LED light will turn blue once the **Juice® PartyProXXL** is fully charged.
4. It is recommended that you charge for 10 minutes before use if you haven't used it in over a week.

Please only charge the speaker with the USB-A to DC cable provided using a 5V/2A power adapter (not included).

Playing audio from your Bluetooth® device

1. Short Press the Input button (7) on the top of the speaker. (⏮ on display screen)
2. Go into the Bluetooth® settings on your music source and search for Bluetooth® devices.
3. Connect to "**Juice Party Pro XXL**". Once connected simply play your music.
4. To skip to the next track, press the '⏭' button once. To revert to the previous track, press the '⏪' button once.
5. Press the play/pause button to pause or play your music.

Playing audio from your wired device

Power the speaker on, lift the silicone cap on the front of the speaker and connect a 3.5mm audio cable to the AUX IN port. Connect the other end of your audio cable to your device and play.

Playing audio from your Micro SD card or USB stick

Power the speaker on, lift the cap on the top of the speaker and plug your card into the TF/Micro SD card slot or stick into the USB-A port. Select the correct mode with the mode button and the music will play.

Adjusting the microphone settings

When using the microphone for karaoke, you can adjust settings via the "M" menu button (8). When making your adjustments, refer to the LED front panel:

Adjusting microphone volume:

Increase volume: ⏭ Decrease volume: ⏪

LED panel code: **Ⓜ**

Adjusting microphone echo volume:

Increase volume: ⏭ Decrease volume: ⏪

LED panel code: **Ⓜ**

Adjusting mic sound effect (choice of 3):

Cycle to next: ⏭ Cycle to previous: ⏪

LED panel code: **Ⓜ**

Pairing with a second Party Pro XXL

1. Turn on both speakers and set to BT mode using the Input button (7). (⏮ on display screen)
2. Choose a speaker & long press the "⏭" button for 3 seconds, the display screen will say **HOST** when the speakers are successfully paired.
3. Connect your BT device to the host speaker & play your music – it should now play through both speakers simultaneously.
4. To unpair the speakers, long press the "⏭" button for 3 seconds on the host speaker.
Note: A maximum of two Party ProXXL speakers can be connected at one time in this mode.

Troubleshooting

Karaoke doesn't work

1. Ensure the microphone is plugged properly into the socket
 2. Make sure the microphone switch is turned on
 3. Adjust the microphone volume knob to correct level
- ### Failed connection
1. Make sure the speaker is fully charged.
 2. Make sure the speaker is in Bluetooth® mode.
 3. Make sure your Bluetooth® device is available for connection.
 4. Make sure the speaker is in range (10m) of your Bluetooth® device.

Note: If your device isn't paired to your speaker within 3 minutes, turn the speaker off & on again (ensure Bluetooth® mode is re-activated).

Device successfully paired, but no audio

Make sure the Bluetooth® device's volume is set to a reasonable listening level.

Device is connected with AUX cable, but no audio

1. Make sure the AUX cable is correctly plugged in to the speaker and the device.
2. Make sure the device's volume is set to a reasonable listening level.

SD Card or USB stick is plugged in, but no audio

Make sure the card or stick is correctly plugged in to the speaker.

Music quality low

1. Ensure there are not any solid obstacles between the device and speaker.
2. View the distance between the device and the speaker has not exceeded effective Bluetooth® connection range of 8-12 metres.
3. Check the playback device or whether the speaker is in a low power state.

Safety Warnings

This product is designed with full attention for safety performance. To ensure safe operation, please follow the following rules:

1. Place the speaker in a stable position to avoid fall and cause damage or personal injury.
2. Do not drop, disassemble, open, crush, bend, puncture, or burn the speaker.
3. Do not keep close to any heat source (such as radiators, heating tools, stoves or other heat generating sources)
4. Please send professional maintenance staff to repair for any damage related reasons.
5. Before wiping with a dry cloth to clean the speaker, ensure the speaker is turned fully off and is not connected to a power outlet.
6. Health considerations, please adjust the sound to a suitable level to avoid damage to hearing.
7. Only charge with devices rated and marked with 5V to avoid damage to the speaker.
8. To keep the warranty valid, never try to repair the product yourself.
9. Beware of rough handling as this can break the internal circuit boards and the mechanics.
10. Dispose of this product safely.
11. All juice products are tested comprehensively to ensure quality.
12. Children should be supervised to ensure that they do not play with this product.

Legal Liability

Juice® speakers can only be used with compatible products. Please read your devices instructions to determine whether this product matches your devices requirements. The manufacturer will not be liable for any damage to your electronic equipment during the use of this product. Juice will not be held responsible for any equipment or accessories not suitable for use with this speaker. The manufacturer will not be held liable for damage caused by misuse or damage incurred by the buyer or the third party rising from any intentional or unintentional use of this product.

1-YEAR WARRANTY

Register your product at juice.co.uk to activate your free 1-year warranty.

Caution: If the batch code is removed from the product, the warranty will be void.

Designed in the UK. Ethically made in China. Please retain packaging & instructions for future reference. Design & specification may be subject to change without prior notice. Juice® PartyPro is part of the Juice® brand.

WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.

customerservices@juice.co.uk
Unit 10 Haslemere Way, OX16 5RW, UK
Juice®

Box 133, 3 Lombard Street East,
Dublin 2, D02 H78, Ireland
Helpline number: +35315256712

