


# juicepartypro



## Package Contents

- Juice®PartyPro portable Bluetooth® speaker
- Micro USB to USB-A cable
- Instruction booklet

## Overview

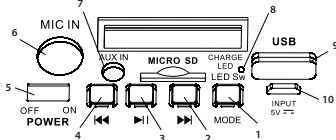

## Functionality

- 1. Mode Button:** Short press to choose input signal, long press to turn light on/off
- 2. Next Track:** Short press to skip to the next track, long press to increase volume
- 3. Play/Pause:** Short press to play/pause on USB/Micro SD mode, long press for speaker pairing mode
- 4. Previous Track:** Short press to revert to the previous track, long press to decrease volume
- 5. On/Off Button**
- 6. 6.5mm Microphone input jack**
- 7. 3.5mm AUX input jack**
- 8. Charge LED indicator**
- 9. USB/Micro SD slot**
- 10. DC/5V input**

## Specifications

Model No.	Juice®PartyPro	Output Power	10Wx2
Power Capacity	2,400mAh	Input Voltage	DC5V/1A
Playback Time	Up to 9 hours BT (at 50% volume)	Operating Distance	Up to 33ft (10m)
Water Res.	IPX5 Rating	Charge Time	4 hrs
Dimensions	307 x 142 x 143mm	Net Weight	1.63kg
Bluetooth® Version	Bluetooth® 5.0		

## How to charge your Juice®PartyPro

1. Connect the micro USB connector from the cable to the **Juice®PartyPro**.
2. Plug the USB connector to a USB compatible wall charger. A red LED light will appear to indicate charging.
3. The LED light will turn off once the **Juice®PartyPro** is fully charged.
4. It is recommended that you charge for 10 minutes before use if you haven't used it in over a week.

Note: A full charge takes approximately 4 hours. The charge will last up to 9 hours when connected wirelessly.

## Playing audio from your Bluetooth® device

1. Short Press the mode button on the front of the speaker.
2. Go into the Bluetooth® settings on your music source and search for Bluetooth® devices.
3. Connect to "Juice Party Pro". Once connected simply play your music.
4. To skip to the next track, press the '▶' button once. To revert to the previous track, press the '◀' button once.
5. Press the play/pause button to pause or play your music.

Note: For Android devices, the maximum volume attainable through the PartyPro's '◀' & '▶' buttons is dictated by the volume controls on your device. Ensure your device is at full volume if you want your Party Pro at its maximum volume.

## Playing audio from your wired device

Power the speaker on, lift the silicone cap on the front of the speaker and connect a 3.5mm audio cable to the AUX IN port. Connect the other end of your audio cable to your device and play.

## Playing audio from your Micro SD card or USB stick

Power the speaker on, lift the cap on the top of the speaker and plug your card into the TF/Micro SD card slot or stick into the USB-A port. Select the correct mode with the mode button and the music will play.

## Pairing with a second Party Pro

1. Turn on both speakers and set to BT mode.
2. Choose a speaker & long press the "▶" button for 3 seconds, a chime will sound to indicate your speakers have paired successfully – the speaker you chose is now the lead speaker.

3. Connect your BT device to the lead speaker & play your music – it should now play through both speakers simultaneously.
4. To unpair the speakers, long press the "▶" button for 3 seconds on the lead speaker.

Note: A maximum of two Party Pro speakers can be connected at one time in this mode.

## Troubleshooting

### Karaoke doesn't work

1. Ensure the microphone is plugged properly into the socket
2. Make sure the microphone switch is turned on
3. Adjust the microphone volume knob to correct level

### Failed connection

1. Make sure the speaker is fully charged.
2. Make sure the speaker is in Bluetooth® mode.
3. Make sure your Bluetooth® device is available for connection.
4. Make sure the speaker is in range (10m) of your Bluetooth® device.

Note: If your device isn't paired to your speaker within 3 minutes, turn the speaker off & on again (ensure Bluetooth® mode is re-activated).

### Device successfully paired, but no audio

Make sure the Bluetooth® device's volume is set to a reasonable listening level.

### Device is connected with AUX cable, but no audio

1. Make sure the AUX cable is correctly plugged in to the speaker and the device.
2. Make sure the device's volume is set to a reasonable listening level.

### SD Card or USB stick is plugged in, but no audio

Make sure the card or stick is correctly plugged in to the speaker.

### Music quality low

1. Ensure there are not any solid obstacles between the device and speaker.
2. View the distance between the device and the speaker has not exceeded effective Bluetooth® connection range of 8-12 metres.
3. Check the playback device or whether the speaker is in a low power state.

## Safety Warnings

This product is designed with full attention for safety performance. To ensure safe operation, please follow the following rules:

1. Place the speaker in a stable position to avoid

- fall and cause damage or personal injury.
2. Do not drop, disassemble, open, crush, bend, puncture, or burn the speaker.
3. Do not keep close to any heat source (such as radiators, heating tools, stoves or other heat generating sources)
4. Please send professional maintenance staff to repair for any damage related reasons.
5. Before wiping with a dry cloth to clean the speaker, ensure the speaker is turned fully off and is not connected to a power outlet.
6. Health considerations, please adjust the sound to a suitable level to avoid damage to hearing.
7. Only charge with devices rated and marked with 5V to avoid damage to the speaker.
8. To keep the warranty valid, never try to repair the product yourself.
9. Beware of rough handling as this can break the internal circuit boards and the mechanics.
10. Dispose of this product safely.
11. All Juice products are tested comprehensively to ensure quality.
12. Children should be supervised to ensure that they do not play with this product.

## Legal Liability

**Juice® speakers** can only be used with compatible products. Please read your devices instructions to determine whether this product matches your devices requirements. The manufacturer will not be liable for any damage to your electronic equipment during the use of this product. Juice will not be held responsible for any equipment or accessories not suitable for use with this speaker. The manufacturer will not be held liable for damage caused by misuse or damage incurred by the buyer or the third party rising from any intentional or unintentional use of this product.

## 1-YEAR WARRANTY

Register your product at [juice.co.uk](http://juice.co.uk) to activate your free 1-year warranty.  
Caution: If the batch code is removed from the product, the warranty will be void.

**juice.co.uk**

Designed in the UK. Ethically made in China. Please retain packaging & instructions for future reference. Design & specification may be subject to change without prior notice. Juice®PartyPro is part of the ©Juice® brand.

WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.

customerservices@juice.co.uk  
Unit 10 Haslemere Way, OX16 5RW, UK  
Juice®

Box 133, 3 Lombard Street East,  
Dublin 2, D02 HC78, Ireland  
Helpline number: +35315256712

