


WIRELESS SPEAKER

Package Contents

- · Juice®Punk 5W wireless speaker
- USB Type-C to USB-A cable
- Instruction booklet

Overview

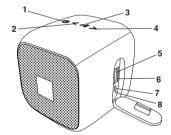

Functionality

- 1. Power button
- Multi-function buttons: Press & hold to decrease volume, press once to revert to previous song
- 3. Play/pause button
- Multi-function buttons: Press & hold to increase volume, press once to skip song
- 5. Memory stick slot
- 6. TF/Micro SD card slot
- 7. USB Type-C charging port
- 8. Indicator light

LED Indicators

	Indicator	Status
*	RED	Charging
	LED OFF	Fully Charged
вт	Flashing Blue	Pairing Mode
	Blue	Connected
	Slow Blue Flash	Music Playing

How to charge your Juice®Punk

- 1. Connect the USB Type-C connector from the cable to the **Juice®Punk**.
- Plug the USB connector to a USB compatible wall charger with 1A current output (DC5V, 400mA). A red LED light will appear to indicate charging.
- The LED light will turn off once the Juice®Punk is fully charged.
- It is recommended that you charge for 10 minutes before use if you haven't used it in over a week.

Note: A full charge takes approximately 2-3 hours. The charge will last up to 8 hours.

Playing audio from your Bluetooth® device

- 1. Press the Mode button once to enter BT mode.
- 2. Go into the Bluetooth® settings on your music source and search for Bluetooth® devices.
- Connect to "Juice Punk". Once connected simply play your music.
- 4. To skip to the next track, press the '>' button once. To revert to the previous track, press the '<' button once.</p>
- 5. To increase volume, hold the '>' button for more than 3 seconds. To decrease volume, hold the '<' for more than 3 seconds.</p>
- Press the play/pause button to pause or play your music.

Note: For Android devices, the maximum volume attainable through the Punk's "-" & "c' buttons is dictated by the volume controls on your device. Ensure your device is at full volume if you want your Note at its maximum volume.

Specifications

Model No.	Juice® Punk	Output Power	5W	
Power Capacity	400mAh	Input Voltage	DC5V/1A	
Playback Time	8 hours	Operating Distance	Up to 33ft (10m)	
Water Res.	IPX5 Rating	Charge Time	2-3hrs	
Dimensions	80 x 80 x 82 mm	Net Weight	293 g	
Bluetooth® Version		Bluetooth® 5.0		

Troubleshooting

Failed connection

- 1. Make sure the speaker is fully charged.
- 2. Make sure the speaker is in Bluetooth® mode.
- Make sure your Bluetooth® device is available for connection.
- Make sure the speaker is in range (10m) of your Bluetooth® device.

Note: If your device isn't paired to your speaker within 3 minutes, turn the speaker off & on again (ensure Bluetooth® pairing is re-activated).

Device successfully paired, but no audio Make sure the Bluetooth® device's volume is set to a reasonable listening level.

Music quality low

- Ensure there are not any solid obstacles between the device and speaker.
- View the distance between the device and the speaker has not exceeded effective wireless connection range of 8-12 metres.
- Check the playback device or whether the speaker is in a low power state.

Pairing Juice®Punk with TWS

- Turn on both speakers.
- Double press the Play/Pause button on one of the speakers and wait for the speakers to connect this will be indicated by a "beep"
 Go into the Bluetooth® settings on your music source and connect to "Juice Punk". The two speakers are now combined under one name 4. To unpair the speakers, double press the play/pause button on either speaker until you hear the "beep"

Safety Warnings

This product is designed with full attention for safety performance. To ensure safe operation, please follow the following rules:

- Place the speaker in a stable position to avoid fall and cause damage or personal injury.
- **2.** Do not drop, disassemble, open, crush, bend, puncture, or burn the speaker.
- Do not keep close to any heat source (such as radiators, heating tools, stoves or other heat generating sources)
- Please send professional maintenance staff to repair for any damage related reasons.
- Before wiping with a dry cloth to clean the speaker, ensure the speaker is turned fully off and is not connected to a power outlet.

- Health considerations, please adjust the sound to a suitable level to avoid damage to hearing.
- Only charge with devices rated and marked with 5V to avoid damage to the speaker.
- To keep the warranty valid, never try to repair the product yourself.
- Beware of rough handling as this can break the internal circuit boards and the mechanics.
- 10. Dispose of this product safely.
- **11.** All juice oriducts are tested comprehensively to ensure quality.
- 12. Children should be supervised to ensure that they do not play with this product.

Legal Liability

Juice® Speakers can only be used with compatible products. Please read your devices instructions to determine whether this product matches your devices requirements. The manufacturer will not be liable for any damage to your electronic equipment during the use of this product. Juice will not be held responsible for any equipment or accessories not suitable for use with this speaker. The manufacturer will not be held liable for damage caused by misuse or damage incurred by the buyer or the third party rising from any intentional or unintentional use of this product.



MADE 100% RECYCLED FROM 100% PLASTICS

35% of the material on this product is made from recycled post consumer waste plastic.

Designed in the UK. Ethically made in China. Please retain packaging & instructions for future reference. Design & specification may be subject to change without prior notice. Juice@Punk is part of the @Juice@ brand.



customerservices@juice.co.uk, Juice*. 10 Haslemere Way. OX16 5RW. UK

Box 133, 3 Lombard Street East, Dublin 2, D02 HC78, Ireland Helpline number: +35315256712



WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE, PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.