 



Hearing is Believing®

Start Here

The following items are included:



 Product Overview

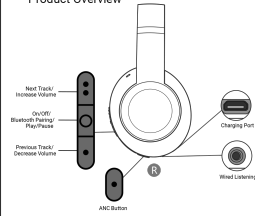

Status Indicator

Function	LED status	Voice prompts
Power on	Illuminates white for 2 seconds	Power on
Power off	Illuminates red for 2 seconds	Power off
Standby	Flashes white once every 5 seconds	n/a
Pairing	Flashes red and white alternately	Pairing
Battery low	n/a	Battery level low
Charging	Stays red while charging Stays white while fully charged	n/a

Tip: When the distance between the headphones and device is beyond effective range, headphones disconnect with device. Headphones will power off automatically once not active for 10 minutes.

Pairing

Pair One Device

Note: When the headphones and device have been paired once, they will automatically connect when the headphones are on and Bluetooth is activated on the device.

1. Make sure that the headphones are turned off and are within 1 meter of your device, then press and hold the Multifunction button until the LED indicator flashes red and white alternately (about 5 seconds), then release Multifunction button.
2. Activate Bluetooth on your device.
3. On your device, open Settings.
4. Select Bluetooth. If Bluetooth is off, turn it on. The device will search for new devices automatically.
5. Select "KOSS BT7400Z" from the device menu.

Pair Another Device

Multipoint technology enables you to pair another device and take a call from either.

To pair a second device, follow the "Pair one device" instructions again. When the headphones are restarted, they will pair with both devices.

Call switching

When the first phone receives a call, press the Multifunction button once to answer it. If the second device receives a call, you can answer the second call by double clicking the Multifunction button, which places the first call on hold.



Call

Answer a call
Press the Multifunction button once.

Reject a call
Press and hold the Multifunction button for 2 seconds.

End a call
Press the Multifunction button once.

End current call and answer new call
When a new call rings during a call, press the Multifunction button once to answer the new call and end the current call simultaneously.

Place current call on hold and answer new call
When a new call rings during a call, double press the Multifunction button to answer the new call and place the current call on hold.

Reject the new call on hold the current call
If new call comes in during active calling press the Multifunction button for 2 seconds to reject the new call and keep the active call.

Switch between the headphones and device

Press the Multifunction button for about 2 seconds during a call to switch to the mobile phone. Re-do this operation to switch back to the headphones.

Calling with voice assistant (Device support needed)
In standby mode, double press the Multifunction button, wait for device prompt, and tell the device to dial the name of a stored contact.

Music

Music Play/Pause

Press Multifunction button once to play / pause music. (Some devices may require you to start a media player first)

Next Track/Previous Track

Long press the volume + for 2 seconds once to skip Next Track, Long press Volume - for 2 seconds once to skip Previous Track.

Volume Up/Volume Down

Short press the Volume + to incrementally increase the volume. Short press the Volume - to incrementally decrease the volume.


Note: Media player is needed to support this functionality.

Basic Operation

Charging

It takes 2.5 hours to fully charge headphones. The red indicator light is always on during charging. The red light will go out immediately after unplugging the charging cable. When fully charged, the red light goes out and the white light stays on.

Note: The lifetime of the battery will be significantly reduced if your headphones are left uncharged for a long period of time. We recommend that you recharge your headphones at least once a month.

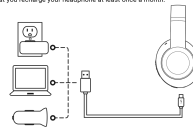

Active Noise Cancellation (ANC)

When powered on and/or connected to device via audio cable

ANC LOW: Long press ANC button for 2 seconds

ANC HIGH: Long press ANC button again for 2 seconds

ANC OFF: Long press ANC button again for 2 seconds

Ambient Sound

When ANC is ON

AMBIENT SOUND ON: Short press the ANC button

AMBIENT SOUND OFF: Short press the ANC button again

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates electromagnetic energy and, if not installed and used in accordance with the instructions, may cause harmful interference with other radio communications. However, there is no installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
The device has been evaluated to meet general RF exposure statements.
The device can be used in portable exposure condition without restriction.

Safety and Care

Using earphone at high to moderate volumes for extended periods of time will result in permanent hearing damage. It is advised that you keep volume levels moderate to low at all times for your safety.
Do not use while driving a car, cycling, operating machinery, or performing other activities that require you to hear surrounding sounds.

Do not use headphones during a thunderstorm; the headphones may not work properly under those conditions, and may increase the risk of being hit by lightning.

Headphones may not work properly in high temperatures or high humidity conditions.

Do not use any corrosive cleaner/oil to clean the headphones.

If the headphones come in contact with liquid, quickly wipe away. If submerged in water, do not turn the headphones on until completely dry. Tip: Submersion in liquid voids the warranty.

Keep the headphones and packaging out of reach of children.