



**LUXBURG**  
**User Manual**



## **Manual Screens**

**Website:** [www.luxburgvisual.com](http://www.luxburgvisual.com)  
**Email:** [support@luxburgvisual.com](mailto:support@luxburgvisual.com)  
**Tel:** 0044 207 237 4842

# Table of Contents

SAFETY INFORMATION.....	3
IMPORTANT SAFETY INSTRUCTION .....	3
SETTING UP THE SCREEN .....	4
POSITIONING THE SCREEN.....	4
USING THE SCREEN .....	5
Operating Instructions .....	5
ADDITIONAL INFORMATION .....	6
Cleaning the screen.....	6
WARRANTY AND COPYRIGHT INFORMATION.....	6
Warranty .....	6
Copyright.....	6

## **SAFETY INFORMATION**

	Do not attempt to disassemble any part; this could lead to a shocking hazard
	This product is extremely flammable

## **IMPORTANT SAFETY INSTRUCTION**

1. Follow all installation instructions. Failing to do so, may lead to serious consequences.
2. Screens must be installed in accordance with the instructions.
3. Ensure that the screen is mounted securely.
4. Operate within specified temperature and humidity range
5. Do not operate screen before it is installed on wall.
6. Provide proper adult supervision when using the screen around children.
7. We strongly suggest that this item should be fitted by a professional, we will not be held responsible for any loss, incidental or consequential damage.

## SETTING UP THE SCREEN


1. Carefully unpack the screen.
2. Always handle the screen in a levelled position on a clean surface.
3. In order to protect the screen from exposure to stains, keep the screen out of contact with foreign objects such as dust, saw dust, and/or liquids
4. According to venue and projecting requirements, fix up the wall shelf securely. (Note that the two wall shelves must at the same level, otherwise screen surface will decline to one side)
5. Hang the screen on the wall shelf, ensuring that the screen bracket is uppermost by lifting the bracket and hang it onto the upper wall

## POSITIONING THE SCREEN

It is advised that you position the screen where there isn't any direct light. The more light that hits the screen, the more blurry the image will look. You are advised to mark out the screen placement on the wall for ease of positioning. Manual screen can be installed on the wall, also can be installed on the ceiling.


### Wall mounted

There is a key ring on the bracket at both ends of the screen, when you need to hang projection screen on the wall, you should hammer down nails or install screws at the corresponding position on the wall first, then hang up the screen.

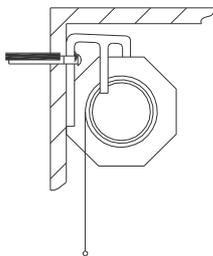

## Ceiling style:

When you need to hang projection screen on the ceiling, you should install two pieces of pothooks at the corresponding position on the ceiling first, then latch on hanging jack which is on the end cap of projection screen.

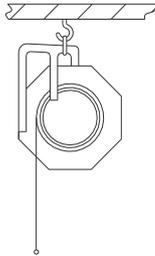

**Note:** no matter what kind of method of installation, have to make the enough place to draw back the screen, after you used the screen please close the screen after you used the screen , please check the fabric of screen , whether it have dust and dirt. If it has this, please clean by the soft brush.

## USING THE SCREEN

### Operating Instructions

**1. Open screen:** Our screens have self-lock equipment, opening the screen pull down the screen slowly, stop on the every station unlash your hand, the screen will shrink upwards, then screen self-lock the station what you choice.

**2. Close screen:** When you close the screen, pull down the screen slowly, self-lock equipment will auto-diaplasies. Draught the hand ring, unlash hand after the screen closed on the housing totally.( note: pull heavily , the screen will pull overly , when you pull down the screen please note the strength of pull , generally when you look the back border is enough.

Metal housing, ingenious appearance, advanced self-lock equipment. Apply to all kind of installation places. etc.: house cinema, recreation ground, teaching meeting etc.

## ADDITIONAL INFORMATION

### Cleaning the screen

If you want to get the most use of the projector screen, you must clean it on a regular basis. It is important that you clean the screen the right way.

Depending on the fabric, different instructions may apply.

Try to avoid touching the screen with your hands

### Matt and fibre Glass Fabrics

With a soft clean rag, slightly dust off your projector screen. It is recommended to follow this process every one to three days.

### Glass Bead Fabric

We advise that you clean the screen on a daily basis.

Unfortunately you cannot use any cleaning solutions to clean glass bead screens as these will damage the surface. We recommend that you use a dry cloth to clean the screen.

**Note:** It is strongly recommended not to use any detergents, abrasives or solvents as many of these chemical solutions can fade your screen

## WARRANTY AND COPYRIGHT INFORMATION

### Warranty

All items come with a **1 year warranty** covering manufacturing defects only. This warranty excludes any damage caused by the user. If your item develops a fault due to a manufacturing defect during this period please contact us.

Please note that proof of purchase will be required for any claims made.

### Copyright

Copyright © Luxburg Visual, all right reserved. This document must not be reproduced or distributed.