




MOCCAMASTER

HANDMADE

Repairing your Automatic Drip-Stop Brew Basket: A Step-by-Step Guide

1. Turn your brew basket upside down.
2. Push gently on the prongs on either side of the **arm with the rubber stopper** to release and remove the arm.
3. Remove the **spring** sitting underneath the **arm with the rubber stopper**. The **spring** will be sitting on top of a small, raised circle.
4. Place your new **spring** back on top of the raised circle.
5. Place the **arm with the rubber stopper**, pointed side up, back on top of the **spring**.
6. Gently but firmly snap the **arm with the rubber stopper** back into the prongs.

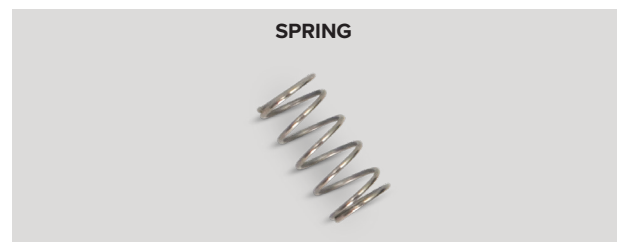

To watch a video of this repair process, visit our Help Center at support.moccamaster.com and search for **brew basket repair**. Begin watching at 3:36 for Automatic Drip-Stop Brew Basket repair instructions.

Contact our Consumer Support Team at support@moccamaster.com, or call us toll-free at 855.662.2200.