


- 1. Adjustable Foam Cannon
- 2. Pressure Washer Quick Connect Adaptor (wrap with plumbers' tape and screw into Foam Cannon).
- 3. Threaded Cap (Screw Foam Cannon into threaded cap).
- 4. Tubing (Attach tubing to Foam Cannon)
- 5. 800 ml LXR Container

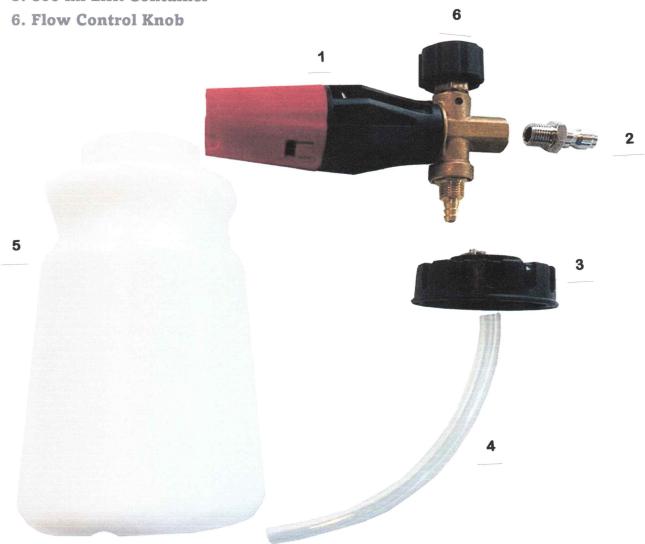

- A. Assemble Foam Cannon and attach to pressure washer wand on washers up to 5000 psi.
- B. The Foam Cannon has a Variable Flow control knob (6) for mixing the LXR or rinsing with plain water as well as an Adjustable Spray Nozzle (1) for pattern control.
- C. Fully open the Flow Control Knob (6) all the way to "+" plus direction for rinsing. Fully close the knob to the "-"minus direction for LXR foam application.
- D. Add 4 oz. of LXR concentrate to the container. Rinse vehicle. Apply LXR foam. Wash with pole brush or sponge. Rinse well. LXR CLEANS, RENEWS, PROTECTS AND SHINES!