 




On the Move Essentials

Power Bank Battery

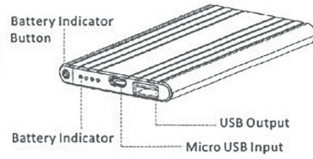

Micro USB Port (Input) Self-charging

 
USB Port (Output) DC 5V/1A for charging digital devices

Battery Indicators 4 LED indicators to show battery status

Battery Indicator Button Press to check the battery level


Charging Power Bank

The blue light will start flickering when connected. It will stop flickering after a few seconds and continue to charge. All the indicators will turn blue after fully charged. Please remove the adapter safely after power bank is fully charged.

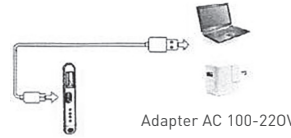


Charging Digital Devices

 Once the power bank is connected to the digital device, the device will begin charging.

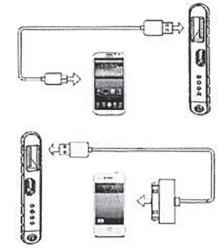

On the Move Essentials

 Power Bank Battery

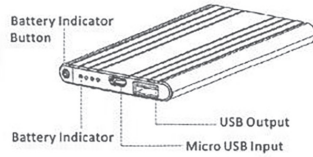

Micro USB Port (Input) Self-charging

 
USB Port (Output) DC 5V/1A for charging digital devices

Battery Indicators 4 LED indicators to show battery status

Battery Indicator Button Press to check the battery level


Charging Power Bank

The blue light will start flickering when connected. It will stop flickering after a few seconds and continue to charge. All the indicators will turn blue after fully charged. Please remove the adapter safely after power bank is fully charged.

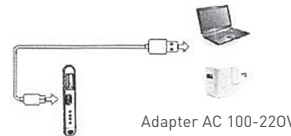


Charging Digital Devices

 Once the power bank is connected to the digital device, the device will begin charging.

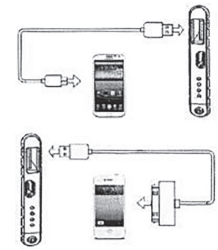

On the Move Essentials

 Power Bank Battery

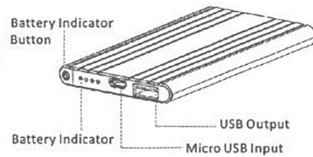

Micro USB Port (Input) Self-charging

 
USB Port (Output) DC 5V/1A for charging digital devices

Battery Indicators 4 LED indicators to show battery status

Battery Indicator Button Press to check the battery level


Charging Power Bank

The blue light will start flickering when connected. It will stop flickering after a few seconds and continue to charge. All the indicators will turn blue after fully charged. Please remove the adapter safely after power bank is fully charged.

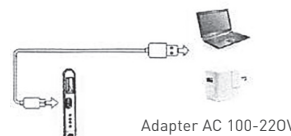

Charging Digital Devices

 Once the power bank is connected to the digital device, the device will begin charging.

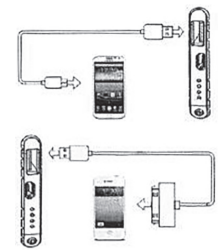

Power Bank Specifications

Model	P30
Input	DC 5V/1A
Output	DC 5V/1A
Capacity	3000 mAh
Dimensions	105.0mm x 58.0mm x 8.50mm
Weight	73g

- Comes with micro USB charging cable
- 1 Year Limited Warranty

Product	Product's Battery	% Charge before recharge needed
Samsung Galaxy S3	2100 mAh	143%
Samsung Galaxy S4	2600 mAh	115%
Samsung Galaxy S5	2800 mAh	107%
Samsung Note 4	3220 mAh	93%
iPhone 4/4s	1430 mAh	210%
iPhone 5/5s	~1500 mAh	~200%
iPhone 5c	1507 mAh	199%
iPhone 6	1810 mAh	166%
iPhone 6 Plus	2915 mAh	103%
iPad Air	8827 mAh	34%
iPad Air 2	7340 mAh	41%
iPad 4	11560 mAh	26%

*Please note that battery capacities are estimated. Check the manufacturer's user manual for your exact product specs.

Remember

- Please use the USB power adapter of the cell phone or other digital device to charge the power bank. We recommend an adapter with at least 5V/1A. You can also use your computer USB port.
- Make sure the input voltage of your digital products fits the output voltage of the power bank.
- Please make sure to remove the adapter after the power bank is fully charged.
- Do not drop, disassemble, crush, bend, deform, puncture, shred, microwave, paint or insert foreign objects into this power bank.
- Do not put this product into liquids, fires, or a high temperature environment.
- Power adapters with less amps will charge battery more slowly.

Thank you for choosing



Like us!
facebook.com/
OTMEssentials

Follow us at
@OTMEssentials

Visit our Etsy Shop
OnTheMoveEssentials

Power Bank Specifications

Model	P30
Input	DC 5V/1A
Output	DC 5V/1A
Capacity	3000 mAh
Dimensions	105.0mm x 58.0mm x 8.50mm
Weight	73g

- Comes with micro USB charging cable
- 1 Year Limited Warranty

Product	Product's Battery	% Charge before recharge needed
Samsung Galaxy S3	2100 mAh	143%
Samsung Galaxy S4	2600 mAh	115%
Samsung Galaxy S5	2800 mAh	107%
Samsung Note 4	3220 mAh	93%
iPhone 4/4s	1430 mAh	210%
iPhone 5/5s	~1500 mAh	~200%
iPhone 5c	1507 mAh	199%
iPhone 6	1810 mAh	166%
iPhone 6 Plus	2915 mAh	103%
iPad Air	8827 mAh	34%
iPad Air 2	7340 mAh	41%
iPad 4	11560 mAh	26%

*Please note that battery capacities are estimated. Check the manufacturer's user manual for your exact product specs.

Remember

- Please use the USB power adapter of the cell phone or other digital device to charge the power bank. We recommend an adapter with at least 5V/1A. You can also use your computer USB port.
- Make sure the input voltage of your digital products fits the output voltage of the power bank.
- Please make sure to remove the adapter after the power bank is fully charged.
- Do not drop, disassemble, crush, bend, deform, puncture, shred, microwave, paint or insert foreign objects into this power bank.
- Do not put this product into liquids, fires, or a high temperature environment.
- Power adapters with less amps will charge battery more slowly.

Thank you for choosing



Like us!
facebook.com/
OTMEssentials

Follow us at
@OTMEssentials

Visit our Etsy Shop
OnTheMoveEssentials

Power Bank Specifications

Model	P30
Input	DC 5V/1A
Output	DC 5V/1A
Capacity	3000 mAh
Dimensions	105.0mm x 58.0mm x 8.50mm
Weight	73g

- Comes with micro USB charging cable
- 1 Year Limited Warranty

Product	Product's Battery	% Charge before recharge needed
Samsung Galaxy S3	2100 mAh	143%
Samsung Galaxy S4	2600 mAh	115%
Samsung Galaxy S5	2800 mAh	107%
Samsung Note 4	3220 mAh	93%
iPhone 4/4s	1430 mAh	210%
iPhone 5/5s	~1500 mAh	~200%
iPhone 5c	1507 mAh	199%
iPhone 6	1810 mAh	166%
iPhone 6 Plus	2915 mAh	103%
iPad Air	8827 mAh	34%
iPad Air 2	7340 mAh	41%
iPad 4	11560 mAh	26%

*Please note that battery capacities are estimated. Check the manufacturer's user manual for your exact product specs.

Remember

- Please use the USB power adapter of the cell phone or other digital device to charge the power bank. We recommend an adapter with at least 5V/1A. You can also use your computer USB port.
- Make sure the input voltage of your digital products fits the output voltage of the power bank.
- Please make sure to remove the adapter after the power bank is fully charged.
- Do not drop, disassemble, crush, bend, deform, puncture, shred, microwave, paint or insert foreign objects into this power bank.
- Do not put this product into liquids, fires, or a high temperature environment.
- Power adapters with less amps will charge battery more slowly.

Thank you for choosing



Like us!
facebook.com/
OTMEssentials

Follow us at
@OTMEssentials

Visit our Etsy Shop
OnTheMoveEssentials