

**Belmint**  
PRESS ESCAPE™



**COZY FOOT  
MASSAGER**  
with Optional Heat



**COZY FOOT  
MASSAGER**  
with Optional Heat



▶ **COZY FOOT  
MASAGER**  
with Optional Heat  
User Guide

Model  
BEL-CFM

Voltage  
110 - 240 VAC

Rated Output  
2.5 A

**Congrats on your purchase!**

**You're on your way to have an Awesome Experience**

Enjoy a relaxing foot massage while sitting in comfort thanks to the warming foot cover. Soothe and relax tired and aching feet with shiatsu-like kneading that mimics a professional's hands. With the added heat function, you can enjoy the benefits of improved blood and oxygen circulation with your massage.

The removable warming foot cover makes clean-up and maintenance a breeze! Not only that, but removing the foot cover is an innovative design that allows your foot massager to transform into a back massager. Whether it's for your home or for your office, the Belmint Cozy Foot Massager is a must-have.

All Belmint products are designed by Belmint engineers and created with high-grade and durable materials to ensure only high-quality results. So, sit back while you enjoy a foot or back massage. Belmint has you covered.

To celebrating your comfort,  
**The Belmint Team**



**COZY FOOT  
MASSAGER**  
with Optional Heat



► **Sometimes peace is hard to find**  
**But good service shouldn't be**

At Belmint, we strive to provide our customers with the ultimate self-care experience. If you encounter any issues with the performance of your device, our authorized service personnel are here to help.



Contact us at:

**1-844-423-5646**

For seamless service,  
please have the following information at hand when you call:

**Model Name**  
BEL-CFM

**Date Purchased**

**Purchase Location**

**Belmint**  
PRESS ESCAPE™



**Belmint**  
PRESS ESCAPE™

### What's in this Box?

- ▶ 1 Cozy Foot Massager
- ▶ 1 Removable Foot Cover
- ▶ 1 Power Cord
- ▶ 1 Controller
- ▶ 1 User Manual

### Product Details

#### Dimensions

7.5 H x 12.5 L x 12.5 W

#### Weight

4 LBS

## ► Parts & Features



### Clockwise Massage Rotation

Press the CLOCKWISE button to set the massage nodes rotation to clockwise.

### Counter-Clockwise Massage Rotation

Press the COUNTER-CLOCKWISE button to set the massage nodes rotation to counter-clockwise.

### ► Versatile

Removing the foot cover allows the massager to transform into a back massager for added benefits.

### ► Switchable Heat

Switchable heat promotes better blood and oxygen circulation to your feet and back for faster soothing relief.

### ► Characteristic Functions

Easy to use  
2 massage rotation settings  
15 minute auto-shut off function



### Before things get awesome...

To prevent potential injury or property damage, please read this entire manual before operating your device. Keep it on file for future reference.

## ▶ GETTING STARTED

### Using your device

#### When using for the Feet

1. Plug the power cord into a secure and compatible outlet.
2. Place both feet into the foot warming cover attached to the massager.
3. Press the POWER button on the controller.
4. If the unit does not turn on, please **email Belmint Customer Service at support@belmint.com or call 1-844-423-5646**
5. Using the controller, choose between clockwise or counter-clockwise for the massage rotation.
6. Press the HEAT button to activate heat therapy.
7. Relax and enjoy!



#### When using for Back

1. Unzip the foot cover and remove from the massager.
2. Plug the power cord into a secure and compatible outlet.
3. Place the massager securely on a chair.
4. Press the POWER button on the controller.
5. If the unit does not turn on, please email Belmint Customer Service at support@belmint.com or call 1-844-423-5646
6. Using the controller, choose between clockwise or counter-clockwise for the massage rotation.
7. Press the HEAT button to activate heat therapy.
8. Relax and enjoy!



## ▶ SAFETY TIPS

### Before using your device

#### WARNING

Keep this and any electrical products out of reach of children. Basic safety precautions should always be observed, including the following

**Danger -** To reduce the risk of Electrical Shock

**ALWAYS** unplug the appliance from the electrical outlet immediately after using and before cleaning.

**DO NOT** use the massager while bathing or while in the shower.

**DO NOT** place the massager where it can fall or be pulled into water.

**DO NOT** operated in a wet or moist condition.

**DO NOT** use pins or any metallic fasteners on the massager.

**Danger -** To reduce the risk of Burns, Electrocutation, Fire or Injury

**DO NOT** stand on or put items on top of the massager.

**EMAIL** BelmInt Customer Service at [support@belmint.com](mailto:support@belmint.com) or **CALL 1-844-423-5646** if plug does not fit properly in the outlet. **DO NOT** alter the plug in any way.

**CLOSE** supervision is necessary when massager is in use by, on, or near children, the elderly, disabled and/or ill individuals.

**NOT** for use by children.

**DO NOT** use attachments not provided with the unit.

**USE ONLY** as intended, as described in this User Guide. Using the massager in a manner not described in this User Guide may nullify the warranty.

**NEVER** operate your massager If the cord or plug is damaged. If the unit has been dropped in water or is not working properly, email Belm1nt Customer Service at [support@belm1nt.com](mailto:support@belm1nt.com) or call 845-388-1270.

**NEVER** drop or insert any object into any opening on the massager.

**DO NOT** bring close to radiation or other electrical appliances.

**DO NOT** operate massager where aerosol (spray) products are being used or where oxygen is being administered.

**DO NOT** carry the massager by the power cord or use the power cord as a handle.

**TO DISCONNECT**, turn the massager off and remove the power cord plug from the outlet. **ALWAYS** turn the massager off before moving away from the massager.

**DO NOT** use the massager outdoors.

**DO NOT** use on sensitive skin areas or on body parts with poor circulation.

**DO NOT** use on infants, incapacitated, asleep or unconscious individuals.

**DO NOT** crush. Avoid sharp folds.

**Caution-** For your safety, please read the following prior to using:

This massager is **NOT INTENDED FOR MEDICAL USE.**

**CONSULT** your doctor prior to using if you are pregnant, have a pacemaker, have had recent surgery, suffer from blood clots, or have any other medical condition.

**NOT RECOMMENDED** for use by diabetics.

**NEVER** use the massager directly on swollen body parts, inflamed areas, or skin eruptions.

**DO NOT** use the massager as a substitute for medical attention.

**NEVER** use the massager on an individual suffering from any physical ailment that would limit the user's capacity to operate the controls.

**NEVER** use while driving or operating a vehicle.

**NOT** for use by children or incapacitated individuals without proper adult supervision.



▶ **KEEP THE PEACE**  
**Troubleshooting guide**

Use this guide to help diagnose simple problems with your device.

Please feel free to contact us if you have any questions or concerns.

PROBLEM	CAUSE	SOLUTION
<b>Unit won't start or turn on</b>	Unit may be Unplugged	Check that the unit is plugged into the appropriate outlet or power source.
		Check that the unit is plugged into the adapter. Press the POWER button. You should feel it click.
		If problem persists, please contact Customer Service at 844-423-5646
<b>Unit Stops Working</b>	Unit may be Unplugged	Check that the unit is plugged into the appropriate outlet or power source. Check that the unit is plugged into the adapter.
	You may have accidentally pressed the POWER button and turned the massager OFF.	You may have inadvertently pressed the POWER button for 3 seconds, thus turning it off. Press the POWER button again to see if it turns back on.
	Unit may have automatically shut-off.	Press the power button. The unit may have shut OFF due to auto-shutoff function.

If the problem persists, please turn the POWER OFF and unplug the unit. Email Belmint Customer Service at support@belmint.com or Call 1-844-423-5646. DO NOT attempt to make adjustment to the plug or alter the plug, cord, or massage unit. Doing so will nullify the warranty.



# COZY FOOT MASSAGER

with Optional Heat



**Belmint**  
PRESS ESCAPE™

## ► Put your worries away

### **CLEANING YOUR UNIT**

It is as easy as 1-2-3

- To clean the massager, use a soft, slightly damp sponge or cloth. DO NOT allow water or any liquid to come in contact with the unit.
- DO NOT use any chemicals or harsh abrasives such as cleaners, brushes, gasoline, kerosene, glass/furniture polish or paint thinner to clean.
- GENTLY HAND WASH the removable foot cover using mild detergent.
- AIR DRY the removable foot cover after washing.
- NEVER clean when the unit is on.
- Make sure the massager is turned off and unplugged from the adapter before cleaning.
- Allow the massager to cool down before cleaning.

### **STORING YOUR UNIT**

- Unplug the cord from the power source.
- Place the massager, along with the cord, in its box or in a safe, dry and cool place.
- DO NOT wrap the power cord.
- AVOID contact with sharp edges or pointed objects.