

▼

FOLDING CHAIR MASSAGER

▲

▶ **FOLDING
CHAIR
MASSAGER**



▶ User Guide

 Model	 Voltage	 Power Consumption
BEL-FCM	12V	4.2 A

Congratulations on your purchase!

You are on your way to have an awesome experience

Now, you can enjoy a spa massage experience without leaving your home! Feel the tension in your muscles melt away every time you use the Belmint Folding Chair Massager.

Is there a persistent crick in your neck that you just can't get rid off? Do you feel an uncomfortable pinch in your back? The folding chair massager works on your neck and lumbar area with rollers strategically positioned and set to move to target specific points similar to a shiatsu massage. With additional vibrating and heating features, the massager targets your preference to reduce the tension and pinching sensation of your muscles.

All Belmint products are designed by Belmint engineers and carefully crafted from high-grade quality and durable materials to ensure maximum comfort. Rest assured that our Folding Chair Massager is designed with your relaxation in mind while it targets hard-to-reach areas on your neck and lumbar areas. So, sit back and indulge in the luxurious chair massager while you catch up on your reading list, your movie bucket list, or just to spend a few blissful minutes of rest and relaxation with our Belmint Folding Chair Massager.

To celebrating your comfort,
The Belmint Team

▶ Sometimes peace is hard to find

But good service shouldn't be

At Belmint, we strive to provide our customers with the ultimate self-care experience.

If you encounter any issues with the performance of your device, our authorized service personnel are here to help.



Contact us at:

1-844-423-5646

For seamless service,

Please have the following information at hand when you call.

Model Name

BEL-FCM

Date Purchased

Purchased Location

► What's in the Box?

- 1 Folding Chair Massager
- 1 Remote Controller
- 1 Power Cord
- 1 User Manual

► Product Details

Dimensions

23.6" x 23.2" x 66.3"

Weight

40 LB



► Features

Ergonomic Design For Comfort

The unique design is engineered to ensure maximum comfort with the 12 massage nodes strategically placed against the back's pressure points and designed to mimic a real massage therapist's hands.

Switchable Heat

The switchable heat function promotes an increase in blood and oxygen flow to soothe your muscles.

Versatile Function

The versatile design allow massage nodes to target the neck, shoulders and lumber area with 3 levels of seat vibrating speed . Pairing this setting with the heat function will provide for a more luxurious massage experience.

Characteristic Functions

- Easy to use and operate with user-friendly remote control
- Lightweight and easy to carry and store
- 15 minutes Automatic Shut-off



Before things get awesome

To prevent potential injury or property damage, please read this entire manual before operating your device. Keep it on file for future reference.

► Time to treat yourself

Using your device

1. Place the chair on a stable position on the floor.
2. Adjust the backrest as desired.
3. Connect the adapter end of the plug to the unit outlet.
4. Plug your Belmint Folding Chair Massager into the appropriate outlet. If the plug does not fit, please email Belmint Customer Service at support@belmint.com or call 844-423-5646. Do not alter the plug in any way.
5. Turn the unit ON by pressing the POWER Button.
6. Adjust the massager settings according to desired function by using the remote control.
7. Turn POWER OFF by pressing the POWER.
8. Please do not use the back massager more than 15 minutes at a time.

► Back Zone Settings

(3) Three Warning Adjustable Zone Settings

Full Back
Lower Back
Upper Back

► Vibration Settings

(3) Three Adjustable Speed Levels

LEVEL ONE

The first level is of slow seat vibration speed.

LEVEL TWO

The second level is of medium seat vibration speed.

LEVEL THREE

The third level is of fastest seat vibration speed.



► **Safety Information**

Read instructions before using

Warning

Keep this and any electrical products out of reach of children. Basic safety precautions should always be observed, including the following:

DANGER

To reduce the risk of electrical shock:

ALWAYS unplug the massager from the electrical outlet immediately after using and before cleaning.

DO NOT use the folding chair massager while bathing or while in the shower.

DO NOT place the folding chair massager where it can fall or be pulled into water.

DO NOT operate in a wet or moist condition.

DO NOT use pins or any metallic fasteners on the massager.

To reduce the risk of burns, electrocution, fire or injury:

NEVER leave the massager unattended while plugged in.

DO NOT stand on or put items on top of the massager.

UNPLUG the massager when not in use. EMAIL support@belmint.com or CALL BELMINT Customer Service at 844-423-5646, if plug does not fit properly in the outlet.

DO NOT alter the plug in any way.

CLOSE supervision is necessary when massager is in use by, on, or near children, the elderly, disabled and/or ill individuals.

NOT for use by children.

DO NOT use attachments not provided with the unit.

USE ONLY as intended, as described in this User Guide. If massager is used in a manner not described in this User Guide, it may nullify the Warranty.

NEVER operate your folding chair massager if the cord or plug is damaged. If the unit has been dropped in water or is not working properly, EMAIL BELMINT CUSTOMER SERVICE at support@belmint.com or CALL BELMINT CUSTOMER SERVICE at 844-423-5646.

KEEP the power cord AWAY from heated surface and water.

NEVER drop or insert any object into any opening on the massager.

DO NOT operate the massager under a blanket or pillow.

NEVER cover the folding chair massager while in operation.

DO NOT operate massager where aerosol (spray) products are being used or where oxygen is being administered.

DO NOT carry the massager by the power cord or use the power cord as a handle.

TO DISCONNECT, turn the massager OFF, remove the plug from the outlet

► **Cleaning & Storing**

Cleaning your Belmint folding chair massager

Your relaxation and peace of mind is very important to us. That's why your Belmint Folding Chair Massager is made from high quality durable materials.

Cleaning your unit is as easy as 1-2-3

- To clean the outer shell of your massager, use a soft, slightly damp sponge with a little neutral detergent followed by wiping with a dry cloth.

Do not allow water or any liquid to come in contact with the unit.

- Wipe dust and dirt of the outer shell of your massager with a dry and soft cloth after every use.

- DO NOT use any chemicals or harsh abrasives such as cleaners, brushes, gasoline, kerosene, glass/furniture polish or paint thinner to clean.

- NEVER immerse your folding chair massager or any electrical appliance in water.

- NEVER clean when the massager is on.

- Make sure the massager is turned off and unplugged from the adapter before cleaning.

- Allow the massager to cool down before cleaning.

► **Keep the Peace**

Troubleshooting Guide

Use this guide to help diagnose simple problems with your device.

Please feel free to contact us if you have any questions or concerns.

Condition	Reason	Solution
Unit will not Turn ON	Unit may be unplugged.	Check that the unit is plugged into the appropriate outlet or power source. Check that the unit is plugged into the adapter. Press the POWER button. You should feel it click. If problem persists, please contact Customer Service at 844-423-5646
There is noise during operation	When the massager is in operation, the moving of the rollers may cause some noise.	As this is a part of the product design, hearing some noise during operation is normal and will not adversely affect the effects of the massager. If you think that intensity of the noise is beyond the normal, please contact Customer Service at 844-423-5646.
Unit stops working	Unit may be unplugged.	Check that the unit is plugged into the appropriate outlet or power source. It may have come unplugged. Check that the adapter is plugged into the unit.
	You may have accidentally pressed the POWER button and turned the massager OFF.	You may have inadvertently pressed the POWER button for 3 seconds, thus turning it off. Press the POWER button again to see if it turns back on.
	Unit may have overheated.	Unplug unit from wall and let it cool before using again
	Unit may automatically shut-off.	Press the POWER button. The unit may have shut-off due to the automatic timer.