

NAIL DRYER LIGHT





www.belmint.com



support@belmint.com



1 (844) 423-5646



@belmintproducts



@belmintsproducts

NAIL DRYER LIGHT







Congartulations on your purchase!

Your regular manicure-pedicure session made more comfortable and easier with the **BELMINT** Nail Dryer Light.

What used to be careful drying of your nails after applying polish, is now made faster without the fear of smudging or ruining the applied nail polidh coating. Now, you can sit back and relax as you dry the nails on your hands and feet without all the hassle.

All **BELMINT** products are engineered by Belmint Engineers with high-quality, durable, materials and with your comfort in mind. Experience nail salon-quality mani-pedis in the comfort of your home.

Whether it's for a solo DIY or a group mani-padi session, the **BELMINT** Nail Dryer Light will be a sure hit!

To celebrating your comfort,
The Belmint Team

What's In The Box?




1 Nail Dryer Light

1 Power Cord

1 User's Manual

How To Use

- **1.** Connect the AC adapter to the plug. Connect to the outline.
- 2. Place your hand or foot into the lamp and select yur desired timer options
- 3. The light indicator will keep flickering and the Nail Dryer Light will start. It will automatically shut off when the timer is up.
- **4.**Disconnect the power cord when not in use.

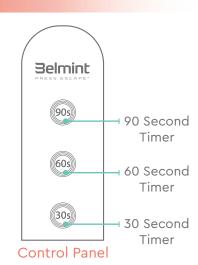



Features & Efficiencies

ERGONOMIC DEIGN FOR COMFORT

The BELMINT Nail Dryer Light is designed for maximum comfort with efficient operation.

PORTABLE

The light's weight ensures that you can bring it anywhere with you. It also lets you store the nail dryer with ease.

CHARACTERISTIC FUNCTIONS

- Activated hand sensor for efficiency.
- Removable bottom atachments when using to dry toenails.
- Light indicator for timers

Use every time you apply polish to your nails for faster and comfortable manicure-pedicure sesions.

Using to dry gel polish will require longer drying periods. Please check the instructions that come with the gel polish.

Cleaning & Storing

To Clean the outer shell, use a soft, slightly damp sponge. Do not allow water or any liquid to come in contact with the unit.

- DO NOT use any harsh chemicals.
- NEVER immerse your unit in water.
- NEVER clean when the unit is on, or plugged in.

Unplug, place unit along with the cord in it's box or in a safe, dry and cool place.

AVOID contact with sharp edges, or pionted objects.

Troubleshooting Guide

CONDITION	REASON	SOLUTION
Nail Dryer won't start or turn ON	Unit may be unplugged.	Check that the unit is plugged into the appropriate outlet or power source.
		Check that the unit is plugged into the adapter.
		Press the POWER Button
Nail Dryer stops working	Unit may be unplugged.	Check that the unit is plugged into the appropriate outlet or power source. It may have unplugged. Check that the adapter
		is plugged into the unit.
	Unit may have overheated.	Unplug the unit from the outlet and let cool before using again.
	Unit may automatically shut off.	Press the POWER button. the unit may have shut off due to the automatic timer.



Warnings

READ ALL INSTRUCTIONS BEFORE USING

DANGER - TO REDUCE THE RISK OF ELECTRICAL SHOCK:

- ALWAYS unplug the unit from the electrical outlet immediately after using and before cleaning.
- DO NOT use the unit while bathing or while in the shower.
- DO NOT place the unit where it can fall or be pulled into water
- DO NOT operate in a wet or moist condition
- DO NOT use pins or any metallic fasteners on the nail dryer light.

DANGER - TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR IMJURY

- NEVER leave the nail dryer light unattended while plugged in.
- DO NOT stand on or put items on top of the nail dryer light.
- UNPLUG when nit in use
- CLOSE supervision is necessary when unit is in use by, on, or near children, the elderly, disabled.
- NOT for use by children.
- DO NOT use attachments not provided with the unit.
- USE ONLY as intended, as described, in this User Guide.
- NEVER operate your unit if the cord or plug is damaged.
- KEEP the power cord AWAY from heated surface and water.
- **NEVER** drop or insert any objects into any opening on the nail dryer light.
- DO NOT bring close to radiation or other electrical appliances.
- DO NOT operate where aerosol (spray) products are being used or where oxygen is being administered.
- DO NOT carry by the power cord or use the power cord as a handle.
- TO DISCONNECT, turn the unit OFF remove the plug from the outlet, and disconnect adapter from the unit.
- ALWAYS turn the unit off before moving away from the unit.
- DO NOT use outdoors.

- DO NOT use on sensitive skin areas or onbody parts.
- MAY CAUSE SERIOUS BURNS. The unattendeuse of UV LED light by children or incapacitated individuals may be dangerous.
- DO NOT use on infants, incapacited, asleep or unconscious individuals.
- DO NOT crush. Avoid sharp folds.





5